C.2331/1	CALINDED BLOCK			
	CYLINDER BLOCK	A.1	1	Fitted from Eng. No. W.1001 to W.2011
C.4820	CYLINDER BLOCK		1	Fitted to Eng. No. W.2012 and subs.
C.317	Plug, Core, on left and right hand sides	A.2	2	
C.317 C.315	Plug, Core, on left and right hand sides	A.3	7	
C.2305	Plug, in front end of Oil Gallery (7 A.N.F.)	A.4	1	
	Plug, in side of Oil Gallery (\frac{1}{2}" A.N.F.)	A.5	6	
C.2352 C.2296/3	Washer, Copper, on Oil Gallery Plugs	A.6	6	
C.2276/3 C.2157	Plug in rear end of Oil Gallery (7 A.N.F.)	A.7	1	
	Washer, Copper, on rear Plug	A.8	1	
C.2296/2	Tap, Water Drain, in left hand side of Block	A.9	1	
C.2354	Washer, Copper, on Water Drain Tap	A.10	1	
C.2296/3	Dowel on rear face of Block			
OD.106/4J	Dowel on front face of Block	A.11	2 2 1	
C.2365	Cover on rear face of Cylinder Block	A.12	1	
C.2258	Dowel, Ring, between Rear Cover and Block	A.13	2	
C.2373	Bolt, Centre, securing Rear Cover to Block	A.14	1	
NB.131/7D	Bolt, Outer, securing Rear Cover to Block	A.15	2	
NB.131/8·5D	Washer, Spring, on Bolts	A.16	3	
FG.105/X	Ring, Sealing, on Rear Cover	A.17	Ĭ	
C.2332	Dowel, Ring, between Sealing Ring and Rear	A.18	2	
C.2394	Cover			
C,2470	Screw, Cap, securing Sealing Ring to Rear Cover	A.19	2	
C.2204	Cap, Bearing, Front		1 1	
C.2200	Cap, Bearing, Centre		1	NOT SERVICED
C.2346	Cap, Bearing, Intermediate		4	NOT SERVICES
C.2202	Cap, Bearing, Rear		1 1	
C.2298	Tube, Drain, in Rear Bearing Cap	A.20	1	
C.2365	Dowel, between Bearing Caps and Block		14	
C.2262	Bolt, securing Bearing Caps		14	
C.2427	Washer, Locking Bolts securing Front Bearing		2	
C.2727	Cap			
C.2425	Washer, Locking Bolts securing Centre, Inter-		12	
O.E 123	mediate and Rear Bearing Caps			
C.2269	Stud, securing Cylinder Head	A.21	13	
C.2270	Stud, Dowel, securing Cylinder Head	A.22	1	
C.5022	Plug, on left hand side of Block, sealing aperture		1	Fitted to Eng. No.
0.3022	for Heater Element			W.3686 and subs.
				Also to certain individual Engines prior to
				this number
C.2461	Liner, Cylinder		6	
C.2353	Union, connecting Oil Feed Pipe to Cylinder Block		1	
C.2296/4	Washer at each side of Union		2	Etc. 1.7. o. For Ma
C.2478	Adapter for Union		_ 1 }	
C.2296/4	Washer under Head of Adapter		_ 1 }	W.1001 to W.1050

C.2239	CRANKSHAFT	A.23	1	Fitted from Eng. No. W.1001 to W.1746
C.2239/1	CRANKSHAFT		1	Fitted from Eng. No. W.1747 to W.2645
C.4808	CRANKSHAFT		1	Fitted to Eng. No. W.2646 and subs.
C.2467 C.544 C.2372	Washer, locking Starter Jaw Piece, Distance, under Locking Washer Jaw, Starter	A.24 A.24A A.25	1 2 1	Fitted from Eng. No. W.1001 to W.4816
C.5896	Bolt, securing Damper		1	Fitted to Eng. No. W.4817 and subs.
C.2468 C.360	Washer, behind Starter Jaw Shim, Packing, behind Washer	A.26 A.27	1 As req	'd.

Part No.	Description.	Plat No		No. pe Unit.	r Remarks.
	CRANKSHAFT (continued)				
C.2466	Cone, Split, between Damper Centre and Crank-shaft	A.28	3	1	
C.2469	Pulley, Fan	A 00			
NB.131/11F C.725	Bolt, securing Fan Pulley to Damper Contra	A.29 A.30		1 4	
C.2465	Washer, Shakeproof, on Bolts Centre for Damper	A.31		2	
C.2464	Damper Assembly	A.32		1	
C.5809	Damper Assembly	A.33		1	Fitted from Eng. No. W.1001 to W.8306
C.8020	Damper Assembly				Fitted from Eng. No. W.8307 to W.8380 and for Competition purposes
R.504/11W	Rivet, securing Damper to Centre	A.34		1 12	Fitted to Eng. No. W.8381 and subs.
C.2173 C.2283	Piece, Distance	A.35		1	
C.2170	Thrower, Oil Gear, Timing	A.36		1	
C.2314	Gear for Oil Pump Drive	A.37		1	
C.757	Key (Woodruff 90)	A.38 A.39		1	
C.2315 C.2317	Bearing, Main, Front, Centre and Rear (Std.)	A.40		6 halv	Ac
C.2316	Dearing, Main, Intermediate (Std.)	A.41		8 halv	
C.2316/1	Washer, Thrust, bottom of Centre Bearing Cap Washer, Thrust, bottom of Centre Bearing Cap	A.42	A:	s regid	
C.2226	Bush, in rear end of Crankshaft, for Constant	A.42	A:	s req'd	.
~ 4000	rinion spare	A.43		1	
C. 4283	Plug, Screwed, for Crankshaft Journals			6	Fitted to Eng. No.
				•	W.1747 and subs.
	MAIN BEARINGS				
	Obtainable in the following undersizes:				
	— 020" — 030" — 040" When ordering, please quote Part No. and undersize required (e.g. C.2315/20 for — 020").				
.2211	FLYWHEEL				•
	LE I AA MEET	A.44	,	1	Fitted from Eng. No.
.2313	Dowel in Centre of Flywheel				W.1001 to W.2645
.1782	Dowel on outer face of Flywheel	A.45	2		
.2295	Screw, Set, securing Flywheel to Crankahate	A.46 A.47	6		
.2287 . 4 188	inte, locking Setscrews	A.48	2		
	Washer under head of Setscrews		6		
4809	FLYWHEEL				
			1		Fitted from Eng. No.
.5808	FLYWHEEL				W.2646 to W.8274
	LLIAALEEL		. 1	F	itted to Eng. No.
2313	B 11 5				W.8275 and subs.
1782	Dowel in Centre of Flywheel		2		
4855	Dowel on Outer face of Flywheel Screw, Set, securing Flywheel to Crankshaft		2		
4810	Lockplate, securing Setscrews		10		
			•		
2265	DICTOR				e de la companya de l
1203	PISTON, COMPLETE	A.49	6	7	: I COMPRESSION RATIO
2426	PISTON COMPLETE				
	PISTON, COMPLETE		6	8	: I COMPRESSION RATIO
563	Pin, Gudgeon	A ===			
964	Circlip	A.50 A 51	6		
1085 19 62	Ring, Pressure, Upper	A.51 A.52	12		
3963	Ring, Pressure, Lower Ring, Scraper	A.53	6		
	- mig, scraper	A.54	6		

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.3086	PISTON, COMPLETE	A.55	6	7:1 COMPRESSION RATIO
C.3087	PISTON, COMPLETE		6	8:1 COMPRESSION RATIO
C.3104 C.3964 C.5830 C.5831 C.5832	Pin, Gudgeon Circlip Ring, Pressure, Upper Ring, Pressure, Lower Ring, Scraper	A.50 A.51 A.52 A.53 A.54	6 12 6 6	
	NOTE.—Pistons C.3086 and C.3087 may be used as an alternative to C.2265 and C.2426 respectively.		÷	
C.7710	PISTON, COMPLETE		6	9: I COMPRESSION RATIO
C.3104 C.3964 C.5830 C.7850	Pin, Gudgeon Circlip Ring, Pressure Ring, Scraper		6 12 12 6	SPECIAL EQUIPMENT FOR COM- PETITION PURPOSES
	PISTONS AND RINGS			
	Obtainable in the following oversizes:— +·005" +·010" +·015" +·020" +·030" When ordering, please state oversize required (e.g. C.2265/10 for ·010" oversize).			
C.2438	CONNECTING ROD (LESS BEARINGS)	A.56	6	Fitted from Eng. No. W.1001 to W.1098
C.2448	CONNECTING ROD (LESS BEARINGS)		6	Fitted from Eng. No. W.1099 to W.3674
C.1132 C.383 C.358 C.2479 C.2361 C.386 L.103-5/8U C.2439	Bearing, Big End (Standard size) Bolt, securing Caps to Connecting Rods Nut on Bolts Bolt, securing Caps to Connecting Rods Nut on Bolts Washer under Nuts Pin, Split, locking Nuts Bearing, Small End	A.57 A.58 A.59 A.58 A.59 A.60 A.61 A.62	12 hal 12 } 12 } 12 } 12 } 12 12	ves Fitted from Eng. No. W.1001 to W.1098 Fitted from Eng. No. W.1099 to W.3674
C.5835	CONNECTING ROD (LESS BEARINGS)		6	Fitted from Eng. No. W.3675 to W.8642
C.7917	CONNECTING ROD (LESS BEARINGS)		6	Fitted to Eng. No. W.8643 and subs.
C.1132 C.3944 C.2361 C.386	Bearing, Big End (Standard size) Bolt, securing Caps to Connecting Rods Nut on Bolts Washer, under Nuts		12 halve 12 12 12	Fitted from Eng. No. W.3675 to W.8642
L.103-5/8U C.2439	Pin, Split, Locking Nuts Bearing, Small End		12 6	

BIG END BEARINGS

Obtainable in the following undersizes:

---020" ---030" ---040"

When ordering, please quote Part No. and undersize required (e.g. C.1132/20 for .020" undersize).

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.3384	OIL PUMP COMPLETE		1	Fitted from Eng. No. W.1001 to W.2760
C.2254	Body only	A.63	1	VV.1001 to VV.2700
C.373	Dowel in Pump Body	A.64	1	
C.2221 C.2224	Gear, Driving Gear, Driven	A.65 A.66	1	
C.1441	Spindle for Driven Gear	A.67	i	
C.2198	Cover at bottom of Pump Body	A.68	1	
C.2277	Gasket between Cover and Pump Body	A.69	1	
NB.131/6D C.740	Bolt securing Cover to Pump Body Washer, Shakeproof, on Bolts	A.70 A.71	4	
C.2150	Shaft, Drive, between Distributor and Coupling Shaft	A.72	i	
C.2174	Bush on Drive Shaft	A.73	1	
C.2393 C.2152	Washer on Drive Shaft (Top of Bush) Gear, Helical, driving Oil Pump and Distributor	A.74 A.75	1	
C.753	Key (Woodruff No. 50) Locking Helical Gear on Drive Shaft	A.76	i	
NN.256/L	Nut at bottom of Drive Shaft	A.77	1	
C.2151 C.2263	Washer, Special, Locking Nut Shaft, coupling Driving Gear and Drive Shaft	A.78 A.79	1	
C.4715	OIL PUMP COMPLETE		1	Fitted to Eng. No.
				W.2761 and subs.
C.4716	Gear, Driving		1	
C.4718 C.752	Spindle for Driving Gear Key, locking Driving Gear on Spindle		1	
C.4717	Gear, Driven		i	
	All other items as for Oil Pump C.3384.			
C 0044	Bulleton of Oth Down to During Co			
C.2311 NB.137/14D	Bolt, securing Oil Pump to Bearing Cap Bolt, securing Oil Pump to Bearing Cap	A.80 A.81	2 1	
C.741	Washer, Shakeproof, on Bolts	A.82	ż	
C.2471	OIL DELIVERY PIPE FROM PUMP	A.83	1	
C.2220	Gosket under Finns of Oil Pine	A.84	1	•
NB.131/6D	Gasket, under Flange of Oil Pipe Bolt, through Flange, securing Oil Pipe	7.07	ż	
C.740	Washer, Shakeproof, on Bolts		2	
C.2160	Gasket, between Elbow and Oil Pump	A.85	1 3	
NB.131/9D C.740	Bolt, through Elbow, securing Oil Pipe Washer, Shakeproof, on Bolts		3	
C 2222	FLOATING CUCTION FILTER FOR OU SUMP	A 94		
C.2228	FLOATING SUCTION FILTER FOR OIL SUMP	∧.00	1	
L.104/10U	Pin, Split, retaining Filter in Oil Pump Cover		1	
C.2359	OH SUMB	A.87	1	Fitted from Eng. No.
C.2037	OIL SUMP	M.0/	•	Fitted from Eng. No. W.1001 to W.2057 W.3491 to W.3592 W.3597 to W.3634 W.3968 to W.3971
C.2359/1	OIL SUMP		1	Fitted to the following Engines W.2058 to W.3490 W.3593 to W.3596 W.3635 to W.3967 W.3972 and subs.
C.2306	Seal (Asbestos) at front end of Sump	A.88	1	
C.2302	Seal (Cork Rubber) at rear end of Sump	A.89	i	
	, , , , , , , , , , , , , , , , , , , ,			

Part No.	Description.		No. per Unit.	Remarks.
C.4487	TRAY FOR OIL SUMP, FRONT (COMPLE WITH BAFFLES—C.2340)	TE A.90	1	
C.2392	TRAY FOR OIL SUMP, REAR (COMPLE WITH BAFFLE—C.2342)	TE A.91	1	SUPERSEDED BY C.2392/I
C.2392/1	TRAY FOR OIL SUMP, REAR (COMPLET WITH BAFFLE—C.2342/1)	ΓE	1	SUPERSEDES C.2392
NS.131/4D CS.131/4D C.725 C.2205 C.2364 C.2296/1 NS.131/5D NS.131/6D FG.105/X	Screw, Set, securing Front Tray to Bearing Caps Screw, Set, securing Rear Tray to Sump Washer, Shakeproof, on Setscrews Gasket, between Oil Sump and Cylinder Block Plug, Drain, at bottom of Oil Sump Washer on Drain Plug Screw, Set, securing Oil Sump to Cylinder Block Screw, Set, securing Oil Sump to Cylinder Block Washer, Spring, on Setscrews	A.92 A.93 A.94 A.95 A.96 A.97 A.98 A.99	3 4 7 2 halv 1 1 1 25 26	es
C.2348	DIPSTICK ASSEMBLY FOR OIL SUMP	A.100	1	Fitted from Eng. No.
C.2348/1	DIPSTICK ASSEMBLY FOR OIL SUMP		1	W.1001 to W.2057 Fitted to Eng. No. W.2058 and subs.
C.2349	OIL LEVEL ELEMENT UNIT IN OIL SUM (SMITH'S Y.65704)	P A.101	1	Fitted from Eng. No. W.1001 to W.6130 Also to 6132, 6134, 6136, 6138, 6140, 6142, 6144, 6146, 6148
C.4492	BLANKING PLATE FOR OIL SUMP		1	Fitted to Eng. No. W.6131, 6133, 6135, 6137, 6139, 6141, 6143,
C.937	Gasket for Oil Level Element Unit or Blanking Plate	A.102	1	6145, 6147, 6149, and subs.
C.5106 C.4291 FB.105/5D FN.105/L FG.105/X NS.131/4D FG.105/X	Plate, Tapped, for fixing of Deflector to Frame Bolt, securing Deflector to Cross Member Nut on Bolts Washer, Spring, under Nuts Screw, Set, securing Deflector to Tapped Plates Washer, Spring, on Setscrews		1 2 5 5 6 6	SUPPLIED TO SPECIAL ORDER ONLY
423/A	FLEXIBLE OIL PIPE	A.103	1	
425	OIL PIPE TO GAUGE	A.104	1	
C.2350	OIL CLEANER (TECALEMIT FA.2045)		1	Fitted from Eng. No. W.1001 to W.4382
535 661 740 737	Element (FG.2383) Canister (41518) Spring at bottom of Canister, for Bottom Pressure Plate (160144) Washer on the of Spring (450384)	A.105 A.106 A.107	1 1 1	
732 725 743 709 695 747 747 74014 911	Washer on top of Spring (150386) Washer (Felt) under bottom Pressure Plate (141050) Plate, Pressure, at bottom of Canister (134167) Circlip, securing bottom Pressure Plate (163122) Filter Head (114042) Screw, Union, at top of Filter Head (101343) Washer (Fibre) under Union Screw (174550) Valve, Relief, Assembly Seal (Rubber) on Filter Head (137353) Washer (Fibr) under the Press (144000)	A.108 A.109 A.110 A.111 A.112 A.113 A.114	1 1 1 1 1 1	
733 726 741 665 696 078 728	Washer (Felt) under top Pressure Plate (141092) Plate, Pressure, on Filter Head (134295) Circlip, securing top Pressure Plate (160259) Valve, Balance, Assy., in Filter Head (50002) Bolt, through Filter Head and Canister (101344) Washer (Steel) under Head of Bolt (WWA.1010) Washer (Rubber) on Bolt (137025/2)	A.116 A.117 A.118 A.119 A.120 A.121 A.122	1 1 1 1 1	

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
C.4767	OIL CLEANER (TECALEMIT FA.2690/101)		1	Fitted to Eng. No.	
1538 2501 2697	Element (FG.2388) Cannister (41527) Bolt, through Filter Head and Canister (101620)		1 1 1	W.4383 and subs.	
	All other items as for Oil Cleaner C.2350.				
C.4014	RELIEF VALVE ASSEMBLY		1	Fitted to Eng. No.	
C.1088/C 2730	Body for Relief Valve (100197) Washer (Fibre) between Body and Filter Head (140034)	A.123 A.124		W.1001 and subs.	
2713 2742 2693 2692 2734 C.1088/J	Valve, Relief (118076) Spring, for Relief Valve (160371) Housing for Relief Valve Spring (100195) Nut, Dome, on Housing (100194) Nut, Lock (150202) Washer (Copper) at each side of Locknut (150318)	A.125 A.126 A.127 A.128 A.129 A.130	1 1 1 1 1 2		
C.2248 NB.131/36D NB.131/9D FW.105/E FW.105/T	Gasket, between Oil Cleaner and Cylinder Block Bolt, securing Oil Cleaner to Block (bottom fixing) Bolt, securing Oil Cleaner to Block (top fixing) Washer (Copper), on Bolts, adjacent to Block Washer (Steel) under Head of Bolts	A.131	1 2 2 4 4		
C.3826	WATER PUMP, COMPLETE			Fitted from Eng. No.	
C.2209 C.2357 C.2303 C.2225 C.468 C.2401 C.705 C.2402 C.2403 C.706 C.2404 C.2406 C.2405 C.389 C.2450 C.2321 C.2327 R.502/10W C.704/1 C.2399 C.2398 C.704/1 C.2400 C.2445	Body only Greaser, Hydraulic, on Pump Body Gasket, between Pump and Cylinder Block Spindle Bush for Spindle Seal on Spindle Bearing, Ball, Front (Hoffman S.9) Collar for Front Bearing Circlip, on Pump Body, retaining Front Bearing Bearing, Ball, Rear (Hoffman S.10) Circlip, in Fan Hub, retaining Rear Bearing Washer (Felt) Front Disc for Front Washer Washer (Felt) Rear Disc for Rear Washer Impeller (Front Half) Impeller (Rear Half) Rivet, securing two halves of Impeller Pin (Mills) securing Impellor to Spindle Dog, Driving, Front Circlip, around Fan Hub, securing Front Driving Dog Pin (Mills) securing Front Driving Dog to Spindle Dog, Driving, Rear Hub, Fan		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	W.1001 to W.1050	
C.3870	WATER PUMP, COMPLETE		1	Fitted from Eng. No. W.1051 to W.1900	
C.4481	WATER PUMP, COMPLETE		1	Fitted from Eng. No.	•
C.2457	Body only	A.132	1	W.1901 to W.2669 Fitted from Eng. No.	
C.4025	Body only		1	W.1051 to W.1900 Fitted from Eng. No. W.1901 to W.2669	
C.2357 C.2303 C.2459 C.468 C.4811 C.705	Greaser, Hydraulic, on Pump Body Gasket, between Pump and Cylinder Block Spindle Bush for Spindle Seal on Spindle Bearing, Ball, Front (Hoffman S.9)	A.133 A.134 A.135 A.136 A.137 A.138	1 1 1 1 1	VV.1701 LO VV.2007	

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
	WATER PUMP, COMPLETE (continued)			
C.2402 C.2403 C.706 C.2404 C.2406	Collar for Front Bearing Circlip, on Pump Body, retaining Front Bearing Bearing, Ball, Rear (Hoffman S.10) Circlip, in Fan Hub, retaining Rear Bearing Washer (Felt) Front	A.139 A.140 A.141 A.142 A.143 A.144	1 1 1	·
C.2405 C.389 C.2450 C.2458 C.704/1	Disc for Front Washer Washer (Felt) Rear Disc for Rear Washer Impellor Pin (Mills) securing Impellor to Spindle	A.145 A.146 A.147 A.148	1 1 1	
C.2399 C.2398 C.704/1 C. 244 5	Dog, Driving Circlip, around Fan Hub, securing Driving Dog Pin (Mills) securing Driving Dog to Spindle Hub, Fan	A.149 A.150 A.151 A.152	1	Fitted from Eng. No. W.1001 to W.5464
C.4946	WATER PUMP, COMPLETE		1 }	
C.4938 C.799 C.2296/1	Body only Plug Washer (Copper) for Plug All other items as for Pump C.4481.		1 1	Fitted from Eng. No. W.2670 to W.5464
C.6746	WATER PUMP, COMPLETE		1)	Fitted to Eng. No.
C.4938 C.7674	Body only Impellor All other items as for Pump C.4481, except C.2445 Fan Hub, which is not required.		1	W.5465 and subs.
C.1505 C.1506 C.2296/1	Banjo for Water Pump Connection Bolt for Banjo Washer (Copper) at each side of Banjo		1 1 2	
C.2231	FAN FOR WATER PUMP	A.153	1]	Fitted from Eng. No.
C.3044 C.2447	Nipple, Grease, on Fan (Tec. NA.5701) Washer, Tab, under Grease Nipple	A.154 A.155		W.1001 to W.5464
C.6747	FAN ASSEMBLY FOR WATER PUMP		11	Fitted to Eng. No.
C.5121	Balance-Piece, for Fan		2	W.5465 and subs.
C.2446	PULLEY FOR FAN	A.156	1}	Fitted from Eng. No.
NB.125/16D C. 73 9	Screw, Set, securing Fan and Pulley to Hub Washer, Shakeproof, on Setscrews		5 5	W.1001 to W.5464
C.5054	PULLEY FOR FAN (COMPLETE WITH HUB)		1]	
C.3044 NS.131/4D C.740	Nipple, Grease, for Fan Pulley (Tec. NA.5701) Screw, Set, securing Fan to Pulley Washer, Shakeproof, on Setscrews		1 4 4	Fitted to Eng. No. W.5465 and subs.
C.2240	BELT FOR FAN PULLEY	A.157	1	Fitted from Eng. No. W.1001 to W.5464
C.5056	BELT FOR FAN PULLEY		1	Fitted to Eng. No. W.5465 and subs.

Part No.	Description.	Plate No.	No. pe Unit.	
C.2408	FRONT ENGINE PLATE	A.158	1	Fitted from Chassis No. 660001 to 660222 670001 to 670716
C.2408/1	FRONT ENGINE PLATE		. 1	Fitted from Chassis No. 660223 to 660934 669001 to 669002 670717 to 671837 679001 to 679267 679269 to 679270
C.6805	FRONT ENGINE PLATE		1 }	
C.6806 C.6807 NS.143/6D NS.143/7D NN.543/L C.727	Strut, supporting right hand flange of Engine Plate Strut, supporting left hand flange of Engine Plate Screw, Set, securing Struts Screw, Set, securing Struts Nut on Setscrews Washer, Shakeproof, under Nuts		1 1 2 2 2 4	Fitted from Chassis No. 660935 to 660993 671838 to 672481 679268 only 679271 to 679815
C.6256	BRACKET FOR R.H. FRONT ENGINE MOUNTING		1	
C.6255	BRACKET FOR L.H. FRONT ENGINE MOUNTING		1	Fitted to Chassis No. 660994 and subs. 672482 and subs. 667001 and subs. 677001 and subs.
NS.143/6D C.727	Screw, Set, securing Brackets to Engine Washer, Shakeproof, on Setscrews		6	
C.428	FRONT ENGINE MOUNTING	A.159	2	Fitted from Chassis No. 660001 to 660993 679001 to 679267
FN.105/L FG.105/X 1350	Nut, securing Engine to Mounting Studs Washer, Spring, under Nuts Piece, Packing, under Front Engine Mounting	A.160 A.161 A.162	4 4 2	670001 to 672481 679268 to 679815 669001 to 669002 ITEM 1350—FITTED TO R.H. DRIVE CARS ONLY
C.4303	FRONT ENGINE MOUNTING		2	
NS.150/7D FW.108/T C.793 FG.108/X NB.131/BD NN.131/L C.725 C.6790	Screw, Set, securing Mounting to Bracket on Engine Washer, Plain, on Setscrews Washer, Special, on Setscrews Washer, Spring, on Setscrews Screw, Set, securing Mountings to Chassis Frame Nut on Setscrews Washer, Shakeproof, under Nuts Piece, Packing, under Front Engine Mounting (FOR R.H. DRIVE FIXED HEAD AND DROP HEAD COUPE MODELS ONLY)		2 2 2 2 2 4 4 4	Fitted to Chassis No. 660994 and subs. 672482 and subs. 679816 and subs.
C.478	REAR ENGINE MOUNTING	A.163	1 }	Eistend from Chanic No.
NB.137/10D NN.137/L FG.106/X	Bolt, securing Mounting to Chassis Frame Nut on Bolts Washer, Spring, under Nuts		4 4 4	Fitted from Chassis No. 660001 to 660993 669001 to 669002 670001 to 672481 679001 to 679815
C.4304	REAR ENGINE MOUNTING		2	Fitted to Chassis No.
C.5805 NN.137/L FG.106/X C.4308 C.4476	Bracket Assy. for Rear Engine Mountings Nut, securing Mountings Washer, Spring, under Nuts Carrier-Bracket for Rear Mountings Shield over Rear Mountings		1 4 4 1 1	660994 and subs. 672482 and subs. 669003 and subs. 677816 and subs. 677001 and subs.
C.2192 NS.137/6D FG.106/X NB.131/8D NN.131/L FG.106/X	Bracket for attachment of Dynamo Screw, Set, securing Bracket to Cylinder Block Washer, Spring on Setscrews Bolt, securing Dynamo to Bracket Nut on Bolts Washer, Spring, under Nuts		1 3 3 2 2 2	

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.2341	TORQUE ARM, L.H., SUPPORTING ENGINE AT REAR (FITTED TO R.H. DRIVE CARS ONLY)		1	Fitted from Eng. No.
C.2343	TORQUE ARM, R.H., SUPPORTING ENGINE AT REAR (FITTED TO L.H. DRIVE CARS ONLY)		1	W.1001 to W1010
C.2370	TORQUE ARM, L.H., SUPPORTING ENGINE AT REAR (FITTED TO R.H. DRIVE CARS ONLY)	A.164		Fitted to Eng. No.
C.2371	TORQUE ARM, R.H., SUPPORTING ENGINE AT REAR (FITTED TO L.H. DRIVE CARS ONLY)		1	W1011 and subs.
NB.131/9D NN.131/L FG.105/X NB.137/23D NN.137/L FG.106/X	Bolt, securing Torque Arm to Cylinder Block Nut on Bolts Washer, Spring, under Nuts Bolt, securing Torque Arm to Cylinder Block Nut on Bolts Washer, Spring, under Nuts		2 2 2 2 2 2 2	
C.407	ENGINE DAMPER (STABILIZER)		1	
C.3486 C.3856 NB.150/22D C.792 FG.108/X NS.131/5D FG.105/X C.3489 C.3491 NB.150/16D	Plate, Tapping, for Engine Damper Mounting Piece, Distance, for Engine Damper Bolt, securing Torque Arm to Damper Washer, between Torque Arm and Damper Washer, Spring, on Bolt Screw, Set, securing Damper to Chassis Frame Washer, Spring, on Setscrews Bracket, on Frame, mounting Engine Damper Piece, Distance, for Engine Damper Bolt, securing Torque Arm to Damper		1	Fitted from Chassis No. 670001 to 670010 Fitted to Chassis No.
C.792 FG.108/X NS.131/5D C.3116/2 FG.105/X C.7907	Washer, between Torque Arm and Damper Washer, Spring, on Bolt Screw, Set, securing Damper to Bracket Nut on Setscrews Washer, Spring, under Nuts Piece, Distance, for Engine Damper		1 1 2 2 2 1	660001 and subs. 670011 and subs. 679001 and subs. Fitted to Chassis No.
C.7707	Field, Distance, for Engine Damper		•	669001 and subs.
Assy. 211	GASKETS PACKAGE FOR COMPLETE ENGINE OVERHAUL		1 set i	For use with the following Engines W.1001 to 1880, 1882 to 2255, 2257 to 2325, 2327 to 2330, 2333, 2339, 2340, 2342, 2344, 2346, 2347, 2361, 2362, 2368, 2380, 2382, 2402, 2411, 2412, 2475, 2480, 2483
Assy. 213	GASKETS PACKAGE FOR COMPLETE ENGINE OVERHAUL		1 set	For use with the following Engines W.1881, 2256, 2326, 2331, 2332, 2334 to 2338, 2341, 2343, 2345, 2348 to 2360, 2363 to 2367, 2369 to 2379, 2381, 2383 to 2401, 2403 to 2410, 2413 to 2474, 2476 to 2479, 2481, 2482, 2484 and subs.

C.2242 CYLINDER HEAD	
C.2242/1 CYLINDER HEAD	ving Engines
W.1881, 2256, 2326, 2331, 2332, 2334 to 2338, 2341, 2343, 2345, 2348 to 2379, 2381, 2383 to 2401, 2403 to 2410, 2413 to 2474, 2476 to 246 to 2379, 2381, 2383 to 2401, 2403 to 2410, 2413 to 2474, 2476 to 246 to 2479, 2473 to 2474, 2476 to 247 C.6733	40, 2342, 2344, 2346, 2347,
W.1881, 2256, 2336, 2331, 2332, 2334 to 2338, 2341, 2343, 2345, 2346 to 2379, 2381, 2383, 2345, 2346 to 2474, 2476 to 2476 C.6733 CYLINDER HEAD	ving Engines
C.2250 Gasket, between Head and Block B.2 1 Fitted from Eng. I W.1001 to W.1. C.3335 Gasket, between Head and Block B.2 1 Fitted from Eng. I W.1001 to W.1. C.7861 Gasket, between Head and Block B.3 1 Fitted from Eng. I W.1343 to W.7. C.7861 Gasket, between Head and Block B.3 4 W.1343 to W.7. C.2189 Stud, on underside front end of Head B.3 4 W.1311/L Nut on Studs B.4 4 FG.105/X Washer, Spring, under Nuts B.5 4 FG.105/X Washer, Spring, under Nuts B.5 4 FG.105/X Washer, Spring, under Nuts B.8 16 C.11766 Stud for Inlet Manifold B.7 1 FG.11762 Stud, Short, for Inlet Manifold B.9 1 C.11763 Stud, Short, for Inlet Manifold B.10 6 C.11766 Stud, Inlet Manifold, For Inlet Manifold B.10 6 C.11766 Stud, Inlet Manifold, For Inlet Manifold B.10 6 C.11768 Stud, Inlet Manifold, for attachment of Carburetters B.13 19 Fitted from Eng. Now W.6919 and sub W.6919 and	
C.2250 Gasket, between Head and Block B.2 1 Fitted from Eng. I W.1001 to W.1. C.3335 Gasket, between Head and Block B.2 1 Fitted from Eng. I Fitte	
C.3335 Gasket, between Head and Block B.2 1 Fitted from Eng. No W.1343 to W.7. (C.7861 Gasket, between Head and Block 1 1 Fitted to Eng. No W.8131 and sub NN.131 Nut on Studs B.4 4 FG.105/X Washer, Spring, under Nuts B.5 4 FG.105/X Washer, Spring, under Nuts B.5 1 6 NN.131 Nut on Studs B.7 16 FG.105/X Washer, Spring, under Nuts B.10 6 Fitted from Eng. No. 10 Fitted from	o.
C.7861 Gasket, between Head and Block 1 Fitted to Eng. No. C.2189 Stud., on underside front end of Head B.3 4 N.N.131 N. Ut on Studs B.4 4 FG.105 X Washer, Spring, under Nuts B.5 4 K. C.2325 Stud., on Head, for Exhaust Manifolds B.6 16 N.	o.
C.2189	
FG.105 X	,
C.2325′ Stud, on Head, for Exhaust Manifolds B.6 16 NN.131/Q Nut on Studs B.7 16 FG.105/X Washer, Spring, under Nuts B.8 16 C.11766 Stud, Long, for Inlet Manifold B.9 1 C.11763 Stud, Short, for Inlet Manifold B.10 6 C.11764 Stud, Medium, for Inlet Manifold B.10 6 C.11765 Stud, Inlet Manifold B.10 6 C.11766 Stud, Inlet Manifold B.11 8 Fitted from Eng. I. W.1001 to W.67 C.11768 Stud, Inlet Manifold, for attachment of Carburetters B.11 19 FG.105/X Washer, Spring, under Nuts B.12 19 FG.105/X Washer, Spring, under Nuts B.13 19 C.2328 Nut, Dome, securing Cylinder Head to Block B.14 14 C.23328 Nut, Dome, securing Cylinder Head Dome Nuts B.15 14 C.2312 Ring, Seal, rear end, between Head and Cam B.16 2 Covers Covers Covers C.2157 Plug, Core (Headed) on top of Cylinder Head B.17 3 C.2296/2 Washer (Copper) under Headed Core Plug B.18 3 C.2377 Plug, Core (Headed) on top of Cylinder Head B.17 3 C.2796/2 Stud, securing Camshaft Covers 2 C.6727 Stud, securing Camshaft Covers 2 C.6727 Stud, securing Camshaft Covers 2 C.6727/1 Stud, securing Camshaft Covers 6 C.6727/1 Stud, securing Camshaft Covers 6 C.2246 Valve, Inlet 7 Valve, Exhaust 8 C.2248 Valve, Linlet 6 C.7256 Guide for Inlet Valves 8 C.7259 Insert for Inlet Valves 8 C.7259 Insert for Exhaust Valves 8 C.7259 Insert for Exhaust Valves 8 C.7260 Guide for Exhaust Valves 8 C.7261 Guide for Exhaust Valves 8 C.7261 Guide for Exhaust Valves 8 C.7361 Guide for Exhaust Valves 8 C.7362 Spring, Outer 8 C.7377 Spring, Inner 8 C.7376 Spring, Outer 8 C.7377 Spring, Inner 8 C.7377 Spring, Inner 8 C.7378 Spring, Inner 8 C.7379 Collar at top of Valve Stems 8 C.7381 Spring Courter 8 C.7381 Seat for Springs Seat for Sprin	
NN.131 Q	
C.11766	
C.11762	
C.11763	
C.11764 Stud, Medium, for Inlet Manifold B.11 8 Fitted from Eng. I W.1001 to W.6	
C.11768	o.
W.6919 and sub W.6919 and sub W.6919 and sub W.6919 and sub W.6910 Washer, Spring, under Nuts B.12 19	i8
C.2441 2	
FG.105/X	'
C.2385	
C.2312 Ring, Seal, rear end, between Head and Cam	
C.2157	
C.317	
C.6726	
C.6727	0
VALVES B.20 6 Fitted from Eng. No. W.1001 to W.99	
C.2246 Valve, Inlet C.2247 Valve, Exhaust C.2247 Valve, Exhaust C.8248 Valve, Inlet C.8313 Valve, Exhaust C.7258 Insert for Inlet Valves C.7259 Insert for Exhaust Valves C.7260 Guide for Inlet Valves C.7261 Guide for Exhaust Valves C.7261 Guide for Exhaust Valves C.7373 Spring, Inner C.7136 Spring, Outer C.2181 Seat for Springs C.2159 Collar at top of Valve Stems C.2257 V.1001 to W.99 Exhaust Valves B.20 6 Fitted from Eng. No. If W.1001 to W.99 Fitted to Eng. No. If W.1001 to W.99	
C.2247 Valve, Exhaust C.8248 Valve, Inlet C.8313 Valve, Exhaust C.7258 Insert for Inlet Valves C.7259 Insert for Exhaust Valves C.7260 Guide for Inlet Valves C.7261 Guide for Exhaust Valves C.7261 Guide for Exhaust Valves C.7261 Spring, Inner C.7362 Spring, Outer C.7363 Spring, Outer C.2363 Seat for Springs C.2364 Seat for Springs C.2365 COllar at top of Valve Stems C.2367 Collar at top of Valve Stems C.368 Seat for Springs C.378 Spring, Inner C.378 Spring, Outer C.378 Spring, Outer C.378 Spring, Outer C.3780 Seat for Springs C.3780 Seat for Spring	
C.2247 Valve, Exhaust C.8248 Valve, Inlet C.8313 Valve, Exhaust C.7258 Insert for Inlet Valves C.7259 Insert for Exhaust Valves C.7260 Guide for Inlet Valves C.7261 Guide for Exhaust Valves C.7261 Guide for Exhaust Valves C.7361 Spring, Inner C.7361 Spring, Outer C.7365 Spring, Outer C.2361 Seat for Springs C.2365 Collar at top of Valve Stems B.21 6 Fitted from Eng. No. 18 W.1001 to W.99 Fitted to Eng. No. 18 W.1001 to W.99 Fitted to Eng. No. 18 C.7136 Spring, Outer C.2181 Seat for Springs B.28 12 C.2159 Collar at top of Valve Stems B.21 6 Fitted to Eng. No. 18 W.1001 to W.99 Fitted to Eng. No	
C.8248).
C.8313	
C.7258	
C.7260 Guide for Inlet Valves C.7261 Guide for Exhaust Valves C.8312 Guide for Exhaust Valves C.7137 Spring, Inner C.7136 Spring, Outer C.2181 Seat for Springs C.2159 Collar at top of Valve Stems B.24 6 Fitted from Eng. No. I W.1001 to W.99 Fitted to Eng. No. I B.26 12 C.2181 Seat for Springs B.27 12 C.2159 Collar at top of Valve Stems B.29 12	
C.7261 Guide for Exhaust Valves C.8312 Guide for Exhaust Valves C.7137 Spring, Inner C.7136 Spring, Outer C.2181 Seat for Springs C.2159 Collar at top of Valve Stems B.25 6 Fitted from Eng. No. 19 W.1001 to W.99 Fitted to Eng. No. 19 B.26 12 B.27 12 B.28 12 C.2159 Collar at top of Valve Stems B.29 12	
C.8312 Guide for Exhaust Valves 6 Fitted to Eng. No. I C.7137 Spring, Inner B.26 12 C.7136 Spring, Outer B.27 12 C.2181 Seat for Springs B.28 12 C.2159 Collar at top of Valve Stems B.29 12	
C.7137 Spring, Inner B.26 12 C.7136 Spring, Outer B.27 12 C.2181 Seat for Springs B.28 12 C.2159 Collar at top of Valve Stems B.29 12	
C.7136 Spring, Outer B.27 12 C.2181 Seat for Springs B.28 12 C.2159 Collar at top of Valve Stems B.29 12	2421 and subs.
C.2159 Collar at top of Valve Stems B.29 12	
C.7262 Guide for Tappets B.31 12	
C.7213 Tappet B.32 12	
C.2243/A Pad, Adjusting (.085" thick) B.33 12 C.2243/B Pad, Adjusting (.086" thick) B.33 12	
C.2243/C Pad, Adjusting (1080 thick) B.33 12	
C.2243/D Pad. Adjusting (-088" thick) B.33 12	
C.2243/E Pad, Adjusting (-089" thick) B.33 12	ne Pad of the desired
C.2243/F Pad, Adjusting (-090" thick) B.33 12 NOTE: Select to C.2243/G Pad, Adjusting (-091" thick) B.33 12 thickness	ie rau or the desired
C.2243/H Pad, Adjusting (-092" thick) B.33 12	•
C.2243/I Pad, Adjusting (093° thick) B.33 12	
C.2243/J Pad, Adjusting (-094" thick) B.33 12 C.2243/K Pad, Adjusting (-095" thick) B.33 12	
C.2243/L Pad, Adjusting (-096" thick) B.33 12	

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.2243/M	Pad; Adjusting (-097" thick)	B.33	12	
C.2243/N C.2243/O	Pad, Adjusting (1098" thick) Pad, Adjusting (1099" thick)	B.33 B.33	12 12	
C.2243/P	Pad, Adjusting (·100" thick)	B.33	12	
C.2243/Q	Pad, Adjusting (·101" thick)	B.33 B.33	12 12	
C.2243/R C.2243/S	Pad, Adjusting (·102" thick) Pad, Adjusting (·103" thick)	B.33	12	NOTE: Select the Pad of the desired
C.2243/T	Pad, Adjusting (104" thick)	B.33	12	thickness
C.2243/U C.2243/V	Pad, Adjusting (·105" thick) Pad, Adjusting (·106" thick)	B.33 B.33	12 12	
C.2243/W	Pad, Adjusting (·107" thick)	B.33	12	
C.2243/X	Pad, Adjusting (·108" thick)	B.33	12	
C.2243/Y C.2243/Z	Pad, Adjusting (·109" thick) Pad, Adjusting (·110" thick)	B.33 B.33	12 12	
			,	
C.2237	CAMSHAFT, EXHAUST	B.34	1	
C.2444	CAMSHAFT, INLET	B.35	1	
C.5717	CAMSHAFT, INLET (3/2 LIFT)		1 }	
C.5718	CAMSHAFT, EXHAUST (3" LIFT)		1	SUPPLIED TO SPECIAL ORDER ONLY
		D 94	16 halv	
C.2288 C.2326	Bearing for Camshafts Stud, in Head, securing Camshaft Bearing Caps and Covers	B.36 B.37	16 haiv	es
C.2373	Dowel, Ring, for Studs	D 20	16	
C.2323 NN.131/L	Washer 'D' on top of Bearing Caps Nut, securing Bearing Caps	B.38 B.39	16 16	
FG.105/X	Washer, Spring, under Nuts		16	
C.2217 C.2218 C.2196	COVER FOR CAMSHAFT, R.H. COVER FOR CAMSHAFT, L.H. Gasket, between Covers and Head	B.40 B.41 B.42	1 1 2	Fitted to the following Engines W.1001 to 1880, 1882 to 2255, 2257 to 2325, 2327 to 2330, 2333, 2339, 2340, 2342, 2344, 2346, 2347, 2361, 2362, 2368, 2380, 2382, 2402, 2411, 2412, 2475, 2480, 2483
C.2217/1	COVER FOR CAMSHAFT, R.H.		1 }	Fitted to the following Engines
			1	W.1881, 2256, 2326, 2331, 2332, 2334 to 2338, 2341, 2343, 2345, 2348 to 2360, 2363
C.2218/1	COVER FOR CAMSHAFT, L.H.		'	to 2367, 2369 to 2379, 2381, 2383 to 2401, 2403 to 2410, 2413 to 2474, 2476 to 2479,
C.2196/1	Gasket, between Covers and Head		2]	2481, 2482, 2484 to 4690
C.6722	COVER FOR CAMSHAFT, R.H.		1 }	
	COVER FOR CAMSHAFT, L.H.		1	Fitted from Eng. No. W.4691 to W.5652
C.6723	COVER TOR CARBINAL, AND		_	
C.6723 C.6735	Gasket, between Covers and Head		2	
			1	
C.6735	Gasket, between Covers and Head			Fitted to Eng. No. W.5653 and subs.
C.6735 C.7185	Gasket, between Covers and Head COVER FOR CAMSHAFT, R.H.		1	
C.6735 C.7185 C.7186 C.6735 C.2327	Gasket, between Covers and Head COVER FOR CAMSHAFT, R.H. COVER FOR CAMSHAFT, L.H. Gasket, between Covers and Head Nut, Dome, securing Covers	B.43	1 1 2 16)	W.5653 and subs. 22 required for Eng. No.
C.6735 C.7185 C.7186 C.6735	Gasket, between Covers and Head COVER FOR CAMSHAFT, R.H. COVER FOR CAMSHAFT, L.H. Gasket, between Covers and Head	B.43 B.44 B.45	1 1 2	W.5653 and subs.

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.2153	REV. COUNTER ADAPTER	B.47	1	SUPERSEDED BY C.2153/I
C.2153/1	REV. COUNTER ADAPTER		1	SUPERSEDES C.2153
C.2289 CS.125/5D FW.104/E C.2176	Gasket for Rev. Counter Adapter Screw, Set, securing Adapter Washer (Copper) on Setscrews Shaft for Rev. Counter Adapter	B.48 B.49 B.50 B.51	1 2 2 1	
C.2428 C.2324	Seal, Oil, on Shaft Thrower, Oil, on Shaft	B.52 B.53	i 1	
C.2154	FLANGED SEALING PLUG	B.54	1	SUPERSEDED BY C.2154/I
C.2154/1	FLANGED SEALING PLUG		1	SUPERSEDES C.2154
C.2289 C.7134/2 FW.104/E	Gasket for Sealing Plug Screw, Set, securing Sealing Plug Washer (Copper) on Setscrews	B.55 B.56 B.57	1 2 2	
C.2389	FRONT COVER AND BREATHER HOUSING	B.58	1	
C.2391 C.2390 C.2227 C.2345 C.2327 FG.104/X	Pipe for Breather Baffle, behind front Cover Gasket, front and rear of Baffle Stud, in Cylinder Head, for Front Cover Nut, Dome, securing Front Cover Washer, Spring, under Dome Nuts	B.59 B.60 B.61 B.62 B.63 B.64	1 1 2 4 4	
C.2485	FLEXIBLE BREATHER PIPE FOR FRONT COVER	B.65	1	Fitted from Chassis No.
C.2905/3	Clip (Cheney 1A) securing Flexible Pipe to Tube in Front Cover	B.66	1	660001 to 660227 670001 to 670774
C.2442	Clip Assembly, securing Flexible Pipe to Chassis Frame	B.67	1	
C.2485/1	FLEXIBLE BREATHER PIPE FOR FRONT COVER		1	Fitted to Chassis No.
C.2905/3	Clip (Cheney 1A) securing Flexible Pipe to Tube in Front Cover		1	660228 and subs. 670775 and subs.
C.4728	Clip Assembly, securing Flexible Pipe to Chassis Frame		1	
NS.319/5H	Screw, Set (Cheese Head) securing Clip Assembly to Flexible Pipe	B.68	1	
NN.119/L NS.131/4F	Nut on Setscrew Screw, Set, in Clip Assembly, securing Flexible Pipe	B.69 B.70	1	
	to Chassis Frame			

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
C.2333	OIL PIPE FROM CYLINDER BLOCK TO HEAD	B.73	1 }	Elected from Eng. No.	
C.2353 C.2296/4	Union, securing Oil Pipe to Head and Block Washer (Copper) on Union Screws	B.74 B.75	3 6	Fitted from Eng. No. W.1001 to W.4019	
C.5849	OIL PIPE FROM CYLINDER BLOCK TO HEAD		1 }	Fitted to Eng. No.	
C.5846 C.4146	Union, securing Oil Pipe to Head and Block Washer (Copper) on Union Screws		3 6	W.4020 and subs.	
C.2213	EXHAUST MANIFOLD, FRONT	B.76	1		
C.2214	EXHAUST MANIFOLD, REAR	B.77	1		
C.2369	Stud, in Manifold Flanges, for attachment of Exhaust Pipes	B.78	8		
C.2318 C.495 NN.137/Q FG.106/X	Gasket for Exhaust Manifolds Gasket for Outlet Flanges Nut, securing Exhaust Pipes to Manifolds Washer, Spring, under Nuts	B.79 B.80 B.81 B.82	2 2 8 8		
,					· .
C.2377	INLET MANIFOLD	B.83	1	SUPERSEDED BY C.4953	
C.4953	INLET MANIFOLD		1	SUPERSEDES C.2377	
C.2382	Stud, in Manifold, for attachment of Water Outlet Elbow	B.84	1	Fitted from Eng. No. W.1001 to W.1250	
C.11760	Stud, in Manifold, for attachment of Water Outlet Elbow		1	Fitted to Eng. No.	
C.11765	Stud, in Manifold, for attachment of Water Outlet Elbow		1	W.1251 and subs.	
C.2251	Gasket, for Inlet Manifold	B.85	1	Fitted from Eng. No. W.1001 to W.1195	
C.4008	Gasket, for Inlet Manifold	B.85	1	Fitted to Eng. No. W.1196 and subs.	
C.799 C.2296/1	Plug, in Inlet Manifold Washer (Copper) on Plugs	B.86 B.87	4		
C.2378	WATER OUTLET ELBOW		1	Fitted from Eng. No. W.1001 to W.1250	
C.2449	WATER OUTLET ELBOW	B.88	1	Fitted to Eng. No.	
C.2380	Gasket, for Water Outlet Elbow	B.89	1	W.1251 and subs.	
C.2379	FLANGE FOR STARTING PIPE	B.90	1		
C.2381 C.2383 C.4202/1 FG.104/X	Gasket, for Starting Pipe Flange Stud, for Starting Pipe Flange Nut on Studs Washer, Spring, under Nuts	B.91 B.92 B.93 B.94	1 4 4		

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.2388	STARTING PIPE	B.95	1	
C.2387 C.2296/5	Bolt, Banjo, securing Pipe to Flange Washer (Copper) at each side of Banjo	B.96 B.97	1 2	
C.4204	ANTI-BLOW-BACK VALVE IN STARTING PIPE BANJO BOLT		1	Fitted to Eng. No.
C.4205	Spring for Anti-Blow-Back Valve		1	W.2449 and subs.
C.168	THERMOSTAT ON OUTLET ELBOW	B.98	1	Fitted from Eng. No.
CS.419/3H C.723	Screw, Set, securing Thermostat to Manifold Washer, Shakeproof, on Setscrews	B.99 B.100	2 2	W.1001 to W.1250
C.2474	THERMOSTAT ON OUTLET ELBOW		1	Fitted to Eng. No. W.1251 and subs.
C.2475 C.7134/1 C.723/A	Gasket for Thermostat Screw, Set, securing Thermostat to Manifold Washer, Shakeproof, on Setscrews		1 3 3	
C.4380	SPARKING PLUG (CHAMPION L.10S)		6	FOR 7:1 COMPRESSION RATIO ENGINES
C.6754	SPARKING PLUG (CHAMPION L.11S)	B.101	6	FOR 8:1 COMPRESSION RATIO ENGINES OR FOR 7:1 COM- PRESSION RATIO ENGINES WHEN USED FOR RACING PURPOSES
C.6742	SPARKING PLUG (CHAMPION NA.10)		6	FOR 8:1 COMPRESSION RATIO ENGINES WHEN USED FOR RACING PURPOSES
C.6741	SPARKING PLUG (CHAMPION NA.12)		6	FOR 9:1 COMPRESSION RATIO ENGINES
	HIGH TENSION LEADS			
C.2431 C.2432 C.2433 C.2434 C.2435 C.2436 C.2437	Lead H.T. No. 1 Lead H.T. No. 2 Lead H.T. No. 3 Lead H.T. No. 4 Lead H.T. No. 5 Lead H.T. No. 6 Lead H.T. to Coll	B.102 B.103 B.104 B.105 B.106 B.107 B.108	1 1 1 1 1 1	Fitted from Eng. No. W.1001 to W.6696
C.1575	TERMINAL FOR SPARKING PLUG LEADS	B.109	6	Fitted from Eng. No. W.1001 to W.6372
C.5479	TERMINAL FOR SPARKING PLUG LEADS		6	Fitted to Eng. No. W.6373 and subs.
C.2451	CONDUIT FOR H.T. LEADS	B.1 10	1	
C.2454	CLIP FOR H.T. LEADS	B.111	2	Fitted from Eng. No. W.1001 to W.6696

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
3204	GROMMET, IN CLIP, FOR H.T. LEADS	B.112	2	Fitted from Eng. No. W.1001 to W.6696	
NB.137/12D NN.137/L FG.106/X	Bolt, mounting Starter Motor Nut on Bolts Washer, Spring, under Nuts		2 2 2		
	HIGH TENSION LEADS	٠			
C.4976 C.4977 C.4978 C.4979 C.4980 C.4981 C.2437	Lead, H.T. No. 1 Lead, H.T. No. 2 Lead, H.T. No. 3 Lead, H.T. No. 4 Lead, H.T. No. 5 Lead, H.T. No. 6 Lead, H.T. to Coil	. •	1 1 1 1 1 1	Fitted to Eng. No. W.6697 and subs.	
C.4982	CLIP FOR H.T. LEADS		1	Fitted to Eng. No. W.6697 and subs.	
C.4983 C.4984	SPACER (THICK) FOR H.T. LEADS SPACER (THIN) FOR H.T. LEADS		2 3	Fitted to Eng. No. W.6697 and subs.	
Assy. 311	GASKETS PACKAGE FOR DECARBONISINE ENGINE	NG	1 set	For use with the following Engin W.1001 to 1880, 1882 to 2255, 2: 2327 to 2330, 2333, 2339, 2340, 2346, 2347, 2361, 2362, 2368, 2402, 2411, 2412, 2475, 2480, 24	257 to 2325, 2342, 2344, 2380, 2382,
Assy. 313	GASKETS PACKAGE FOR DECARBONISIN ENGINE	G	1 set	For use with the following Engin W.1881, 2256, 2326, 2331, 233 2338, 2341, 2343, 2345, 2348 to to 2367, 2369 to 2379, 2381, 23 2403 to 2410, 2413 to 2474, 24 2481, 2482, 2484 and subs.	22, 2334, to 2360, 2363 83 to 2401,

TIMING GEAR

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
C.2169	SPROCKET FOR CAMSHAFT	C.1	2		
C.2329	Plate, Adjusting, in Cam Sprockets	C.2	2		
C.2191	Plate, Clamping, in Cam Sprockets	C.3	2		
C.2193	Circlip, retaining Clamping Plates	C.4	2		
C.2178	Pin, Guide, through Clamping Plates	C.5	2	•	
C.2194 C.2261	Washer, Star, on Guide Pin	C.6	2 2	•	
C.,2261	Circlip, securing Guide Pin	C.7	2		
C.2310	Screw, Set, securing Sprocket Assembly to Camshafts	C.8	4		
C.2207	MOUNTING BRACKET, FRONT	C.9	1	Fitted from Eng. No. W.1001 to W.1913	
C.4128/1	MOUNTING BRACKET, FRONT		1	Fitted from Eng. No. W.1914 and subs.	
C.2208	MOUNTING BRACKET, REAR	€.10	1	Fitted from Eng. No. W.1001 to W.1913	
C.4129	MOUNTING BRACKET, REAR		1	Fitted to Eng. No. W.1914 and subs.	
C.2182	Stud, in Rear Bracket	C.11	4	**.1717 and Subs.	,
NN.125/L	Nut, on Studs	C.12			
C.724	Washer, Shakeproof, under Nuts	C.13	4		
C.7424	Bolt (Long) securing Brackets to Cylinder Block	C.14			
C.2166	Bolt (Short) securing Brackets to Cylinder Block	C.15			
C.740 C.2188	Washer, Shakeproof, on Bolts	C.16		•	
C.2100	Pin, Plunger, in Front Bracket, locking Adjusting Plate	C.17	2	Fitted from Eng. No.	
C.2297	Spring in Plungers	C.18	2 [W.1001 to W.2330	
C.4405	Pin, Plunger, in Front Bracket, locking Adjusting		- 1 {	Fired on For No.	
	Plate	4.5	}	Fitted to Eng. No. W.2331 and subs.	
C.2297	Spring in Plunger		1]	VV.2001 and 3abs.	
					2.5
C.2308	IDLER SPROCKET (21 TEETH)	C.19	. 1		
C.2319			4		
C.2317	Bush for Idler Sprocket		1		
C 0477			_	,	
C.2177	ECCENTRIC SHAFT THROUGH IDLER SPROCKET	C.20	1	teration of the second of the	
C 0000	Discon (Comment to the control of France to Charles	C 04			
C.2282	Plug (Screwed) in end of Eccentric Shaft	C.21	1	•	
					*
C.2275	ADJUSTING PLATE ON ECCENTRIC SHAFT	C.22	1	Fitted from Eng. No.	
C.4404	ADJUSTING PLATE ON ECCENTRIC SHAFT		1	W.1001 to W.2330 Fitted to Eng. No.	
NIN! 040/I	Nach and the Although Man			W.2331 and subs.	
NN.243/L C.2280	Nut, securing Adjusting Plate Washer, locking Nut	C.23 C.24			
C 0000					
C.2309	INTERMEDIATE SPROCKET (20 TEETH)	C.25	1		
C.2320	Bush for Intermediate Sprocket		1		
C.2307	INTERMEDIATE SPROCKET (28 TEETH)	C.26	1		
C 926					
C.926	Key, locking Intermediate Sprocket	C.27	. 1		
C.2161	SHAFT, HOLDING INTERMEDIATE SPROCKETS	C.28	. 1		
C 005-	.		_		
C.2335	Circlip, securing Shaft	C.29	1	and the second second second second	

TIMING GEAR

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
C.2256	TIMING CHAIN, TOP	C.30	1		
C.2255	TIMING CHAIN, BOTTOM	C.31	1		
C.2158	GUIDE BRACKET FOR CHAIN TENSIONER	C.32	1	Fitted from Eng. No. W.1001 to W.2213	
C.4102	GUIDE BRACKET FOR CHAIN TENSIONER		1	Fitted from Eng. No. W.2214 to W.4051	
C.6728	GUIDE BRACKET FOR CHAIN TENSIONER		1	Fitted to Eng. No. W.4052 and subs.	
C.2257	OIL SPRAY BRACKET	C.33	1	Fitted from Eng. No. W.1001 to W.3486	
C.5143	OIL SPRAY BRACKET		1)	· · · · · · · · · · · · · · · · · · ·	
C.5144 C.5145 C.5146	Bail for Oil Spray Valve Seat for Ball Spring behind Ball		1 1	Fitted to Eng. No. W.3487 and subs.	
C.2300	Gasket, between Oil Spray Bracket and Cylinder Block	C.34	1		
NS.125/5D C.724	Screw, Set, securing Oil Spray Bracket to Block Washer, Shakeproof, on Setscrews	C.35 C.36			
					•
C.2156	TIMING CHAIN TENSIONER	C.37	1	Fitted from Eng. No. W.1001 to W.2213	
C.4100	TIMING CHAIN TENSIONER		1	Fitted from Eng. No. W.2214 to W.9999 F.1001	to F.2772
C.8245	TIMING CHAIN TENSIONER		1	Fitted to Eng. No. F.2773 and	
C.2284	SPRING FOR CHAIN TENSIONER	C.38	1	Fitted from Eng. No. W.1001 to W.2213	, A
C.4101	SPRING FOR CHAIN TENSIONER		1	Fitted to Eng. No. W.2214 and subs.	
C.2186 C.2179	Pin, securing Spring in Tensioner Pin, securing Spring and Tensioner to Oil Spray Bracket	C.39 C.40		Fitted from Eng. No. W.1001 to W.4051	
C.6729 C.6732	Retainer Assy., securing Spring in Tensioner Pin, securing Spring and Tensioner to Oil Spray Bracket		1)	Fitted to Eng. No. W.4052 and subs.	
C. 2299	VIBRATION DAMPER FOR LOWER TIMING CHAIN	C.41	1	Fitted from Eng. No. W.1001 to W.1940	
C.4103	VIBRATION DAMPER FOR LOWER TIMING CHAIN		1	Fitted from Eng. No. W.1941 to W.5494	
C.6819	VIBRATION DAMPER FOR LOWER TIMING CHAIN		1,	Fitted to Eng. No. W.5495 and subs.	.*
C.2180	BRACKET MOUNTING VIBRATION DAMPER (LOWER CHAIN)	C.42	1		
NS.325/3H	Screw, Cheese Head, securing Vibration Damper to Bracket	C.43	2	Fitted from Eng. No. W.1001 to W.1940	
C.724 NS.131/5D C.740	Washer, Shakeproof, on Screws Screw, Set, securing Mounting Bracket Washer, Shakeproof, on Setscrews	C.44 C.45 C.46			

TIMING GEAR

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
C.4104	BRACKET MOUNTING VIBRATION DAMPER (LOWER CHAIN)		1	Fitted from Eng. No.	
C.4705 NS.131/5D C.740	Rivet, securing Vibration Damper to Bracket Screw, Set, securing Mounting Bracket Washer, Shakeproof, on Setscrews		3 2 2	W.1941 to W.5494	
C.6818	BRACKET MOUNTING VIBRATION DAMPER (LOWER CHAIN)		1	Fitted to Eng. No.	*
C.6820 NS.131/5D C.740	Rivet, securing Vibration Damper to Bracket Screw, Set, securing Mounting Bracket Washer, Shakeproof, on Setscrews		3 2 2	W.5495 and subs.	
C.4126	DAMPER FOR UPPER TIMING CHAIN		2 🖘	Fitted from Eng. No. W.1914 to W.5416	
C.6701	DAMPER FOR UPPER TIMING CHAIN		2 -	Fitted to Eng. No. W.5417 and subs.	4 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 - 1 -
C.4127	CARRIER FOR UPPER DAMPERS		2	Fitted to Eng. No.	
C.4705	Rivet, securing Upper Dampers to Carriers		4	W.1914 and subs.	
					* *
C.2238	FRONT TIMING COVER	C.47	1	Fitted from Eng. No. W.1001 to W.1913	
C.2238/1	FRONT TIMING COVER		1 ,	Fitted to Eng. No. W.1914 and subs.	7 2
C.2195	Gasket, between Timing Cover and Cylinder Block	C.48	2 halves	Fitted from Eng. No. W.1001 to W.1913	
C.4466	Gasket, between Timing Cover and Cylinder Block		2 halves	Fitted to Eng. No. W.1914 and subs.	
C.4833/1	Piece, Distance, for Timing Cover		1	Fitted from Eng. No. W.3033 to 3493	
C.4833/2	Piece, Distance, for Timing Cover		3	W.3592 and subs. Fitted from Eng. No. W.1001 to W.1913	
C.2306 NB.131/9D	Seal, Oil, between Timing Cover and Oil Sump Bolt, securing Timing Cover to Block	C.49 C.50	1		r,
NB.131/14D	Bolt, securing Timing Cover to Block	C.51		One only required for Eng. No. W.1914 and subs.	
NB.131/16D	Bolt, securing Dynamo Adjusting Link and Timing Cover to Block	C.52	1		
NB.131/21D	Bolt, securing Water Pump and Timing Cover to Block	C.53	6		
FG.105/X C.2184	Washer, Spring, on Bolts Stud, in Front Cover, for attachment of Water Pump	C.54 C.55			
C.2183 C.2185 NN.131/L FG.105/X	Stud, Front Cover to Cylinder Block Stud, Front Cover to Oil Sump Nut on Studs Washer, Spring, under Nuts Stud, for attachment of Front Cover and Engine	C.56 C.57 C.58 C.59 C.60	4 9 9		:: .
C.2409 C.2410	Place Stud, for attachment of Front Cover and Engine	C.61	1	Fitted from Eng. No. W.1001 to W.1913	
C.4761 NN.137/L	Plate Stud, for attachment of Front Cover and Engine Plate Nut on Studs	C 45	5 5	Fitted to Eng. No. W.1914 and subs.	
C.2286 C.2155	Link, Adjusting Dynamo Piece, Distance, behind Adjusting Link	C.62 C.63			

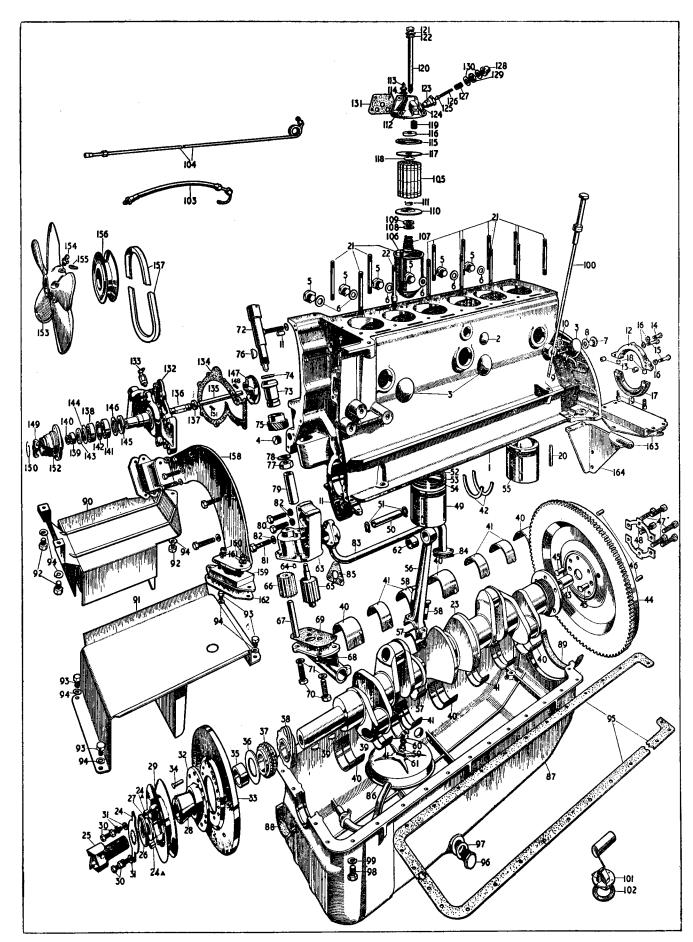


PLATE A.

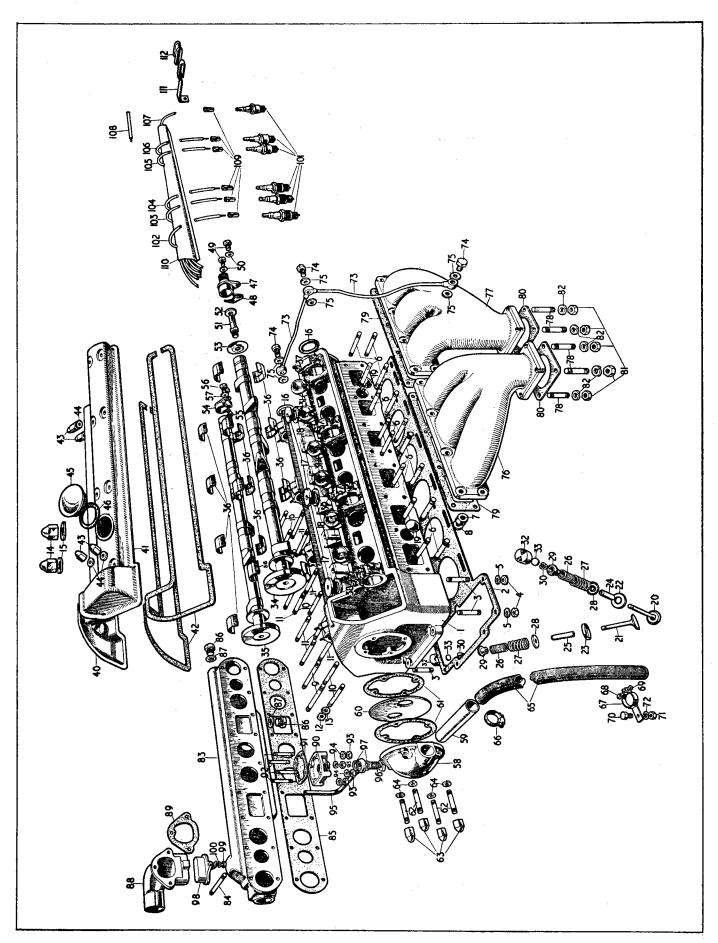


PLATE B.

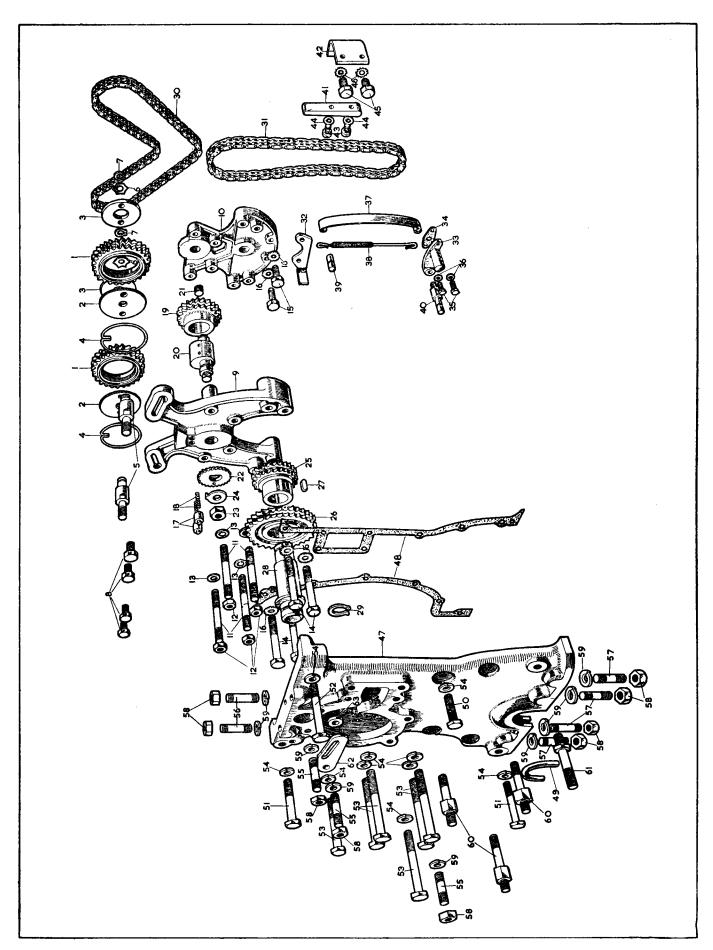


PLATE C.