KES

		BRAKES FOR CHASSIS NG 660001 TO 660979 669001 TO 669002 679001 TO 67962
Description.	Plate No.	No. per Unit. Remarks.
FRONT BRAKE ASSEMBLY, R.H. (LOCKHEED 28165)		1 For Chassis Nos. to which these Assemblie apply, please refer to BRAKE SHO
FRONT BRAKE ASSEMBLY, L.H. (LOCKHEED 28166)	Q.1	ASSEMBLIES 28177 AND 28356 OI PAGE 34
Backplate, R.H. (28159)	Q.2	1
Backplate, L.H. (28160) Wheel-Cylinder Assembly (25452)	~ ~	1 4
Nut, Plain, securing Wheel Cylinders (K.18609) Washer, Spring, under Nuts (K.19208)	Q.3 Q.4	12 12
Pipe, connecting Top and Bottom Wheel Cylinders (Lockheed T4/10B)	Q.5	2
Shoe Assembly (28177)	Q.6	For Chassis Nos. to which these Shoes ar fitted, SEE FRONT BRAKE SHO
Shoe Assembly (28356) Adjuster, Micram. (21787)	Q.6 Q.7	4 ASSEMBLY ON PAGE 34
Mask (22459) Spring, Pull-off, for Brake Shoes (24701)	Q.8 Q.9	4
Scoop, Air, Assembly, R.H.	Q./	1
Scoop, Air, Assembly, L.H. Rivet, Pop, securing Air Scoops (28392)		1 8
FRONT BRAKE ASSEMBLY, R.H. (LOCKHEED 29483)		1
FRONT BRAKE ASSEMBLY, L.H. (LOCKHEED 29484)		Fitted from Chassis No. 1 660557 to 660979 669001 to 669002 671097 to 672048 679001 to 679621
Shoe Assembly (29477) All other Spares as for Assemblies C.3889 and C.3890		4
AIR SCOOP ASSEMBLY, R.H.		1]
AIR SCOOP ASSEMBLY, L.H.	Q.10	1 For Chassis Nos. to which these Assemblie
Scoop only, R.H.	Q.11	apply, please refer to BRAKE SHO
Scoop only, L.H. Stone-Guard	Q.12	1 PAGE 34
Clip, Spring, retaining Stone-Guards Rivet, Semi-Tubular, securing Clips	Q.13	2 4
FRONT WHEEL-CYLINDER ASSY. (25452)		4
Body only (complete with Bolts and Abutment	Q.14	4
Strips) (25410) Piston and Dust Cover (22619)	Q.15	4
Cup (2762) Filler, Cup (22118)	Q.16 Q.17	4 4 ALTERNATIVE TO 29660
Filler, Cup (29660) Spring, for Cup Filler (30977)	-	4 ALTERNATIVE TO 22118 AS A UNI 4 NOT SUPPLIED SEPARATELY
Banjo for Top Left Hand Front Wheel Cylinder		1
(Lockheed 22863) Banjo for Top Right Hand Front Wheel Cylinder	Q.18	1
(Lockheed 22864) Banjo for Bottom Wheel Cylinders (Lockheed		2
22865)	Q.19	
Bolt for Banjos (Lockheed 10543) Gasket (Small) for Wheel Cylinders (Lockheed KL.44518)	Q.20 Q.21	4 2
Gasket (Large) for Wheel Cylinders (Lockheed KL.44522)	Q.22	2
NL.17322) Screw Bleeder in bottom Wheel Cylinders /Lock	0.22	0

KL.44522) Screw, Bleeder, in bottom Wheel Cylinders (Lock-heed 12272) C.3908 Q.23

Part No.

C.3889

C.3890

7403

2007 2014 2021 C.3525 C.3603

7406

C.4816

C.4817

1933

C.3525 C.3603

C.3526 C.3604 C.3527 C.3528 C.3813

2037

2025

2098 C.3905 C.3904 C.3907

C.3906 C.3925 C.3926

2

 FOR CHASSIS No.

 660001 TO 660979
 670001 TO 672048

 669001 TO 669002
 679001 TO 679621

Part No.	Description.	Plate No.	No. per Unit.	r Remarks.
2042	FRONT BRAKE SHOE ASSEMBLY (28177)	Q.6	4	Fitted from Chassis No. 660001 to 660209 Also to 660212, 660214, 660215, 660217,
1905 2585	Linings only (28176) Rivet, securing Linings (KLB.48043)		4 56	660220, 660222, 660223 670001 to 670591 Also to 670593 to 670601, 670603 to 670638 670640, 670643 to 670662, 670664 tt 670667, 670670 to 670690, 670692, 670695 670698, 670699, 670703, 670713, 670715 670720, 670727, 670729, 670731 to 670733 670735, 670737 to 670739, 670742 tt 670744, 670748 to 670761, 670780, 67079 to 670797, 670799 to 670858, 670875 670880
7403	FRONT BRAKE SHOE ASSEMBLY (28356)	Q.6	4	Fitted to the following Chassis Nos. : 660210, 660211, 660213, 660216, 660218 660219, 660221, 660224, 660225, 660226
450 2585	Linings only (28355) Rivet, securing Linings (KLB.48043)		4 68	660227 to 660556 670592, 670602, 670639, 670641, 670642 670663, 670668, 670669, 670691, 670693 670694, 670696, 670697, 670700 to 670702 670704 to 670712, 670714, 670716 to 670719, 670721 to 670726, 670728, 670730 670734, 670736, 670740, 670741, 670743 to 670747, 670762 to 670779, 670781 to 670794, 670798, 670859 to 670874, 670876 to 670879, 670881 to 671096
1933	FRONT BRAKE SHOE ASSEMBLY (29477)		4]	Fitted from Chassis No. 660557 to 660979 669001 to 669002
505 2585	Linings only (29476) Rivet, securing Linings (KLB.48043)		4 68	671097 to 672048 679001 to 679621
C.3891	REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 28169)		1	FOR USE WITH E.N.V. AXLES ONLY For Chassis Nos. to which these Assemblie apply, please refer to BRAKE SHOP
C.3892	REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 28170)	Q.24	1]	ASSEMBLIES 28177 AND 28356 ON PAGE 34A
1096 1187 1302	Backplate, R.H. (28163) Backplate, L.H. (28164) Wheel-Cylinder (28175)	Q.25	1 1 2	
2042 1933 7403 7404 2005 2020 2014 7405 1020	Shoe Assembly (Leading) (28177) Shoe Assembly (Trailing) (28178) Shoe Assembly (Leading) (28356) Shoe Assembly (Leading) (28357) Boot for Wheel Cylinders (21740) Adjuster, Micram. (23978) Mask (22459) Abutment (28490) Screw, Set, securing Abutment to Backplate	Q.26 Q.27 Q.26 Q.27 Q.28 Q.29 Q.30 Q.31 Q.32	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 4	For Chassis Nos. to which these Shoes ar fitted, SEE REAR BRAKE SHOE ASSEMBLIES ON PAGE 34A
1930 1987 2012 2021	(K.11804) Washer, Spring, on Setscrews (K.19209) Spring, Tension (21935) Spring, Pull-off (24701)	Q.32 Q.33 Q.34 Q.35	4 2 2	


FOR CHASSIS No.

			66000 66900	TO 660979 670001 TO 672048 TO 669002 679001 TO 679621
Part No.	Description.	Plate No.	No. per Unit.	Remarks.
1302	REAR WHEEL CYLINDER ASSEMBLY (28175)		2	
2024 2016 2762 2013 2098 2098 2003 1224 2004	Body only (25409) Piston and Dust Cover (22625) Cup (2762) Filler, Cup (22118) Filler, Cup (29660) Spring for Cup Filler (30977) Piston, Hydraulic (21735) Lever for Handbrake Operation (28174) Pin for Handbrake Lever (21737)	Q.36 Q.37 Q.38 Q.39 Q.40 Q.41 Q.42	2 }	ALTERNATIVE TO 29660 ALTERNATIVE TO 22118 AS A UNIT NOT SUPPLIED SEPARATELY
2654	REPAIR KIT FOR SERVICING REAR WHEEL CYLINDER 28175 (KL.71470)		2	
C.3907 C.3906 C.3925	Banjo for Rear Wheel Cylinders (Lockheed 22865) Bolt for Banjos (Lockheed 10543) Gasket (Small) for Wheel Cylinders (Lockheed	Q.43 Q.44 Q.45	2 2 2	
C.3926	KL.44518) Gasket (Large) for Wheel Cylinders (Lockheed	Q.46	2	
C.3908	KL.44522) Screw, Bleeder, for Wheel Cylinders (Lockheed 12272)	Q.47	2	
2042	LEADING-SHOE ASSEMBLY (REAR BRAKES) (28177)	Q.26	2 F	Fitted from Chassis No. 660001 to 660209
1933	TRAILING-SHOE ASSEMBLY (REAR BRAKES) (28178)	Q.27	2	Also to 660212, 660214, 660215, 660217, 660220, 660222, 660223 670001 to 670591
1905 2585	Linings (28176) Rivet, securing Linings (KLB.48043)		4 56	Also to 670593 to 670601, 670603 to 670638, 670640, 670643 to 670662, 670664 to 670667, 670670 to 670690, 670692, 670695, 670698, 670699, 670703, 670713, 670715, 670720, 670727, 670729, 670731 to 670733, 670735, 670737 to 670739, 670742 to 670744, 670748 to 670761, 670780, 670795 to 670797, 670799 to 670858, 670875, 670880
7403	LEADING-SHOE ASSEMBLY (REAR BRAKES) ₍₂₈₃₅₆₎	Q.26	2	Fitted to the following Chassis Nos. : 660210, 660211, 660213, 660216, 660218, 660219, 660221, 660224, 660225, 660226
740 4	TRAILING-SHOE ASSEMBLY (REAR BRAKES) (28357)	Q.27	2	660227 to 660979 670592, 670602, 670639, 670641, 670642 670663, 670668, 670669, 670691, 670693
450 2585	Linings (28355) Rivet, securing Linings (KLB.48043)		4 68	670694, 670696, 670697, 670700 to 670702 670704 to 670712, 670700 to 670702 670719, 670721 to 670726, 670728, 670730 670734, 670736, 670740, 670741, 670745 to 670747, 670762 to 670779, 670781 to 670794, 670798, 670859 to 670874, 670876 to 670879, 670881 to 672048

669001 to 669002, 679001 to 679621

FOR CHASSIS No. 660001 TO 660979 669001 TO 669002 670001 TO 672048 679001 TO 679621

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.6774	REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 30422)		1	FOR USE WITH SALISBURY REAR AXLE ONLY from Chassis No.
C.6775	REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 30423)		1	660935 to 669001 to 669002 671797 to 672048 679222 to 679621
693 2053 - 1302 1933 2042 2005 2020 2014 2012 2021 2021 2028	Backplate, R.H. (30200) Backplate, L.H. (30201) Wheel Cylinder Assembly (28175) Shoe Assembly, Leading (29477) Shoe Assembly, Trailing (29478) Boot for Wheel Cylinders (21740) Adjuster, Micram (23978) Mask (22459) Spring, Tension (21935) Spring, Pull-off (24701) Spring, ''Beehive'', steadying Shoes (21792)		1 2 2 2 2 2 2 2 2 2 2 2 2 2 4	
1302	REAR WHEEL CYLINDER ASSEMBLY (28175)		2	
	For Spares items, see page 34A			
1933	LEADING SHOE ASSY. (REAR BRAKES) (29477)		2	
2042	TRAILING SHOE ASSY. (REAR BRAKES) (29478)		2	
505 2585	Linings only (29476) Rivet, securing Linings (KLB.48043)		4 56	
	NOTE.—Between Chassis No. 660935 to 660979; 671797 to 672048; 669001 to 669002 and 679001 to 679621, either E.N.V. or Salis- bury Rear Axles may be fitted. Care should therefore be exercised when ordering Rear Brake Assemblies			
C.7228	BRAKE DRUM (FRONT AND REAR)	Q.48	4	FOR USE WITH "DISC" TYPE ROAD
C.3078	Screw, Set, locating Brake Drums on Hubs	Q.49	8 20	WHEELS ONLY

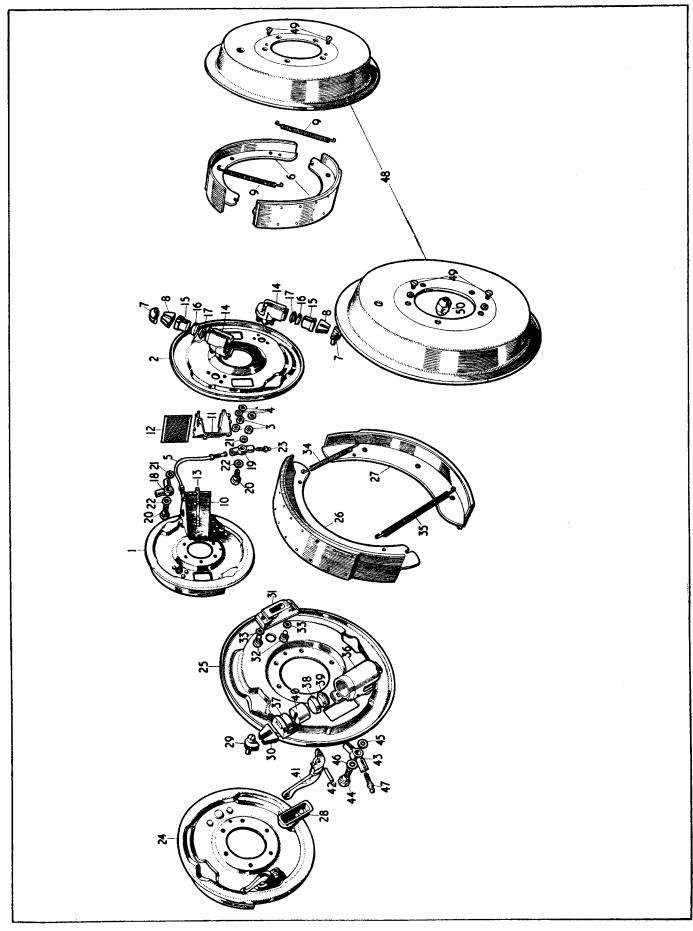

FOR CHASSIS No.

 660980 AND SUBS.
 672049 AND SUBS.
 669003 AND SUBS.<

667001 AND SUBS. 677001 AND SUBS.

T.

Part No.	Description.	Plate No.	No. pei Unit.	r Remarks.
C.6667	FRONT BRAKE ASSEMBLY, R.H. (LOCK- HEED 30638)	AQ.1	1]	Fitted from Chassis No. 660980 to 661086 669003 to 669033
C.6668	FRONT BRAKE ASSEMBLY, L.H. (LOCK- HEED 30639)		1	672049 to 674075 667001 only 677001 to 677491
178	Backplate only, R.H. (30636)		1	
1179 1269	Backplate only, L.H. (30637) Shop Assembly (31269)	AQ.2	1	
173	Shoe Assembly (31269) Spring, Pull-Off, for Front Brake Shoes (30628)	AQ.3 AQ.3A	4 4	
195	Bar for Automatic Shoe Adjustment (31057)	AQ.4	4	
198 330	Pad, Friction, at each side of Bar (31059) Plate (bottom) enclosing Friction Pads (34015)	AQ.5 AQ.6	8 4	
333	Plate (top) enclosing Friction Pads (34016)	AQ.6A	4	
197 205	Boit, securing Friction Pads and Plates to Bars (31058) Spring, Coil, on Bolts (31061)	AQ.7 AQ.8	4 4	
N.405/L	Nut, Slotted, on Bolts (31705)	AQ.9	4	
.101·5/6U	Pin, Split, retaining Slotted Nut (K.19803)	AQ.10	4	
172 328	Spring, Ratchet, operating Shoe adjustment (30627) Pin, anchoring Bar to Brake Shoes (33453)	AQ.11 AQ.12	4 4	
983	Washer, Plain on Anchor Pin (K.19109)	AQ.13	4	
.402 168	Circlip, retaining Anchor Pin (KL.40002) Pin, Anchor, in Backplates, for Pull-Off Spring (30619)	AQ.14 AQ.15	4 4	
N.105/L	Nut on Ánchor Pins (K.18609)	AQ.16	4	
G.105/X 177	Washer, Spring, under Nuts (K.19208) Wheel Cylinder Assembly (30635)	AQ.17 AQ.18	4 4	
C.7824	FRONT BRAKE ASSEMBLY, R.H. (LOCKHEED 35428)		1	Fished on Charain Na
2.7825	FRONT BRAKE ASSEMBLY, L.H. (LOCKHEED 35429)		1	Fitted to Chassis No. 661087 and subs. 669034 and subs. 674076 and subs. 681207 and subs. 667002 and subs. 677492 and subs.
1344	Shoe Assembly (35130) NOTE.—All other items as for assemblies C.6667 or C.6668 respectively		4]	
2.3924	Bridge-Pipe, connecting Wheel Cylinders on Front Brakes (T.4/10B)	AQ.19	2	
177	FRONT WHEEL CYLINDER ASSEMBLY (30635)	AQ.18	4	
174	Body only (complete with Bolts and Abutment Strips) (30629)	AQ.20	4	
175	Piston (30631)	AQ.21	4	
762 098	Seal (2762) Filler for Seal (29660)	AQ.22	4 4)	
098	Spring for Filler (30977)	AQ.23 AQ.23A		NOT SUPPLIED SEPARATELY
176 699	Boot (Rubber) over end of Piston (30632) Clip, securing Boot (31127)	AQ.24 AQ.25	4 4	
655	REPAIR KIT FOR SERVICING FRONT WHEEL CYLINDER 30635 (KL.71490)		2	
C.3904 C.3905 C.3907 C.3906 C.3925 C.3926	Banjo for Top R.H. Front Wheel Cylinder (22864) Banjo for Top L.H. Front Wheel Cylinder (22863) Banjo for Bottom Front Wheel Cylinders (22865) Bolt, securing Banjos (10543) Gasket (Small) on Banjo Bolts (KL.44518) Gasket (Large) on Banjo Bolts (KL.44522)	AQ.26 AQ.27 AQ.28 AQ.29 AQ.30	1 1 2 4 4 4	
2.3928	Screw, Bleeder, in Banjo on Bottom Wheel Cylinders (12272)	AQ.30 AQ.31	2	

FOR CHASSIS No. 667001 AND SUBS.


660980 AND SUBS. 669003 AND SUBS.

672049 AND SUBS. 679622 AND SUBS.

677001 AND SUBS.

Part No.	Description.	Plate No.	No. p Unit	
4269	FRONT BRAKE SHOE ASSEMBLY (31269)	AQ.3	4]	Fitted from Chassis No.
4184 2586	Linings only (M.14) (30725) Rivet, securing Linings (KLB.48045)		4 48	660980 to 661086 669003 to 669033 672049 to 674075 679622 to 681206 667001 only 677001 to 677491
4343	FRONT BRAKE SHOE ASSEMBLY (35130)		4	Fitted to Chassis No. 661087 and subs. 669034 and subs.
4344 2586	Linings only (M.20) (35129) Rivet, securing Linings (KLB.48045)		4 48	674076 and subs. 681207 and subs. 667002 and subs. 677492 and subs.
C.6674	REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 31415)	AQ.32	1	FOR USE ONLY WHEN SALISBURY REAR AXLE IS FITTED
C.6675	REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 31416)		1	For Chassis No. 660980 to 661086 669003 to 669033 672049 to 674075 679622 to 681206 667001 only 677001 to 677491
4326 4273 4269	Backplate only, R.H. (31393) Backplate only, L.H. (31394) Shoe Assembly (31269)	AQ.33 AQ.34	1 1 4	
2008 4180 4181	Spring, ''Beehive'' Steadying Shoes (21792) Spring, Pull-Off (Adjuster side) (30708) Spring, Pull-Off (Wheel Cylinder side) (30709)	AQ.35 AQ.36 AQ.37	4 2 2	
4483 4484 4268	Adjuster Assy., on R.H. Rear Brake (30731) Adjuster Assy., on L.H. Rear Brake (30732) Screw, Set, securing Adjusters (31265)	AQ.38 AQ.39	1 1 4	
FG.106/X 5885 2005	Washer, Spring, on Setscrews (K.19209) Wheel Cylinder Assembly (30730) Boot for Rear Wheel Cylinders (21740)	AQ.40 AQ.41 AQ.41	4 2 2	
C.7826	REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 35430)		1]	FOR USE ONLY WHEN SALISBURY
C.7827	REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 35431)		1	REAR AXLE IS FITTED to Chassis No 661087 and subs. 669034 and subs. 674076 and subs. 681207 and subs. 667002 and subs. 677492 and subs.
4343	Shoe Assembly (35130)		4	
	NOTE.—All other items as for assemblies C.6674 or C.6675 respectively		-	
4483	ADJUSTER ASSEMBLY ON R.H. REAR BRAKE (30731)		1]	FOR USE ONLY WITH SALISBURY
4484	ADJUSTER ASSEMBLY ON L.H. REAR BRAKE (30732)	AQ.38	1	REAR AXLE
4187 4183 4182 4215	Body only (complete with Abutment Strip) (30754) Screw , operating Brake Shoe Adjustment (30722) Whee! Assy. , operating Screws (30717) Bracket for Adjuster (31185)	AQ.42 AQ.43 AQ.44 AQ.45	2 2 2 2	
4216	Spring "Clicker" (31186)	AQ.46	2 2	
4213 4263	Plate and Pinion, under "Clicker" Spring (31184) Spring, Coil, under Plate and Pinion (31187)	AQ.47 AQ.48	2	
4321	Screw, Set, securing Bracket and "Clicker" Spring to Adjuster Body (33125)	AQ.49	4	
4319 4264	Plate, locking Setscrews (33110) Stud, for Screwdriver adjustment through Brake Drum (31188)	AQ.50 AQ.51	2 2	
5885	REAR WHEEL CYLINDER ASSEMBLY (30730)	AQ.41	2	FOR USE ONLY WITH SALISBURY REAR AXLE
2024	Body only (complete with Abutment Strip) (25409)	AQ.52	2	
4185 2003	Piston (complete with Dust Cover) (30728) Piston, Hydraulic (21735)	AQ.53 AQ.54	2 2	
2762	Seal, behind Hydraulic Piston (2762)	AQ.55	2	
2098 2098	Filler for Seal (29660) Spring for Filler (30977)	AQ.56 AQ.56/	$\begin{pmatrix} 2\\2 \end{pmatrix}$	NOT SUPPLIED SEPARATELY
122 4	Lever for Handbrake operation (28174)	AQ.57	2	
2004	Pin, Fulcrum, securing Handbrake Levér (21737)	AQ.58	2	

	D SUBS. 679622 AND SUBS. 677001 AN	Diasa	N=	
Part No.	Description.	Plate No.	No. pe Unit.	
2654	REPAIR KIT FOR SERVICING REAR WHEEL CYLINDER 30730 OR 28175 (KL.71470)		2	
C.3907 C.3906 C.3925 C.3926 C.3908	Banjo for Rear Wheel Cylinders (22865) Bolt, securing Banjos (10543) Gasket (Smali) on Banjo Bolts (KL.44518) Gasket (Large) on Banjo Bolts (KL.44522) Screw, Bleeder, in Banjo (12272)	AQ.59 AQ.60 AQ.61 AQ.62 AQ.63	2 2 2 2 2	
4269	REAR BRAKE SHOE ASSEMBLY (31269)	AQ.34	4	FOR USE ONLY WHEN SALISBURY REAR AXLE IS FITTED for Chassis No.
4184 2586	Linings only (M.14) (30725) Rivet, securing Linings (KLB.48045)		4 48	660980 to 661086 669003 to 669033 672049 to 674075 679622 to 681206 667001 only 677001 to 677491
4344	REAR BRAKE SHOE ASSEMBLY (35130)		4	FOR USE ONLY WHEN SALISBURY REAR AXLE IS FITTED to Chassis No.
4343 2586	Linings only (M.20) (35129) Rivet, securing Linings (KLB.48045)		4 48	661087 and subs. 669034 and subs. 674076 and subs. 681207 and subs. 667002 and subs. 677492 and subs.
C.7228	BRAKE DRUM (FRONT AND REAR)	Q.48	4	
2.3078 2.3041	Screw, Set, locating Brake Drums on Hubs Nut, securing Brake Drums on Hub Studs	Q.49 Q.50	8 20	
C.4818	REAR BRAKE ASSEMBLY, R.H. (LOCKHEED 34505)		1]	FOR USE ONLY WHEN E.N.V. REAR AXLE IS FITTED for Chassis No.
C.4819	REAR BRAKE ASSEMBLY, L.H. (LOCKHEED 34506)		1	660980 and subs. 669003 and subs. 672049 and subs. 679622 and subs.
1096 1187 1313 1314 2001 2012 2012 2020 FN.106/L FG.106/X 302 2005	Backplate only, R.H. (28163) Backplate only, L.H. (28164) Shoe Assembly, Leading (33029) Shoe Assembly, Trailing (33030) Spring, "Beehive", steadying Shoes (21686) Spring, Pull-off, for Shoes (24701) Spring, Tension, for Shoes (21935) Adjuster, Micram (23978) Nut, securing Adjusters (K.18611) Washer, Spring, under Nuts (K.19209) Wheel Cylinder Assembly (28175) Boot for Wheel Cylinders (21740)		1 1 2 2 4 2 2 2 4 4 2 2	
1302	REAR WHEEL CYLINDER ASSEMBLY (28175)		1	FOR USE ONLY WHEN E.N.Y. REAR AXLE IS FITTED
2024 2016 2762 2098 2098 2003 1224 2004	Body only (25409) Piston and Dust Cover (22625) Cup (2762) Filler, Cup (29660) Spring for Cup Filler (30977) Piston, Hydraulic (21735) Lever for Handbrake operation (28174) Pin for Handbrake Lever (21737)		2 2 2 2 2 2 2 2 2 2 2 2 2 2	
1313	LEADING-SHOE ASSY. (REAR BRAKES) (33029)		2	FOR USE ONLY WHEN E.N.V. REAR
1314	TRAILING-SHOE ASSY. (REAR BRAKES) (33030)		2	AXLE IS FITTED
7402 2585	Linings only (33028) Rivet, securing Linings (KLB.48043)		4 56	

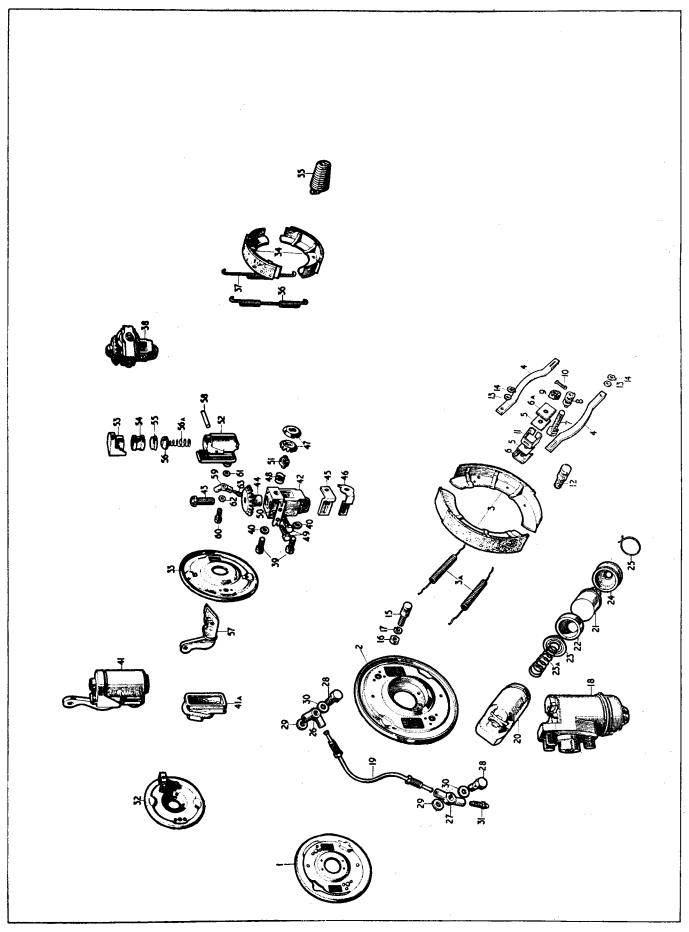

FOR CHASSIS No. 660001 TO 660979 669001 TO 669002 670001 TO 672048 679001 TO 679621

Part No.	Description.	Plate No.	No. pei Unit.	Remarks.
C.3222	BRAKE PEDAL	R.1	1	RIGHT HAND DRIVE ONLY
.3221	BRAKE PEDAL	R.2	1	For Chassis No. 660001 to 660058 LEFT HAND DRIVE ONLY
.4030	BRAKE PEDAL		1	For Chassis No. 670001 to 670184 RIGHT HAND DRIVE ONLY For Chassis No.
.4031	BRAKE PEDAL		1	660059 to 660979 669001 to 669002 LEFT HAND DRIVE ONLY For Chassis No.
	Bearing Pollon inside Podel Port	R.3	4	670185 to 672048 670001 to 679621
.3224	Bearing, Roller, inside Pedal Boss Sleeve for Roller Bearing	R.4	1 I	
3363	Nipple, Grease (Tec. NA.5790) on Pedal Boss	R.5	i	
S.131/12D	Bolt, Stop, for Pedal	R.6	1	
N.231/L	Nut, locking Stop Bolt	R.7	1	
3709	Bracket, Support, between Pedal Shaft and Master Cylinder	R.8	1	Fitted from Chassis No. 660001 to 660058 670001 to 670184
.4032	Bracket, Support, between Pedal Shaft and Master Cylinder		1	Fitted to Chassis No. 660059 to 660979 669001 to 669002
N.143/L	Nut, securing Brake Pedal and Support Bracket to		1	670185 to 672048 679001 to 679621
	Shaft			
.3361 .3317	Shaft for Brake Pedai Spring, Return, for Brake Pedal	R.9 R.10	1	LEFT HAND DRIVE ONLY
3252	Fork-End, connecting Pedal with Push Rod on Master Cylinder	R.11	i	
106/175	Pin, Clevis, through Pedal and Fork-End	R.12	1	
V.106/T 103/7U	Washer, Plain, on Clevis Pin Pin, Split, through Clevis Pin	R.13 R.14	1 1	
3601	BRAKE PEDAL STEM AND PLATE ASSY.	R.15	1	
2	Pad (Rubber) on Stem Plate	R.16	. 1	
.3673	Excluder, Draught, on Pedal Stem	R.17	1	Fitted from Chassis No. 660001 to 660058 670001 to 670184
.4036	Excluder, Draught, on Pedal Stem		1	Fitted to Chassis No. 660059 to 660979 669001 to 669002 670185 to 672048 679001 to 679621
B.131/10D	Bolt, securing Stem to Pedal	R.18	1	0/0103 10 0/2010 0/9021
N.131/L	Nut on Bolt	R.19	1	
740	Washer, Shakeproof, under Nut	R.20	1	
.3858	BRAKE MASTER CYLINDER ASSEMBLY (LOCKHEED 24404)	[•] R.21	1	
367	Cylinder and Tank (complete with Plug) (28928)	R.22	1	
5	Cup (112)	R.23	1	
0	Cup, secondary (400)	R.24	1	
98	Piston (21421)	R.25	1	N
02	Washer, retaining Piston (1002)	R.26	1	
71 97	Circlip for Piston Retaining Washer (KL.47011) Spring (21412)	R.27 R.28	1	
30	Valve Assembly (3830)	R.29	1	
7	Boot (437)	R.30	1	
19	Plug in Cylinder (23558)	R.31	1	
40 45	Gasket for Plug (KL.44542) Cap, Filler (15097)	R.32 R.33	1	
42	Gasket for Filler Cap (KL.44547)	R.34	1	
99	Push-Rod (21422)	R.35	1	
53	REPAIR KIT FOR SERVICING MASTER CYLINDER C.3858 (KL.71410)		1	
.3899	Banjo for Master Cylinder (Lockheed 23776)	R.36	1	RIGHT HAND DRIVE ONLY
	Banjo for Master Cylinder (Lockheed 20770)	R.37	1	LEFT HAND DRIVE ONLY
	Bolt for Banjo (Lockheed 8048)	R.38	1	
	Gasket (Small) for Banjo (Lockheed KL.44518)	R.39	1	
.3925		D /A	4	
.3900 .3925 .3926 .3901	Gasket (Large) for Banjo (Lockheed KL.44522)	R.40 R 41	1	
.3925		R.40 R.41 R.42	1 1 1	

FOR CHASSIS No. 670001 TO 672048 679001 TO 679621

660001 TO 660979 669001 TO 669002

rt No.	Description.	Plate No.	No. p Unit	
	BRAKE MASTER CYLINDER ASSY. (conti	nued)		
2007	Gasket (Small) for Banjo (Lockheed KL.44519)	R.44	1	
.3927 .3928	Gasket (Large) for Banjo (Lockheed KL.44524)	R.45	i	
3857	Rod, Operating, for Master Cylinder	R.46	1	
1.206/L	Nut. Lock, on Operating Rod	R.47	2	
.137/24D	Bolt, securing Master Cylinder to Support Bracket and Frame	R.48	2	
N.137/L	Nut on Bolts	R.49	2	SUPERSEDED BY C.4105
741 4105	Washer, Shakeproof, on Bolts Plate, Tapped, for Master Cylinder Bolts	R.50	2 1	SUPERSEDES NUT NN.137/L
3960	SHIELD ASSEMBLY FOR MASTER	R.51	1	LEFT HAND DRIVE ONLY
05.40	CYLINDER		1	
3540	SUPPLY TANK ASSEMBLY (GIRLING H.2812)		ſ	
3609	Glass Body only (Girling 48/MQ/201)	R.52	1	
)7	Adapter, Outlet (H.2811)	R.53	1	
7	Nut, securing Outlet Adapter (H1253)	R.54	1	
	Washer under Nut (190) (45/BS/5)	R.55	1	
8	Washer, Jointing, on each side of Body (H.2620)	R.56 R.57	2 1	
1	Cover, Top (H.1792) Cap on Top Cover (H.1470)	R.57	1	
6 2	Washer, Jointing, between Top Cover and Body	R.59	i	
3	(H.1794) Clip Assy., supporting Supply Tank (H.2276)	R.60	1	
83	Screw, securing Top Cover to Clip Assy. (H.1796)	R.61	4	
4	Nut on Screws (30/BS/123)	R.62	4	
125/4D	Screw, securing Clip Assy. to Scuttle	R.63	2	
1.125/L	Nut on Setscrews	R.64	2	
24	Washer, Shakeproof, under Nuts	R.65	2	
3730	LOW PRESSURE PIPE (RUBBER) FROM SUPPLY TANK (LOCKHEED 16741)	R.66	1	
3738	Clip on Low Pressure Pipe (Lockheed 20203)	R.67	2	
	HYDRAULIC PIPES AND FITTINGS			RIGHT HAND DRIVE ONLY
3141	Pipe from Master Cylinder to Low Pressure Hose	R.68	1	
3922	(Lockheed T.865/B) Union, 3-Way, on R.H. side of Chassis Frame	R.69	1	
3722	(Lockheed 7965)			
.106/4D	Screw, Set, securing 3-Way Union	R.70	1	
726	Washer, Shakeproof, on Setscrew	R.71	1	
3948	Pipe from Master Cylinder to Front 3-Way Union (Lockheed T.4/21B)	R.72	1	
3913	Pipe from Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B)	R.73	1	
3914	Pipe from Front 3-Way Union to L.H. Front Hose	R.74	1	
3909	(Lockheed T.4/35B) Hose Assembly from Supply Pipes to Front Back-	R.75	2	
3910	plates (Lockheed KL.48924) Locknut, securing Hose Assemblies to Brackets	R.76	2	
	(Lockheed 23897)	R.77	2	
0044	Washer, Shakeproof, under Locknuts (Lockheed	1.77		
	K.19411)		2	
3925	Gasket for Hose Assemblies (Lockheed KL.44518)	R.78 R.79	1	
3925	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B)	R.79	1	
3925 3918	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248)	R.79 R.80	1 1	
3925 3918 3923	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lock-	R.79	1	
3925 3918 3923 3920	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lock- heed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way	R.79 R.80	1 1	
3925 3918 3923 3920 3909	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lock- heed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on	R.79 R.80 R.81	1 1 1	
3911 3925 3918 3923 3920 3909 3910 3911	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Pipe from Tube Connector to Rear Hose (Lock- heed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on Frame (Lockheed 23897)	R.79 R.80 R.81 R.82	1 1 1	
3925 3918 3923 3920 3909	Gasket for Hose Assemblies (Lockheed KL.44518) Pipe from Master Cylinder to Tube Connector (Lockheed T.4/46B) Tube Connector (Lockheed 5248) Pipe from Tube Connector to Rear Hose (Lock- heed T.4A/40B) Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924) Locknut, securing Hose Assembly to Bracket on	R.79 R.80 R.81 R.82 R.83	1 1 1 1	

FOR CHASSIS No.

000001	10	0007/7	070001	10	0/2040
669001	то	669002	679001	то	679621

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
	HYDRAULIC PIPES AND FITTINGS	(continued))	RIGHT HAND DRIVE ONLY
NB.125/10D	Bolt, securing 3-Way Union to Bracket on Rear Axle	R.87	1	
NN.125/L	Nut on Bolt	R.88	1	
C.724 [′]	Washer, Shakeproof, under Nut	R.89	1	
C.3916	Pipe from Rear 3-Way Union to R.H. Rear Wheel Cylinder (Lockheed T.4/24B)	R.90	1	
C.3917	Pipe from Rear 3-Way Union to L.H. Rear Wheel Cylinder (Lockheed T.4/47B)	R.91	1	
C.3529	Clip, securing Pipes to Chassis Frame (Trimount 304)	R.92	7	

HYDRAULIC PIPES AND FITTINGS

C.3896	Pipe from Master Cylinder to Low Pressure Hose	R.93
	(Lockheed T.869/B)	
C.3922	Union, 3-Way, on L.H. and R.H. sides of Chassis Frame (Lockheed 7965)	R.94
FS.106/4D	Screw, Set, securing 3-Way Unions	R.70
C.726	Washer, Shakeproof, on Setscrews	R.71
C.3912	Pipe from Master Cylinder to L.H. Front 3-Way Union (Lockheed T.4/21B)	R.95
C.3913	Pipe from L.H. 3-Way Union to L.H. Front Hose (Lockheed T.4/12B)	R.96
C.3909	Hose Assembly from Supply Pipes to Front Back- plates (Lockheed KL.48924)	R.75
C.3910	Locknut, securing Hose Assemblies to Brackets (Lockheed 23897)	R.76
C.3911	Washer, Shakeproof, under Locknuts (Lockheed K.19411)	R.77
C.3925	Gasket for Hose Assemblies (Lockheed KL.44518)	R.78
C.3921	Pipe from L.H. Front 3-Way Union to R.H. Front 3-Way Union (Lockheed T.4/27B)	R.97
C.3913	Pipe from R.H. Front 3-Way Union to R.H. Front Hose (Lockheed T.4/12B)	R.73
C.3919	Pipe from R.H. Front 3-Way Union to Tube Con- nector (Lockheed T.4A/66B)	R.98
C.3923	Tube Connector (Lockheed 5248)	R.80
C.3920	Pipe from Tube Connector to Rear Hose (Lock- heed T.4A/40B)	R.81
C.3909	Hose Assembly from Supply Pipe to Rear 3-Way Union (Lockheed KL.48924)	R.82
C.3910	Locknut, securing Hose Assembly to Bracket on Frame (Lockheed 23897)	R.83
C.3911	Washer, Shakeproof, under Locknut (Lockheed K.19411)	R.84
C.3925	Gasket for Hose Assembly (Lockheed KL.44518)	R.85
C.3916	Pipe from Rear 3-Way Union to R.H. Rear Wheel Cylinder (Lockheed T.4/24B)	R.90
C.3917	Pipe from Rear 3-Way Union to L.H. Rear Wheel Cylinder (Lockheed T.4/47B)	R.91
C.3529	Clip, securing Pipes to Chassis Frame (Trimount 304)	R.92

C.2958 BLEEDER TUBE AND CONTAINER (LOCKHEED 3919)

C.2957 WRENCH, OPERATING BLEEDER SCREW (LOCKHEED 13836)

LEFT HAND DRIVE ONLY


BRAKE CONTROLS 660001 TO 660979 FOR CHASSIS No. 670001 TO 672048

Part No.	Description.	Plate No.	No. pe Unit.	
2.3714	HANDBRAKE LEVER	R.99	1	RIGHT HAND DRIVE ONLY
C. 3272	HANDBRAKE LEVER	R.99	1	LEFT HAND DRIVE ONLY
	Rod, Operating, through Handbrake Lever	R.100	1 1	RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY
2.4169 2.606	Rod, Operating, through Handbrake Lever Spring, on Rod, at top of Lever	R.101	1	LEFT HAND DRIVE ONET
.3873	Knob on Operating Rod	R.102	1	
.3657	Pawl, on Rod, at bottom of Lever	R.103	1	
S.102/3D	Screw, Set, in Pawl Washer, Shakeproof, on Setscrew	R.104 R.105	1	
.723 B.131/12D	Bolt, securing Handbrake Lever to Shaft	R.105	ł	
IN.131/L	Nut on Bolt	R.107	Ť	
2.725 2.755	Washer, Shakeproof, under Nut Key, Woodruff, securing Handbrake Lever in position on Shaft	R.108 R.109	1 1	
3687	RATCHET FOR HANDBRAKE LEVER		1	Fitted from Chassis No.
				670001 to 670010
2.3805	RATCHET FOR HANDBRAKE LEVER	R.110	1	Fitted to Chassis No. 660001 and subs. 670011 and subs.
NB.125/5D	Bolt , securing Ratchet to Frame	R.111	2	
IN.125/L 2.724	Nut on Bolts Washer, Shakeproof, under Nut	R.112 R.113	2 2	
C.3654	SHAFT, SUPPORTING HANDBRAKE Lever	R.114	1	RIGHT HAND DRIVE ONLY
C. 36 55	SHAFT, SUPPORTING HANDBRAKE LEVER	R.114	1	LEFT HAND DRIVE ONLY
C.3656	OPERATING LEVER ON SHAFT	R.115	1	
NB.131/12D	Bolt, securing Operating Lever to Shaft		- 1	
NN.131/L	Nut on Bolt		1	
C.725 C.755	Washer, Shakeproof, under Nut Key, Woodruffe, securing Operating Lever in posi-	R.116	1 1	
C.3722	tion on Shaft Spring, at back of Operating Lever	R.117	1	
2.3722 2.3265	Trunnion in Operating Lever	R.118	i 1	
C.3875	COMPENSATOR ROD ASSEMBLY		1	Fitted from Chassis No. 670001 to 670010
C.3322	COMPENSATOR ROD ASSEMBLY	R.119	1	Fitted to Chassis No. 660001 and subs. 670011 and subs.
	Carlana Caranana Dad	R.120	4	
C 20/ 4		R 170	1	
	Spring on Compensator Rod Nut on Compensator Rod			
C.3266	Nut on Compensator Rod Pin, Clevis, securing Rod in Compensator	R.121 R.122	1	
C.3264 C.3266 J.106/10S FW.106/T L.103/6U	Nut on Compensator Rod	R.121	1 1 1	

FOR CHASSIS No.

660001 TO 660979 669001 TO 669002 679001 TO 672048 679001 TO 679621

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.3274/1	COMPENSATOR ASSEMBLY FOR HAND- BRAKE CABLE	R.125	1	
C.3872	HANDBRAKE CABLE ASSEMBLY,		1	Fitted from Chassis No. 670001 to 670010
	OPERATING REAR BRAKES			FOR USE WHEN E.N.V. REAR AXLE IS FITTED
C.3828	HANDBRAKE CABLE ASSEMBLY, OPERATING REAR BRAKES	R.126		Fitted to Chassis No. 660001 and subs. 670011 and subs. FOR USE WHEN E.N.V. REAR AXLE IS FITTED
C.6677	HANDBRAKE CABLE ASSEMBLY, OPERATING REAR BRAKES		1	FOR USE WHEN SALISBURY REAR AXLE IS FITTED
19 47	Grease Nipple on Handbrake Cable		2	
NB.131/9D NN.131/L C.740	Bolt, Clinch, at end of Cables Nut on Bolts Washer, Shakeproof, under Nuts		2 2 2	
J.105/11S FW.105/T	Pin, Clevis, securing Fork-End on Cables to Operat- ing Lever on Backplates Washer, Plain, on Clevis Pins	R.127 R.128	2 2	
L.103/7Ú	Pin, Split, through Clevis Pins	R.129	2	
C.3867	ABUTMENT BRACKET FOR HAND- BRAKE CABLE		1	Fitted from Chassis No. 670001 to 670010
C.5771	ABUTMENT BRACKET FOR HAND- BRAKE CABLE	R.130	1 • *	Fitted to Chassis No. 660001 and subs. 669001 and subs. 670011 and subs. 679001 and subs. 667001 and subs. 677001 and subs.
NB.131/11D NN.131/L	Bolt, Clinch, for Abutment Bracket Nut on Bolts	R.131 R.132	2 2	
C.725 NS.125/4D	Washer, Shakeproof, under Nuts Bolt, securing Abutment Bracket	R.133 R.134	2 4	
NN.125/L C.724 C 3617	Nut on Bolts Washer, Shakeproof, under Nuts Clin security Handbrake Cables and Hydroulis	R.135 R.136 P.127	4 4 3	
C.3617 NS.325/5H	Clip, securing Handbrake Cables and Hydraulic Pipes to Rear Axle Screw, Set, for Clip securing Pipe to Axle	R.137 R.138	3 1	
NS.325/8H NN.125/L	Screw, Set, for Clips securing Brake Cables to Axle Nut on Setscrews	R.139 R.140	23	
C.5066	RETURN SPRING FOR HANDBRAKE CABLE		2	

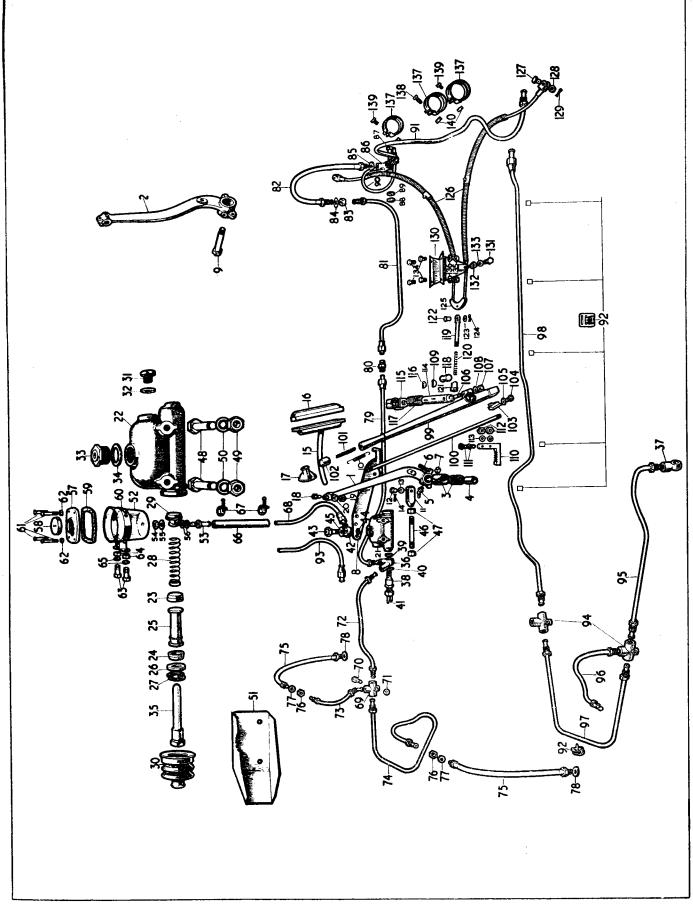

672049 AND SUBS.

679622 AND SUBS.

660980 AND SUBS. 669003 AND SUBS. FOR CHASSIS No. 667001 AND SUBS. 677001 AND SUBS.

Part No.	Description.	Plate No.	No. pe Unit.	r Remarks.
C.3222	BRAKE PEDAL	AR.1	1	RIGHT HAND DRIVE ONLY
				For Chassis No. 660980 and subs. 669003 and subs.
.3221	BRAKE PEDAL		1	LEFT HAND DRIVE ONLY
	DRARL FLUAL			For Chassis No. 672049 and subs. 677001 and subs.
.3223	Bearing, Roller, inside Pedal Boss	AR.2	1	679622 and subs.
.3224	Sleeve for Roller Bearing	AR.3	1	
.3363	Nipple, Grease (Tecalemit NA.5790) on Pedal Boss	AR.4	1	
IS.131/12D IN.231/L	Bolt, Stop, for Pedal Nut on Stop Bolt		1	
.6696	Bracket, Support, between Pedal and Master Cylinder	AR.5	1	
IN.143/L	Nut, securing Brake Pedal and Support Bracket to		1	
.3361	Shaft Shaft for Brake Pedal		1	LEFT HAND DRIVE ONLY
.4801	Spring, Return, for Brake Pedal	AR.6	1	
6761	Fork-End, connecting Pedal to Master Cylinder	AR.7	1	
106/17S	Pin, Clevis, through Pedal and Fork-End Washer, Plain, on Clevis Pin		1	
W.106/T .103/7U	Washer, Plain, on Clevis Pin Pin, Split, through Clevis Pin		1	
	BRAKE PEDAL STEM AND PLATE ASSEMBLY	AR.8	1	
	BRARE FEDAL STEM AND FLATE ASSEMBLT			
92	Pad (Rubber) on Stem Plate	AR.9 AR.10	1	
C.4036 NB.131/10D	Excluder, Draught, on Pedal Stem Bolt, securing Stem to Pedal	76.10	1	
NN.131/L	Nut on Boit		1	
.740	Washer, Shakeproof, under Nut		1	
6712	BRAKE MASTER CYLINDER ASSEMBLY (LOCKHEED 31526)	AR.11	1	
189	Cylinder only (30828)	AR.12	1	
279	Piston, Primary (31647)	AR.13	1	
280	Piston, Secondary (31648)	AR.14		
281 190	Spring, Coil, for Pistons (31649) Seal on Pistons (30832)	AR.15 AR.16		
002	Washer, Stop, in front of Primary Piston (1002)	AR.17		
572	Circlip, retaining Stop Washer (1012)	AR.18		
192	Stop for Secondary Piston (30834)	AR.19 AR.20		
310 538	Pin, Stop, for Secondary Piston (32964) Gasket on Stop Pin (KL.44509)	AR.20		
193	Adapter, Outlet, at end and top of Master Cylinder (30835)	AR.22		
1327	Gasket for Adapters (33443)		2	
278	Seal for Outlet Adapters (31593)	AR.23 AR.24		
534 508	Valve Body (2379) Seal in Valve Body <u>(</u> 608)	AR.25		
009	Spring for Valve (6714)	AR.26	2	
884 1451	Washer for Valve (5966) Adapter Assy., Inlet (complete with Tilting Valves)	AR.27 AR.28		
	(32961)		_	
277	Seal for Inlet Adapters (31592)	AR.29		
4191 2022	Push-Rod in end of Master Cylinder (30833) Boot (Rubber) over Push-Rod (24995)	AR.30 AR.31		
265 6	REPAIR KIT FOR SERVICING MASTER		1	
C 7944	CYLINDER C.6712 (KL.71504)	AR.32	2 1	
C.7216	Plate, Tapped, behind Master Cylinder Mounting Bracket			
NB.131/22D C.7212	Bolt, securing Master Cylinder to Frame Washer, Distance, between Master Cylinder and Mounting Bracket	AR.33 AR.34		Fitted from Chassis No. 660001 to 660995 669001 to 66900 670001 to 672539 679001 to 67984
NB.131/21D	Bolt, securing Master Cylinder to Frame		2	Fitted to Chassis No. 660996 and subs. 669003 and subs
C //02	Red Operating between Marter Culinder Buch Red	AR.35	; 1	672540 and subs. 679841 and subs 667001 and subs. 677001 and subs
C.6693	Rod, Operating, between Master Cylinder Push-Rod and Fork-End on Pedal	71.93	, ,	
NN.237/L	Nut, locking Operating Rod	AR.36	52	
,-				

FOR CHASSIS No. 660980 AND SUBS. 669003 AND SUBS.

S. 672049 AND SUBS. S. 679622 AND SUBS. 667001 AND SUBS. 677001 AND SUBS.

art No.	Description.	Plate No.	No. pe Unit.		
	Banjo for Outlet Adapters (7960) Banjo for Outlet Adapter in end of Master Cylinder	AR.37 AR.38	2 1)	RIGHT HAND DRIVE ONLY	
	(7960) Banjo for Outlet Adapter at top of Master Cylinder	AR.39	1	LEFT HAND DRIVE ONLY	
.3900	(7962) Bolt (Hollow) for Stop Light Switch and Banjo (8048)	AR.40	J		,
.3906	Bolt for Banjo (10543)	AR.41	i		
.3925	Gasket (Small) on Banjo Bolts (KL.44518)	AR.42	2		
.3926	Gasket (Large) on Banjo Bolts (KL.44522)	AR.43	2		
5.5218	Switch, Stop Light (31082/B) (in end Outlet Adapter for R.H. Drive cars and in top Outlet Adapter for L.H. Drive cars)	AR.44	1		
	•				1. A. 1.
					110
					19 F.
				a	• •
.6700	SHIELD ASSY. BETWEEN MASTER CYLINDER AND EXHAUST PIPES	AR.45	1	LEFT HAND DRIVE ONLY	
					1. ¹ .
.6427	TWIN SUPPLY TANK (LOCKHEED 7218)		1		
85	Tank (complete with Outlet Adapters) (6839)	AR.46	1		
7	Cap, Filler (407)	AR.47	i		
45	Washer for Filler Cap (29828)	AR.48	1		
40 40	Clamp, securing Supply Tank (1040)	AR.49	1		
39	Bolt, through Clamp (34681) Nut on Bolt (34680)	AR.50 AR.51	1		
5.105/X	Washer, Spring, under Nut (K.19204)	AR.52	4		

HYDRAULIC PIPES AND FITTINGS

C.7189	Pipe, from Supply Tank to Low Pressure Hose (T.12/8B)	AR.53
C.3730	Hose, Low Pressure, between Supply Tank and Master Cylinder (16741)	AR.54
C.7208	Clip, securing Low Pressure Hoses (K.20202)	AR.55
C.7201	Pipe, from Low Pressure Hose to front Inlet on Master Cylinder (T.12/6B)	AR.56
C.7190	Pipe, from Low Pressure Hose to rear Inlet on Master Cylinder (T.857/B)	AR.57
C.7191	Pipé, from Banjo at front of Master Cylinder to Front 3-way Union (T.4/24B)	AR.58
C.3922	Union, 3-way, at front of Chassis Frame (7965)	AR.59
FS.106/4D	Screw, Set, securing 3-way Union	
C.726	Washer, Shakeproof, on Setscrew	
C.3913	Pipe, from Front 3-way Union to R.H. Front Hose (T.4/12B)	AR.60
C.3914	Pipe, from Front 3-way Union to L.H. Front Hose (T.4/35B)	AR.61
C.3909	Hose, from Supply Pipes to Front Backplates (KL.48924)	AR.62
C.3925	Gasket, at connection of Hoses to Brackets (KL.44518)	AR.63
C.3910	Nut, securing Hoses to Brackets on Chassis Frame (23897)	AR.64
C.3911	Washer, Shakeproof, under Nuts (K.19411)	AR.65
C.7192	Pipe, from Banjo at top of Master Cylinder to Tube Connector (T.4A/44B)	AR.66

RIGHT HAND DRIVE ONLY

2 2

2 1

39B

660980 AND SUBS. 669003 AND SUBS.

672049 AND SUBS. 679622 AND SUBS.

FOR CHASSIS No. 667001 AND SUBS. 677001 AND SUBS.

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
	HYDRAULIC PIPES AND FITTINGS (con	tinued)		RIGHT HAND DRIVE ONLY
C.3923	Tube Connector at rear of Chassis Frame (5248)	AR.67	1	
C.3920	Pipe, from Tube Connector to Rear Hose (T.4A/40B)	AR.68	1	
C.3909	Hose, from Supply Pipe to 3-way Union on Rear Axle (KL 48924)	AR.69	1	
C.3925	Gasket, at connection of Hose to Bracket (KL.44518)	AR.70	1	
C.3910	Nut, securing Hose to Bracket on Chassis Frame (23897)	AR.71	1	
C.3911	Washer, Shakeproof, under Nuts (K.19411)	AR.72	1	
C.3922	Union, 3-way, on Rear Axle (7965)	AR.73	1	
NB.125/10D	Bolt, securing 3-way Union to Rear Axle		1	
NN.125/L	Nut on Bolt		1	
C.724	Washer, Shakeproof, under Nut		1	
C.3916	Pipe, from Union on Axle to R.H. Rear Backplate (T.4/24B)	AR.74	1	
C.3917	Pipe, from Union on Axle to L.H. Rear Backplate (T.4/47B)	AR.75	1	
C.3529	Clip, securing Pipes to Chassis Frame	AR.76	7	

HYDRAULIC PIPES AND FITTINGS

LEFT HAND DRIVE ONLY

C.7189	Pipe, from Supply Tank to Low Pressure Hose (T.12/8B)	AR.53	2
C.3730	Hose, Low Pressure, between Supply Tank and Master Cylinder (16741)	AR.54	2
C.7208	Clip, securing Low Pressure Hoses (K.20202)	AR.55	4
C.7200	Pipe, from Low Pressure Hose to Master Cylinder (T.12/13B)	AR.77	2
C.7193	Pipe, from Banjo at front of Master Cylinder to Front 3-way Union (T.4/21B)	AR.78	1
C.3922	Union, 3-way, at front of Chassis Frame (7965)	AR.59	1
FS.106/4D	Screw, Set, securing 3-way Union		1
C.726	Washer, Shakeproof, on Setscrew		1
C.7194	Pipe , from Front 3-way Union to R.H. Front Hose (T.4/35B)	AR.79	1
C.7195	Pipe, from Front 3-way Union to L.H. Front Hose (T.4/12B)	AR.80	1
C.3909	Hose, from Supply Pipes to Front Backplates (KL.48924)	AR.62	2
C.3925	Gasket for Hoses (KL.44518)	AR.63	2
C.3910	Nut, securing Hoses to Brackets on Chassis Frame (23897)	AR.64	2
C.3911	Washer, Shakeproof, under Nuts (K.19411)	AR.65	2
C.7198	Pipe, from Banjo at top of Master Cylinder to Tube Connector (T.4A/47B)	AR.81	1
C.3923	Tube Connector at rear of Chassis Frame (5248)	AR.67	1
C.7199	Pipe, from Tube Connector to Rear Hose (T.4A/40B)	AR.82	1
C.3909	Hose, from Supply Pipe to 3-way Union on Rear Axle (KL.48924)	AR.69	1
C.3925	Gasket for Hose (KL.44518)	AR.70	1
C.3910	Nut, securing Hose to Bracket on Chassis Frame (23897)	AR.71	1
C.3911	Washer, Shakeproof, under Nut (K.19411)	AR.72	1
C.3922	Union, 3-way, on Rear Axle (7965)	AR.73	1
NB.125/10D	Bolt, securing 3-way Union to Rear Axle		1
NN.125/L	Nut on Bolt		1
C.724	Washer, Shakeproof, under Nut		1
C.7196	Pipe , from Union on Axle to R.H. Rear Backplate (T.4/47B)	AR.83	1
C. 7197	Pipe, from Union on Axle to L.H. Rear Backplate (T.4/24B)	AR.84	1
C.3529	Clip, securing Pipes to Chassis Frame	AR.76	7

FOR CHASSIS No.

660980 AND SUBS.	672049 AND SUBS.	667001 AND SUBS.
669003 AND SUBS.	679622 AND SUBS.	677001 AND SUBS.

		Plate	No. per	
Part No.	Description.	No.	Unit.	Remarks.

1

1

- C.2958 BLEEDER TUBE AND CONTAINER (LOCK-HEED 3919)
- C.2957 WRENCH FOR BLEEDER SCREW (LOCK-HEED 13836)

FOR HANDBRAKE LEVER, CABLE AND ALL FITTINGS, PLEASE REFER TO PAGES 38 AND 39.

