	10 070101	Plate No. per
Part No.	Description.	No. Unit. Remarks.
BD.3205 BD.3206	BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS (R.H. DRIVE ONLY)  BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS (L.H. DRIVE ONLY)	Fitted from Chassis No. 660001 to 660058 670001 to 670184
BD.2810 BD.2811 BD.3144 BD.3144 BD.3197 BD.2992 BD.3196 C.3301 C.3881 BD.3213 BD.2787 BD.2788 BD.2819 BD.2819 BD.2820 FS.504/6H BD.1494/7 FN.104/L C.724 M.108/6R M.108/12R BD.1503/4 BD.3216 BD.3216 BD.3217 BD.3218 BD.2780	Sill Assembly, L.H. Sill Assembly, R.H. Bulkhead Assembly Bulkhead Assembly Dash Assembly Dash Assembly Bracket, supporting Steering Column Bracket for Bonnet Lock Control Wheel-Arch Assembly, L.H. Wheel-Arch Assembly, R.H. Pillar, Rear Standing, L.H. Pillar, Rear Standing, R.H. Bracket Assy., L.H., for Rear Standing Pillar Bracket Assy., R.H., for Rear Standing Pillar Screw, Set, securing Brackets Screw, Set, securing Brackets Nut on Setscrews Washer, Shakeproof, under Nuts Screw, Wood, securing Brackets Screw, Wood, securing Brackets Screw, Wood, securing Brackets Screw, Wood, securing Brackets Panel, Tonneau, Assembly Wing, Rear, L.H. Wing, Rear, R.H. Front End Assembly	1 1 1 RIGHT HAND DRIVE ONLY 1 LEFT HAND DRIVE ONLY 1 RIGHT HAND DRIVE ONLY 1 LEFT HAND DRIVE ONLY 1 1 1 1 1 1 1 1 1 1 6 8 1 1 1 6 4 4 4 1 1 1 1 1 1 1 1 1 1 1 1 1
	SCUTTLE STIFFENING	
C.3786 NS.137/5F C.741 NB.237/16F C.3320/3 FW.106/T C.3790 C.3791 C.3792 NN.143/L NB.131/6F NN.131/L C.740 NS.237/6F FW.106/T	Strut, Dash Stiffener Screw, Set, securing Strut to Frame Washer, Shakeproof, on Setscrews Bolt, securing Strut to Dash Nut, Philidas, on Bolts Washer, Plain, under Nuts Rod, Tie Insert for Tie Rods Eyebolt for Tie Rods Eyebolt for Tie Rods Nut, securing Eyebolts Bolt, securing Eyebolts to Dash Nut, on Bolts Washer, Shakeproof, under Nuts Screw, Set, securing Dash to Frame Washer, Plain, on Setscrews	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
	BODY MOUNTING	
BD.3743 BD.3788 BD.3143 BD.3770	Felt for Cross Member Felt (Black) (3"×45") Felt (Black) (1"×18") Felt (Rubberised) top L.H. of Petrol Tank (18½"× 15½")	2 2 2 1
BD.3771	Felt (Rubberised) top R.H. of Petrol Tank (18 $\frac{1}{2}$ "× 16")	1
BD.3692/1 BD.3692/2 BD.3799/1 BD.3799/2 BD.3744 BD.3745 BD.3745	Shim for Body Mounting Shim for Body Mounting Shim for Body Mounting Shim for Body Mounting Pad (Rubberised Felt) Strip (Rubberised Felt) (1½"×10") Strip (Rubberised Felt) (1½"×14")	As req'd. As req'd. As req'd. As req'd. 4 2

## FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

Part No.	Description.	Plate No.	No. per Unit. Remarks.
	BODY MOUNTING (continued)		
BD.3143	Felt (Black) (1"×12")		2 2
BD.3143 BD.3143	Felt (Black) (1″×14″) Felt (Black) (1″×56″)		1
FB.105/23D	Bolt, mounting Body at rear		2 2
FB.105/26D BD.542/2	<b>Bolt,</b> mounting Body at rear  Washer on Bolts		4
FW.105/T FN.105/L	Washer on Bolts Nut on Bolts		4 4
C.725	Washer, Shakeproof, under Nuts		4
BD.3691 FW.105/T	Bolt, Coach, Assembly, for Body Mounting Washer on Coach Bolts		8 8
FN.105/L	Nut on Coach Bolts		8
FG.105/X BD.3313	Washer, Spring, under Nuts Packing for Body Mounting		8 2
BD.3754	Packing for Body Mounting		2
FS.504/4H	Screw, Set, securing Spare Wheel Tray to Body Angles		5
FN.104/L C.724	Nut on Setscrews Washer, Shakeproof, under Nuts		5 5
BD.3289	FACIA BOARD ASSEMBLY, L.H.		
			RIGHT HAND DRIVE MODELS ONL
BD.3290	FACIA BOARD ASSEMBLY, R.H.		1 }
BD.3292	FACIA BOARD ASSEMBLY, L.H.		1 LEFT HAND DRIVE MODELS ONL
BD.3293	FACIA BOARD ASSEMBLY, R.H.		1)
BD.3291	INSTRUMENT PANEL ASSEMBLY (LESS INSTRUMENTS)		1
BD.3267	BRACKET ASSEMBLY SUPPORTING L.H. FACIA BOARD		1
BD.3268	BRACKET ASSEMBLY SUPPORTING R.H. FACIA BOARD		1
FS.104/5D	Screw, Set, securing Brackets		8
FW.104/T FN.104/L	Washer, Plain, on Setscrews Nut on Setscrews		<b>8</b>
C.724	Washer, Shakeproof, under Nuts		8
BD.3284	FIXING STUD ASSEMBLY FOR INSTRUMENT PANEL		2
FW.104/T	Washer, Plain, on Fixing Studs		2
FN.104/L C.724	Nut on Fixing Studs Washer, Shakeproof, under Nuts		2 2
	SCUTTLE CASINGS		
BD.3685	Casing, Top		1 LEFT HAND DRIVE ONLY
BD.3686	Casing, Top Casing, Under-Scuttle		1 RIGHT HAND DRIVE ONLY 1 LEFT HAND DRIVE ONLY
BD.3701 BD.3700	Casing, Under-Scuttle		1 RIGHT HAND DRIVE ONLY
BD.3735 BD.3314	Casing, Top, Rear Casing, Side, L.H.		1
BD.3315	Casing, Side, R.H.		i
BD.539/1	Screw, Self-Tapping, securing Side Casings		6
BD.1499/2	Screw, Wood, securing Side Casings Screw, Self-Tapping, securing Under-Scuttle Casings		8 4
BD.539/1 BD.1499/2	Screw, Wood, securing Top Casings		8
BD.531/1	Washer, Cup, on Screws		26

Part No.	Description	Plate	No. pe	
1 41 ( 140.	Description.	No.	Unit.	Remarks.
BD.2669	MAIN FLOORBOARD ASSEMBLY, L.H.	•	1	LEFT HAND DRIVE ONLY
BD.2668	MAIN FLOORBOARD ASSEMBLY, R.H.		1 ]	LEIT HAND BRIVE ONLY
BD.3756	MAIN FLOORBOARD ASSEMBLY, L.H.		1 ]	
BD.3757	MAIN FLOORBOARD ASSEMBLY, R.H.		1 }	RIGHT HAND DRIVE ONLY
BD.1493 BD.1711	Screw, Set, securing Floorboards Plate, Fixing, for Setscrews		14 14	
C.724 BD.3416	Washer, Shakeproof, on Setscrews		14	
NS.525/8H	Plate, Tapping, for Seat Slides Screw, Set, securing Seat Slides		4 8	
BD.3037 BD.3461	Plate, Cover, for access to rear Jack Socket Plate, Seating, for Jack Cover Plates		2 2	
M.106/3R BD.1256	Screw, Wood, securing Seating Plates  Nut "Tee" on Floorboards, for Gearbox Cover fixing		24 12	
BD.3746 BD.3755	Asbestos under R.H. Floorboard  Plate, fixing Asbestos in position		1	
BD.1503/6	Screw, Wood, securing fixing Plate		1 13	
BD.3162	PROPELLOR SHAFT TUNNEL ASSEMBLY		1	
FS.404/4D	Screw, Set, securing Propeller Shaft Tunnel to Frame		4	
BD.1493/2	Screw, Set, securing Propeller Shaft Tunnel to Battery Container		4	
FW.104/T C.724	Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		8 8	
BD.3143	Felt (Black) between Propeller Shaft Tunnel and Battery Container (1"×15")		,	
BD.3168	CLUTCH/GEARBOX COVER ASSEMBLY		1	
BD.1493/1 BD.1493/2	Screw, Set, securing Gearbox Cover Screw, Set, securing Gearbox Cover		4	
BD.542/3 C.724	Washer, Oval, on Setscrews Washer, Shakeproof, on Setscrews		14 16 18	
BD.3278	DIPSTICK INSPECTION LID (IN GEARBOX COVER)		1	
	CARPETS AND FELTS			
BD.3848 BD.3849	Carpet for Main L.H. Floorboard Carpet for Main R.H. Floorboard		1	
BD.3850	Carpet, Front, L.H.		1	
BD.3851 BD.3857	Carpet, Front, R.H. Carpet for Toeboard (L.H. side)		1 1)	RIGHT HAND DRIVE ONLY
BD.3858 BD.3859	Carpet for Pedals (R.H. side) Carpet for Toeboard (R.H. side)		1{	
BD.3860 BD.3864	Carpet for Pedals (L.H. side) Carpet for Gearbox Cover		1 } 1	LEFT HAND DRIVE ONLY
BD.3853 BD.3854	Felt for Dash Front, L.H. Felt for Dash Front, R.H.		1}	LEFT HAND DRIVE ONLY
BD.3855	Felt for Dash Front, L.H.		- {}	RIGHT HAND DRIVE ONLY
BD.3856 BD.3864/6	Felt for Dash Front, R.H. Felt for Gearbox Cover		1 5	
BD.3864/7 BD.3864/8	Felt for Gearbox Cover Mutocel for Gearbox Cover		1	
BD.3864/9 BD.3864/10	Mutocel for Gearbox Cover Mutocel for Gearbox Cover		1	
BD.3864/11 BD.3864/12	Mutocel for Gearbox Cover Mutocel for Gearbox Cover		i 1	
BD.1286 BD.1814/2	Fastener, securing Carpets Rivet, Pop, securing Fasteners to inside face of		12 4	
M.104/4R	Screw, Wood, securing Fasteners to Floorboards		8	
BD.3834	Fastener, securing Carpet		1	

# FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
BD. <b>3866</b>	GAUNTLET FOR CHANGE-SPEED LEVER		1	
				•
BD.3867	GAUNTLET FOR HANDBRAKE LEVER		1	
•			4	
BD.3861	MOQUETTE AROUND DIPPER SWITCH		1	
BD.3158	BATTERY CONTAINER ASSEMBLY		1	
22.0.00	BATTERT CONTAINER ASSEMBLE			
BD.3365	BATTERY COVER ASSEMBLY		1	
BD.3230 BD.3143	<b>Pad</b> (Rubberised Felt) for Battery Mounting Felt (Black) for Battery Mounting Bracket $(1^n \times 21\frac{1}{2}^n)$		2 2	
BD.3143 BD.3165	Felt (Black) for Battery Straps $(1'' \times 8\frac{1}{2}'')$ Strap, holding Batteries		2 2	
FS.104/8D 1294	Screw, Set, for Straps Nut on Setscrews		.4 4	
C.724	Washer, Shakeproof, under Nuts		·	
BD.3012	WINDSCREEN ASSEMBLY, L.H.		1	
BD.3013	WINDSCREEN ASSEMBLY, R.H.		1	
BD.3014 BD.3015	Pillar Assembly, Centre Pillar, Side, L.H.		1 1	Fitted from Chassis No.
BD.3016	Pillar, Side, R.H.		15	660001 to 660018 670001 to 670026
BD.3800 BD.3801	Pillar, Side, L.H. Pillar, Side, R.H.		1}	Fitted from Chassis No. 660019 to 660058 670027 to 670184
BD.3017 BD.3018	Frame Assembly, L.H. Frame Assembly, R.H.		1	
BD.3019 BD.3237	Glass only Glass only		1	NOT REQUIRED FOR U.S.A. FOR EXPORT TO U.S.A. ONLY
BD.1317 BD.3026	Everseal for Screen Glasses $(1\frac{1}{2}'' \times 13')$ Rubber, sealing Screen (72" long)		1 1	
BD.2159 BD.3239	Rubber (Sponge) sealing Screen (21" long) Bracket, locating Windscreen		2 1	
C.2015/1	Screw, Set, securing Locating Bracket		2	
C.2015/5 C.2015/6	Screw, Set, securing Locating Bracket Screw, Set, securing Locating Bracket		3 2	·
BD.3014	WINDSCREEN CENTRE PILLAR ASSEMBLY		1	
FN.108/L	Nut, securing Centre Pillar		1	
FW.108/T FG.108/X	Washer, Plain, on Stud Washer, Spring, under Nut		1 1	

Part No.	Description.	Plate No. per No. Unit. Remarks.
BD.3015	WINDSCREEN SIDE PILLAR, L.H.	Fitted from Chassis No.
BD.3016	WINDSCREEN SIDE PILLAR, R.H.	1 660001 to 660018 670001 to 670026
BD.3800	WINDSCREEN SIDE PILLAR, L.H.	Fitted from Chassis No.
BD.3801	WINDSCREEN SIDE PILLAR, R.H.	660019 to 660058 670027 to 670184
BD.3059 C.728 BD.3223 BD.3224 BD.3020 BD.3022 BD.3023 BD.3021 AS.503/2H C.2014/1	Bolt, Special, securing Side Pillars Washer, Shakeproof, on Special Bolts Grommet (Rubber) under foot of L.H. Side Pillar Grommet (Rubber) under foot of R.H. Side Pillar Plate, Tapping, for Screen Corners Plate, Tapping, for Screen Corners Plate, Tapping, for Screen joints Plate, Tapping, for Windscreen Screw, Set, for Tapping Plates Screw, Set, for Tapping Plates	4 4 1 1 2 2 2 2 2 2 2 2 4
C.2887	INTERIOR MIRROR ON SCUTTLE	1
C.2887/1 C.2887/2	Bracket only for Interior Mirror Glass only	1
C.2015/6 AN.102/L C.723 BD.4673	Screw, Set, securing Mirror to Scuttle Nut on Setscrew Washer, Shakeproof, under Nut Fastener ("Tenax") through Mirror Bracket (Tonneau Cover fixing)	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
BD.3208	DOOR, LEFT HAND	1
BD.3209	DOOR, RIGHT HAND	1
BD.3294 BD.3295	Lock Assy. for L.H. Door (complete with Safety Catch Mechanism)  Lock Assy. for R.H. Door (complete with Safety Catch Mechanism)	Fitted from Chassis No. 670001 to 670010
BD.3664	Lock Assy, for L.H. Door (complete with Safety Catch Mechanism)	1 Fitted from Chassis No.
BD.3665 BD.2930 AS.302/6H	Lock Assy. for R.H. Door (complete with Safety Catch Mechanism) Striker for Door Locks Screw, Set, securing Strikers	1 660001 to 660058 670011 to 670184
AN.102/L C.723 BD.3311 BD.3312	Nut on Setscrews Washer, Shakeproof, under Nuts Casing Assy. for L.H. Door Casing Assy. for R.H. Door	4 4 1 1
BD.3294	DOOR LOCK ASSEMBLY, L.H.	1 Fitted from Chassis No.
BD.3295	DOOR LOCK ASSEMBLY, R.H.	670001 to 670010
BD.2929	Lock only	2
M.108/6R	Screw, Wood, securing Door Locks	12

# FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

BD.3397	Part No.	Description.	Plate No.	No. p Unit		
R.303/PW   Rivet, securing Link to Door Lock   2		Italy house Deep last and laws		9.1		
AW.		Link, between Door Lock and Lever				
109165   Pin. Clavis, securing Link to Lever   2   Washer on Clavis Pins   2   2   2   2   3   3   3   3   3   3				5		
Fix.		Pin Clavia couring Link to Lever	24			
Lindy    Pin, Split, through Clevis Pins   2   2   2   2   2   2   2   2   2						
BD.3598						
R.303/8W   Rivet, securing Operating Lever to Bracket and Connecting Rod Connecting Rod Connecting Rod Connecting Rod Connecting Rod Connecting Operating Lever			•	2		
AW-102/T		Rivet, securing Operating Lever to Bracket and		- 1		
BD.3316   Spring for Operating Lever   BP.3299   Bracket for Operating Lever   2	AW.102/C	Washer on Rivets				
### BD.3296 ### Bracklet for Operating Lever Rod, connecting Operating Lever Rod, connecting Operating Lever Rod, connecting Operating Link ### BD.3390 ### BD.3390 ### BD.3390 ### BD.3390 ### BD.3300 ### BD.330	AW.102/T					
BD.3299   Rod., connecting Operating Lever and Operating   2     1     1     1     1     1     1     1     1     1     1       1       1       1       1       1       1       1       1       1		Spring for Operating Lever				
BD.3300		Rod, connecting Operating Lever and Operating				***************************************
AW.102/T BD.3301 BD.3407 AW.102/T BD.3407 AW.102/T BD.3407 AW.102/T AW.102/T BD.3407 AW.102/T BD.3407	BD 3300	Rivet, securing Connecting Rod to Operating Link		2		
BD.3301					Fitted from Chassis No.	
R.304/TW		# 1 TV 1 T 1 T 1 T 1 T 1 T 1 T 1 T 1 T 1			670001 to 670010	
FW.104/C Washer on Rivets PW.104/T BD.3302 BD.3302 BD.1499/4 BD.3302 BD.1499/4 BD.3302 BD.1499/4 BD.3303 BD.1499/4 BD.3303 BD.3499/4 BD.3304 BD.3404 BD.3304 BD.3404 BD.3306 BD.3404 BD.3306 BD.3406 BD.3407 BD.3407 BD.3407 BD.3306 BD.3407 BD.3306 BD.3307 Packing for Door Lock Guide BD.3307 Packing for Operating Link Bracket BD.3307 Packing for Operating Link Bracket BD.3307 BD.1503/4 BD.2941 DOOR DOVETAIL BUFFER  BD.2942 DOOR DOVETAIL BUFFER  BD.3664 DOOR LOCK ASSEMBLY, L.H. BD.3664 DOOR LOCK ASSEMBLY, L.H. BD.3665 DOOR LOCK ASSEMBLY, R.H.  1 Fitted from Chassis No. 660001 to 660038 670011 to 670184 BD.367 BD.367 BD.367 Link, between Door Lock and Operating Lever AS.302/H ASSEMBLY, Boland Cook AW.102/C Washer, between Link and Tongue of Lock AW.102/C AW.102/C AW.102/C AW.302/C				2	•	•
FW.104 T				2		•
### BD.33510   Plate, Cover, for Door Knob   2   8   8   8   1499/4   Screw, Wood, securing Cover Plate   8   8   8   1   1   8   8   8   8   8	FW.104/T	Washer on Rivets		2		
BD.1499 4   Screw, Wood, securing Cover Plate   BD.3303   Bracket Assy., mounting Operating Link L.H.   1   1   1   1   1   2   2   2   2   3   3   3   3   3   3	BD.3302			2		
BD.3303	BD.3310			2		
BD.3304   Bracket Assy, mounting Operating Link R.H.   1				- 1		
AS.502/4D Screw, Set, securing Bracket to bottom flange of Door Pocket AN.102/L Nut on Setscrews AN.402/L Washer under Nuts BD.3305 Packing for Door Lock Guide 2 BD.3307 Packing for Door Lock Guide 2 BD.3307 Packing for Operating Link Bracket 2 BD.3307 Packing for Operating Link Bracket 2 BD.1503/4 Screw, Wood, securing Packing 2  BD.2941 DOOR DOYETAIL BUFFER 2 M.110/RR Screw, Wood, securing Buffers 4  BD.2942 DOOR DOYETAIL STRIKER 2 BD.3664 DOOR LOCK ASSEMBLY, L.H. 1 BD.3665 DOOR LOCK ASSEMBLY, L.H. 1 BD.3665 DOOR LOCK ASSEMBLY, R.H. 1 BD.3665 DOOR LOCK ASSEMBLY, R.H. 1 BD.3668 Screw, Wood, securing Door Locks 12  BD.3557 Lock only 2  BD.3557 Link, between Door Lock and Operating Lever 3 AS.302/4H Screw, Set, securing Link to Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 2 AN.102/L Washer, between Link and Tongue of Lock 3 AN.102/L Washer on Clevis Pins 2 BD.3571 Link, between one lever 1 BD.3572 Guide for L.H. Operating Lever 1 BD.3573 Guide for L.H. Operating Lever 1 BD.3574 Guide for H.H. Operating Lever 1 BD.3575 Guide for H.H. Operating Lever 1 BD.3576 Screw, Wood, securing Guides 4 BD.3316 Spring, Return, for Operating Lever 2 BD.3571 Bracket to Operating Lever 2 BD.3572 Bracket to Operating Lever 2 BD.3573 Bracket to Operating Lever 2 BD.3574 Bracket to Operating Lever 2 BD.3574 Bracket to Operating Lever 2 BD.3575 Bracket to Operating Lever 2 BD.3576 Bracket to Operating Lever 2 BD.3577 Bracket to Operating Lever 2 BD.3578 Bracket to Operating Lever 3 BD.3579 Bracket to Oper						
Door Pocket		Bracket Assy., mounting Operating Link R.H.				
AN.102/L BD.3305 Packing for Door Lock Guide BD.3305 Packing for Door Lock Guide BD.3307 Packing for Operating Link BD.3307 Packing for Operating Link Bracket BD.3507 Packing for Operating Link Bracket BD.3507 Packing for Operating Link Bracket BD.2941 DOOR DOVETAIL BUFFER  BD.2942 DOOR DOVETAIL STRIKER BD.2942 DOOR DOVETAIL STRIKER BD.3664 DOOR LOCK ASSEMBLY, L.H. BD.3665 DOOR LOCK ASSEMBLY, L.H. BD.3665 DOOR LOCK ASSEMBLY, R.H. BD.2992 Lock only  M.108/6R Screw, Wood, securing Door Locks  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AN.102/L Vasher, between Link and Tongue of Lock AN.102/L Vasher, Shakeproof, under Nuts JIOH/6S Pin, Clevis, securing Link to Operating Lever Vasher on Clevis Pins L103/6U Pin, Split, through Clevis Pins BD.3671 Lever, Operating, Assembly, L.H. JD.3572 Guide for R.H. Operating Lever JBD.3573 Guide for L.H. Operating Lever JBD.3574 BD.3674 Bracket for Operating Lever JBD.3575 Screw, Wood, Securing Guides JBD.3644 BBracket for Operating Lever JBD.3646 BBracket for Operating Lever JBD.3647 BBracket for Operating Lever JBD.3648 BBracket for Operating Lever JBD.3649 BBracket for Operating Lever JBD.3641 BBracket for Operating Lever JBD.3642 BBracket for Operating Lever JBD.3644 BBracket for Operating Lever JBD.3644 BBracket for Operating Lever JBD.3644 BBracket for Operating Lever	A5.502/4D			7		
AW 102/T	A NI 402/I			4		
BD.3305   Packing for Door Lock Guide   2   2   2   2   2   2   2   2   2						
## BD.3306 Guide for Operating Link Bracket						
BD.3307				2		4.4
## BD.1503/4   Screw, Wood, securing Packing   2    ## BD.2941   DOOR DOVETAIL BUFFER   2    ## M.110/FR   Screw, Wood, securing Buffers   4    ## BD.2942   DOOR DOVETAIL STRIKER   2    ## M.110/BR   Screw, Wood, securing Strikers   4    ## BD.3664   DOOR LOCK ASSEMBLY, L.H.   1    ## BD.3665   DOOR LOCK ASSEMBLY, R.H.   1    ## Fitted from Chassis No. 660001 to 660058    ## BD.3665   DOOR LOCK ASSEMBLY, R.H.   1    ## BD.2929   Lock only   2    ## M.108/6R   Screw, Wood, securing Door Locks   12    ## BD.3557   Link, between Door Lock and Operating Lever   2    ## AS.302/4H   Screw, Set, securing Link to Lock   2    ## AW.102/C   Washer, between Link and Tongue of Lock   2    ## AW.102/C   Washer, Shakeproof, under Nuts   2    ## M.104/SS   Pin, Clevis, securing Link to Operating Lever   2    ## M.105/6U   Pin, Clevis, securing Link to Operating Lever   2    ## Washer on Clevis Pins   2    ## D.3571   Lever, Operating, Assembly, L.H.   1    ## BD.3671   Lever, Operating, Assembly, L.H.   1    ## BD.3572   Guide for L.H. Operating Lever   1    ## M.108/6R   Screw, Wood, securing Guides   4    ## BD.3316   Spring, Return, for Operating Lever   2    ## BD.3361   Bp.3641   Bracket for Operating Lever   2    ## BD.3361   Bp.3641   Bracket for Operating Lever   2    ## BD.3361   Bp.3641   Bracket for Operating Lever   2    ## BD.3561   Bracket for Operating Lever   2    ## BD.3361   Bp.3641   Bracket for Operating Lever   2    ## BD.3561   Bracket for Operating Lever   2    ## BD.3661   Bracket for Operating Lever   2    ## BD.3662   Bracket for Operating Lever   2    ## BD.3663   Bracket for Operating Lever   2    ## BD.3663   Bracket for Operating Lever   2    ## BD.3664   Bracket for Operating Lever   2    ## BD.3664   Bracket for Operating Lever   2    ## BD.3665   Bracket for				2		
BD.2941   DOOR DOVETAIL BUFFER   2				2 ]		
M.110/7R Screw, Wood, securing Buffers  BD.2942 DOOR DOVETAIL STRIKER  BD.3664 DOOR LOCK ASSEMBLY, L.H.  BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.3667 DOOR LOCK ASSEMBLY, R.H.  1 Fitted from Chassis No. 660001 to 660058 670011 to 670184  BD.3668 Screw, Wood, securing Door Locks  12  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews C.723 Washer, Shakeproof, under Nuts L103/6U Pin, Clevis, securing Link to Operating Lever FW.104/T Washer on Clevis Pins L103/6U Pin, Split, through Clevis Pins BD.3670 Lever, Operating, Assembly, R.H. BD.3643 Guide for R.H. Operating Lever BD.3572 Guide for R.H. Operating Lever BD.3573 Guide for R.H. Operating Lever BD.3576 Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever 2 BD.3614 Bracket for Operating Lever 3 BD.3614 Bracket for Operating Lever 4 BD.3616 Bracket for Operating Lever 4 BD.3616 Bracket for Operating Lever 5 BD.3617 Bracket for Operating Lever 6 BD.3618 Bracket for Operating Lever 7 Bracket for Operating Lever 8 BD.3618 Bracket for Operating Lever 9 Bracket for Operating Lever	·					•
BD.2942   DOOR DOVETAIL STRIKER   2	BD.2941	DOOR DOVETAIL BUFFER		2		
M.110/8R Screw, Wood, securing Strikers  BD.3664 DOOR LOCK ASSEMBLY, L.H.  BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.2929 Lock only  Comparison of the securing Door Locks  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews AN.102/L Nut on Setscrews AN.102/L Nut on Clevis Pins J.104/6S Pin, Clevis, securing Link to Operating Lever EW.104/T Washer on Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3643 Guide for L.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever M.108/6R Screw, Wood, securing Guides BD.33641 Bracket for Operating Lever BD.33641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.33641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good Assembly R.H. BD.3641 Bracket for Operating Lever 2 Land Good R.H. Operating Lever 2 Land Good R.H. Operating Lever 3 Land Good R.H. Operating Lever 4 Land Good R.H. Operating Lever 4 Land Good R.H. Operating Lever 5 Land Good R.H. Operating Lever 7 Land Good R.H. Operating Lever 8 Land Good R.H. Operating Lever 9 Land Good R.H. Operating Lever 1 Land Good R.H. Operating Lever 1 Land Good R.H. Operating Lever 2 Land Good R.H. Operating Lever 3 Land Good R.H. Operating Lever 4 Land R.H. Operating Lever 5 Land Good R.H. Operating Lever 7 Land R.H. Operating Lever 8 Land R.H. Operating Lever 9 Land R.H. Operating Lever 9 Land R.H. Operating Lever 1 Land R.H. Operating Lever 2 Land R.H. Operating Lever 3 Land R.H.L. Land R.H.L. L	M.110/7R	Screw, Wood, securing Buffers		4		
M.110/8R Screw, Wood, securing Strikers  BD.3664 DOOR LOCK ASSEMBLY, L.H.  BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.2929 Lock only  M.108/6R Screw, Wood, securing Door Locks  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews AN.102/L Nut on Setscrews AN.102/L Pin, Split, through Clevis Pins J.104/6S Pin, Clevis, securing Link to Operating Lever AD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, L.H. BD.3643 Guide for L.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever M.108/6R Screw, Wood, securing Guides BD.33641 Bracket for Operating Lever 2 Lock only  Fitted from Chassis No. 660001 to 660058 670011 to 670184  BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 2 Lock only  A BD.3316 Spring, Return, for Operating Lever 3 Lock only  A BD.3316 Spring, Return, for Operating Lever 3 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 5 Lock only  A BD.341 Bracket for Operating Lever 4 Lock only  A BD.341 Bracket for Operating Lever 5 Lock only  A BD.341 Bracket for Operating Lever 5 Lock only  A BD.341 Bracket for Operating Lever 7 Lock only  A BD.341 Bracket for Operating Lever 7 Lock only  A BD.341 Bracket for Operating Lever	BD.2942	DOOR DOVETAIL STRIKER		2		*
BD.3664 DOOR LOCK ASSEMBLY, L.H.  BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.2929 Lock only  M.108/6R Screw, Wood, securing Door Locks  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews C.723 Washer, Shakeproof, under Nuts C.723 Washer, Shakeproof, under Nuts BD.3656 Pin, Clevis, securing Link to Operating Lever FW.104/T Washer on Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, R.H. BD.3672 Guide for R.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever M.108/6R Screw, Wood, securing Guides BD.33641 Bracket for Operating Lever BD.3641						
BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.3665 DOOR LOCK ASSEMBLY, R.H.  BD.2929 Lock only  M.108/6R Screw, Wood, securing Door Locks  Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews C.723 Washer, Shakeproof, under Nuts J.104/6S Pin, Clevis, securing Link to Operating Lever FW.104/T Washer on Clevis Pins L103/6U Pin, Split, through Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, R.H. BD.3643 Guide for L.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever BD.33641 Bracket for Operating Lever BB.33641 Bracket for Operating Lever 2  660001 to 660058 2  7  8  660001 to 660058 670011 to 670184	M.110/8R	Screw, Wood, securing Strikers	.*			
BD.3665   DOOR LOCK ASSEMBLY, R.H.   1   670011 to 670184	BD.3664	DOOR LOCK ASSEMBLY, L.H.		1 }		•
BD.2929 Lock only  M.108/6R Screw, Wood, securing Door Locks  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews C.723 Washer, Shakeproof, under Nuts J.104/6S Pin, Clevis, securing Link to Operating Lever EW.104/T Washer on Clevis Pins L103/6U Pin, Split, through Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, L.H. BD.3572 Guide for L.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever BD.3316 Spring, Return, for Operating Lever BD.3641 Bracket for Operating Lever 2 BD.3641	DD 2445	DOOR LOCK ASSEMBLY, R.H.		1		
M.108/6R Screw, Wood, securing Door Locks  BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews C.723 Washer, Shakeproof, under Nuts J.104/6S Pin, Clevis, securing Link to Operating Lever EW.104/IT Washer on Clevis Pins L.103/6U Pin, Split, through Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, R.H. BD.3643 Guide for L.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever BD.3316 Spring, Return, for Operating Lever BD.33441 Bracket for Operating Lever 2  Link, between Door Lock and Operating Lever 2  Z  AS.302/4H Screw, Wood, securing Lever 2  Z  AS.302/4H Screw, Wood, securing Lever 2  Z  AS.302/4H Screw, Wood, securing Lever 3  Z  AW.102/C Washer, between Link to Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  Z  AW.102/C Washer, between Link and Tongue of Lock 2  AW.102/C Washer, between Link and Tongue of Lock 2  AW.102/C Washer, between Link and Tongue of Lock 2  AW.102/C Washer, between Link and Tongue of Lock 2  AW.102/C Wa	BD.3003	DOOR LOCK ASSLIBLI, K.I.		,	070011 (0 070104	
BD.3557 Link, between Door Lock and Operating Lever AS.302/4H Screw, Set, securing Link to Lock AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews 2 AN.102/L Nut on Setscrews 2 J.104/6S Pin, Clevis, securing Link to Operating Lever FW.104/T Washer on Clevis Pins L.103/6U Pin, Split, through Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, R.H. BD.3643 Guide for L.H. Operating Lever BD.3572 Guide for R.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever BD.3641 Bracket for Operating Lever 2 BD.3641	BD.2929	Lock only		2		
AS.302/4H Screw, Set, securing Link to Lock  AW.102/C Washer, between Link and Tongue of Lock  AN.102/L Nut on Setscrews  2  AN.102/L Nut on Setscrews  2  J.104/6S Pin, Clevis, securing Link to Operating Lever  FW.104/T Washer on Clevis Pins  L.103/6U Pin, Split, through Clevis Pins  BD.3670 Lever, Operating, Assembly, L.H.  BD.3671 Lever, Operating, Assembly, R.H.  BD.3643 Guide for L.H. Operating Lever  BD.3572 Guide for R.H. Operating Lever  M.108/6R Screw, Wood, securing Guides  BD.3316 Spring, Return, for Operating Lever  BD.3641 Bracket for Operating Lever  2  BD.3641 Bracket for Operating Lever	M.108/6R	Screw, Wood, securing Door Locks		12		e e e e e e e e e e e e e e e e e e e
AS.302/4H Screw, Set, securing Link to Lock  AW.102/C Washer, between Link and Tongue of Lock  AN.102/L Nut on Setscrews  2  AN.102/L Nut on Setscrews  2  J.104/S Pin, Clevis, securing Link to Operating Lever  FW.104/T Washer on Clevis Pins  L.103/6U Pin, Split, through Clevis Pins  BD.3670 Lever, Operating, Assembly, L.H.  BD.3671 Lever, Operating, Assembly, R.H.  BD.3643 Guide for L.H. Operating Lever  BD.3572 Guide for R.H. Operating Lever  M.108/6R Screw, Wood, securing Guides  BD.3316 Spring, Return, for Operating Lever  BD.3641 Bracket for Operating Lever  2  BD.3641  Bracket for Operating Lever  2  BD.3641  Bracket for Operating Lever  2  BD.3641	·					\$
AS.302/4H Screw, Set, securing Link to Lock  AW.102/C Washer, between Link and Tongue of Lock  AN.102/L Nut on Setscrews  Z.723 Washer, Shakeproof, under Nuts  J.104/6S Pin, Clevis, securing Link to Operating Lever  FW.104/T Washer on Clevis Pins  L.103/6U Pin, Split, through Clevis Pins  BD.3670 Lever, Operating, Assembly, L.H.  BD.3671 Lever, Operating, Assembly, R.H.  BD.3643 Guide for L.H. Operating Lever  BD.3572 Guide for R.H. Operating Lever  M.108/6R Screw, Wood, securing Guides  BD.3316 Spring, Return, for Operating Lever  BD.3641 Bracket for Operating Lever  BB.3641 Bracket for Operating Lever  2  2  2  2  2  2  2  3  3  4  4  5  5  6  7  7  7  7  7  7  7  7  7  7  7  7	DD 2557	Link between Door Look and Opensing Louis		2 )		
AW.102/C Washer, between Link and Tongue of Lock AN.102/L Nut on Setscrews C.723 Washer, Shakeproof, under Nuts J.104/6S Pin, Clevis, securing Link to Operating Lever EW.104/T Washer on Clevis Pins L.103/6U Pin, Split, through Clevis Pins BD.3670 Lever, Operating, Assembly, L.H. BD.3671 Lever, Operating, Assembly, R.H. BD.3643 Guide for L.H. Operating Lever BD.3572 Guide for R.H. Operating Lever M.108/6R Screw, Wood, securing Guides BD.3316 Spring, Return, for Operating Lever BD.3641 Bracket for Operating Lever 2 BD.3641 Bracket for Operating Lever 2 BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3641 Bracket for Operating Lever 2  BD.3642 Bracket for Operating Lever 2  BD.3643 Bracket for Operating Lever 2  BD.3644 Bracket for Operating Lever 2  BD.3646 Bracket for Operating Lever 3  Bracket for Operating Lever 3  Bracket for Operating Lever 3  Bracket for Operating Lever						
AN.102/L Nut on Setscrews 2 C.723 Washer, Shakeproof, under Nuts 2 J.104/6S Pin, Clevis, securing Link to Operating Lever 2 FW.104/T Washer on Clevis Pins 2 L.103/6U Pin, Split, through Clevis Pins 2 BD.3670 Lever, Operating, Assembly, L.H. 1 BD.3671 Lever, Operating, Assembly, R.H. 1 BD.3643 Guide for L.H. Operating Lever 1 BD.3572 Guide for R.H. Operating Lever 1 M.108/6R Screw, Wood, securing Guides 4 BD.3316 Spring, Return, for Operating Lever 2 BD.3641 Bracket for Operating Lever 2 BD.3641 Bracket for Operating Lever 2		Washer between link and Tongue of Lock				
C.723 Washer, Shakeproof, under Nuts 2 J.104/6S Pin, Clevis, securing Link to Operating Lever 2 FW.104/T Washer on Clevis Pins 2 L.103/6U Pin, Split, through Clevis Pins 2 D.3670 Lever, Operating, Assembly, L.H. 1 BD.3671 Lever, Operating, Assembly, R.H. 1 BD.3643 Guide for L.H. Operating Lever 1 BD.3572 Guide for R.H. Operating Lever 1 M.108/6R Screw, Wood, securing Guides 4 BD.3316 Spring, Return, for Operating Lever 2 BD.3641 Bracket for Operating Lever 2 BD.3641 Bracket for Operating Lever 2						
J.104/6S Pin, Clevis, securing Link to Operating Lever  EW.104/T Washer on Clevis Pins  L.103/6U Pin, Split, through Clevis Pins  D.3670 Lever, Operating, Assembly, L.H.  BD.3671 Lever, Operating, Assembly, R.H.  BD.3643 Guide for L.H. Operating Lever  BD.3572 Guide for R.H. Operating Lever  M.108/6R Screw, Wood, securing Guides  BD.3316 Spring, Return, for Operating Lever  BD.3641 Bracket for Operating Lever  2 Fitted from Chassis No.  660001 to 660058  670011 to 670184  670011 to 670184				2		
FW.104/T		Pin. Clevis, securing Link to Operating Lever		2		
L.103/6U Pin, Split, through Clevis Pins 2 Lever, Operating, Assembly, L.H. 1 660001 to 660058 670011 to 670184 67011		Washer on Clevis Pins		2		
BD.3670 Lever, Operating, Assembly, L.H.  BD.3671 Lever, Operating, Assembly, R.H.  BD.3643 Guide for L.H. Operating Lever  BD.3572 Guide for R.H. Operating Lever  M.108/6R Screw, Wood, securing Guides  BD.3316 Spring, Return, for Operating Lever  BD.3641 Bracket for Operating Lever  2		Pin. Split. through Clevis Pins		. 2		
BD.3671 Lever, Operating, Assembly, R.H.  BD.3643 Guide for L.H. Operating Lever  BD.3572 Guide for R.H. Operating Lever  M.108/6R Screw, Wood, securing Guides  BD.3316 Spring, Return, for Operating Lever  BD.3641 Bracket for Operating Lever  2	BD.3670	Lever, Operating, Assembly, L.H.				
BD.3572 Guide for R.H. Operating Lever 1 M.108/6R Screw, Wood, securing Guides 4 BD.3316 Spring, Return, for Operating Lever 2 BD.3641 Bracket for Operating Lever 2		Lever, Operating, Assembly, R.H.			670011 to 670184	
M.108/6R Screw, Wood, securing Guides 4 BD.3316 Spring, Return, for Operating Lever 2 BD.3641 Bracket for Operating Lever 2		Guide for L.H. Operating Lever				
BD.3316 Spring, Return, for Operating Lever 2 BD.3641 Bracket for Operating Lever 2		Guide for R.H. Operating Lever				
BD.3641 Bracket for Operating Lever 2		Screw, Wood, securing Guides				
		Spring, Keturn, for Operating Lever		2	· !	
D 202/OW Pivot recuring Charating Laves to Reschat 7 1		Pivot cocuring Operating Lever to Bracket		2		
Nii Nia		Washer on Rivers		5		
AW.102/C Washer on Rivets 2 AW.102/T Washer on Rivets 2 3				5		

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
BD.3559	STRAP, OPERATING DOOR LOCK (COMPLETE WITH SWIVEL)		2	
BD.539/16 BD.3556 BD.1499/4	Screw, Self-Tapping, securing Swivel to Door Bracket, Fixing, for Door Lock Strap Screw, Wood, securing Fixing Brackets		4 2 4	
BD.2941	DOOR DOVETAIL BUFFER		2	
M.110/7R	Screw, Wood, securing Buffers	٠.	4	
BD.2942	DOOR DOVETAIL STRIKER		2	
M.110/8R	Screw, Wood, securing Strikers		4	
BD.3560	COVER PLATE, ON DOOR CASINGS, FOR LOCKS		2	
C.2025/1 AN.104/L AW.104/T	Screw, Set, securing Cover Plates Nut on Setscrews Washer under Nuts		8 8 8	•
BD.3311	CASING ASSEMBLY FOR L.H. DOOR		1	
BD.3312	CASING ASSEMBLY FOR R.H. DOOR	,	: <b>1</b>	
BD.3049 BD.2844 BD.2845	Piping Assy. for Door Casings Pocket for L.H. Door Pocket for R.H. Door		2 1 1}	Fitted from Chassis No. 660001 to 660028
BD.3836 BD.3837	Pocket for L.H. Door Pocket for R.H. Door		1}	670001 to 670071 Fitted to Chassis No. 660029 and subs.
BD.3822	Fastener "Tenax" on Doors		2	670072 and subs.
BD.2789	DOOR HINGE ARM		4	
BD.2791 BD.2792 BD.2793 BD.2794 BD.2859 BD.2860 BD.2861 BD.2862 BD.3863 FB.204/10D BD.2928 BD.1503/3 BD.3764	Plate, Pivot, for bottom L.H. Hinge Arm Plate, Pivot, for bottom R.H. Hinge Arm Plate, Pivot, for top L.H. Hinge Arm Plate, Pivot, for top R.H. Hinge Arm Plate, Face, for top R.H. Hinge Arm Plate, Face, for top R.H. Hinge Arm Plate, Face, for bottom L.H. Hinge Arm Plate, Face, for bottom R.H. Hinge Arm Screw, Set, securing Hinge Arms to Pivot Plates Bolt, securing Hinges to Doors Plate, Tapping, for Hinge Bolts Screw, Wood, securing Tapping Plates Packing for Door Hinges	*** **	1 1 1 1 1 1 1 4 16 4 8 As rec	ı'd.
C.3783 NS.125/4D FW.104/T C.724 BD.3405	LUGGAGE COMPARTMENT Floor Assembly, for Luggage Compartment Screw, Set, securing Floor Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Plate, Cover, for Petrol Filler Neck		1 6 6 6 1	Fitted from Chassis No. 660001 to 660017
BD.3893 BD.3892	Plate, Cover, for Petrol Filler Neck Moquette for Filler Neck Cover (16"×18")		1}	670001 to 660032 Fitted to Chassis No. 660018 and subs.
BD.539/15 BD.1502/2 BD.532/2 BD.3331 BD.3332 BD.1493/3	Screw, Self-Tapping, securing Cover Plate Screw, Wood, securing Cover Plate Washer, Cup, on Woodscrews Floorboard Assy., L.H., for Luggage Compartment Floorboard Assy., R.H., for Luggage Compartment Screw, Set, securing Floorboards		4 4 4 1 1 8	670033 and subs.

## FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
	LUGGAGE COMPARTMENT (continued)				
BD.542/3 C.724 BD.2209/2 FW.104/T C.724	Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews Screw, Self-Tapping, securing Floorboards Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		8 8 6 6		
BD.3862	CARPET FOR LUGGAGE COMPARTMENT FLOOR		1		
BD.3833 BD.1286	Felt, under Carpet on Luggage Compartment Floor Fastener "Durable Dot" securing Carpet		1 12		
BD.3431 BD.3527 BD.3535 BD.1814/2 BD.3432 BD.2385 BD.3433 BD.1814/1	Clip, securing Jack in Luggage Compartment Socket for Jack fixing Clip, fixing Jack Socket Rivet, Pop, securing Clips Clip, securing Ratchet in Luggage Compartment Clip, securing Wheel Brace in Luggage Compartment Clip, securing Starting Handle in Luggage Compartment Rivet, Pop, securing Clips	*	1 1 1 8 2 3 3 3 3	Fitted from Chassis No. 660001 to 660028 670001 to 670068 and 670070 and 670075	
BD.3434 BD.1814/2 BD.3438 BD.3437	Clip, securing Pump in Luggage Compartment Rivet, Pop, securing Clips Clip, securing Budget Key in Luggage Compartment Strap (Leather) securing Tool Roll in Luggage Compartment		2 2 2 1	and 0,0070 and 0,0073	
BD.539/2 BD.532/2	Screw, Self-Tapping, securing Strap Washer, Cup, on Self-Tapping Screw		1		
	make the second of the second				
BD.3215	GUTTER AROUND LUGGAGE COMPART- MENT LID APERTURE		1		
M.104/4R BD.3704/1	Screw, Wood, securing Gutter Rubber, Sealing, around Gutter (112" long)		36 1		
BD.3219	LUGGAGE COMPARTMENT LID ASSEMBLY (COMPLETE WITH CASING, LIGHT, LOCK AND HANDLE BUT LESS HINGES)	·	1		
BD.3628 BD.539/1 BD.532/1 BD.3395 NS.119/10D AW.102/T NN.119/L C.723 BD.3266 BD.3265/5 BD.3352 M.110/6R BD.3441 BD.3440 M.106/6R BD.3345 M.110/6R BD.3345 M.110/6R	Casing on Luggage Lid Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Lock for Luggage Lid Screw, Set, securing Lock Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Handle for Luggage Lid (complete with Washer) Screw, Set, through flanges of Handle Socket Assembly for Lock Screw, Wood, securing Sockets Socket Assembly for Lock (on Body) Socket for Lock (on Luggage Lid) Screw, Wood, securing Sockets Bracket, Guide, for Lock Rod Screw, Wood, securing Guide Brackets Light (Electric) on Luggage Lid		4 }	Fitted from Chassis No. 670001 to 670010 Fitted to Chassis No. 660001 and subs. 670011 and subs.	
BD.3738 M.106/8R BD.3283 BD.1502/4	Buffer (Rubber) at each side of Luggage Lid Screw, Wood, securing Buffers Buffer (Rubber) at bottom of Luggage Lid Screw, Wood, securing Buffers	·	4 8 2 2		

## POSITION  ## Washer, Spring (Double Coll) on Prop  ## Winty Spring (Double Coll) on Prop  ## Winty Spring (Double Spring Washer  ## 1037/14  ## 103	Part No.	Description.	Plate No.	No. per Unit. Remarks.
PW.105   T.   Washer, Plain, behind Spring Washer   1	BD.3391			1
Lido3/7U   Pint, Split, securing Prop in Bracket   1   1   1   1   1   1   1   1   1	BD.1708/1			
BD.2394   BD.3394   BD.3394   BD.3394   BD.3394   BD.3394   BD.3394   BD.3394   BD.3394   BD.3297   BD.3297   BD.2797   HINGE ARM FOR LUGGAGE LID, L.H.   1   BD.2797   HINGE ARM FOR LUGGAGE LID, R.H.   1   BD.2797   BD.2798   Piate, Pivot, for L.H. Hinge Arm   1   BD.2799   Piate, Pivot, for R.H. Hinge Arm   1   BD.2799				
BD.394   Socket for Prop				
### BD.2796 HINGE ARM FOR LUGGAGE LID, R.H.  ### BD.2797 HINGE ARM FOR LUGGAGE LID, R.H.  ### BD.2798   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2799   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2799   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2790   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2790   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2790   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2790   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2791   Plate, Pivot, for R.H. Hinge Arm   1    ### BD.2792   Plate, Securing Hinge Arm   1    ### BD.3171   PETROL FILLER BOX ASSEMBLY   1    ### BD.3171   PETROL FILLER BOX ASSEMBLY   1    ### BD.3171   PETROL FILLER BOX ASSEMBLY   1    ### BD.3172   BD.3220   BREATHER PIPE EXTENSION   1    ### BD.3220   BREATHER PIPE EXTENSION   1    ### BD.3221   Tube, (Rubber) for Breather Pipe   1    ### BD.3221   BD.3221   BD.3222   BD.3222   BD.3223   BD.3223    ### BD.3321   Seal (Rubber) around Door Aperture   1    ### BD.3323   BD.3232   BD.3232   BD.3232   BD.32332   BD	BD.3394	Socket for Prop		1
### BD.2797 HINGE ARM FOR LUGGAGE LID, R.H.  ### BD.2798 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2790 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2790 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2791 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2711 Plate, Pivot, for R.H. Hinge Arm 1  ### BD.2312 Plate, Drain (Rubber) on Petrol Filler Box 1  ### BD.3220 BREATHER PIPE EXTENSION 1  ### BD.3220 BREATHER PIPE EXTENSION 1  ### BD.3221 Tube (Rubber) for Breather Pipe 1  ### BD.3221 Tube (Rubber) around Door Aperture 1  ### BD.3211 BD.3312 DOOR FOR PETROL FILLER BOX 1  ### BD.3312 Book Plate, Tapping, for Door Fixing 2  ### Secrew, Sat, securing Door 4  ### BD.3316 Plate, Tapping, for Door Fixing 2  ### Secrew, Sat, securing Door 4  ### Sate Pivot, For Soring Retainer 4  ### BD.3316 Spring for Door Botts 1  ### BD.3316 Spring, For for Soring Retainer 1  ### BD.3316 DOCK ASSEMBLY FOR PETROL FILLER DOOR 1  ### BD.3318 Plate, Tapping, for fixing Striker 2  ### BD.3318 Plate, Tapping, for fixing Striker 2  ### BD.3318 Plate, Tapping, for fixing Striker 3  ### BD.3318 Plate, Tapping, for fixing Striker 4  ### BD.3318 Plate, Tapping, for fixing Striker 5  ### BD	M.106/6R	Screw, Wood, securing Socket		4
BD.2798   Plate, Plvot, for L.H. Hinge Arm   1	BD.2796	HINGE ARM FOR LUGGAGE LID, L.H.		1
BD.2199   Piste, Pivot, for R.H. Hinge Arm   1	BD.2797	HINGE ARM FOR LUGGAGE LID, R.H.		1
F8.104/140	BD.2798			•
FN.204/L Screw, Sc., Securing Hinges AN.102/L BD.3171 PETROL FILLER BOX ASSEMBLY 10 BD.3171 PETROL FILLER BOX ASSEMBLY 11 BD.4223 BD.3192 BD.3210 BREATHER PIPE EXTENSION 11 BD.3220 BREATHER PIPE EXTENSION 11 BD.3221 BD.3221 Tube, (Rubber) for Breather Pipe 11 BD.3221 BD.3221 BD.3221 BD.3221 BD.3221 BD.3221 BD.3221 BD.3221 BD.3221 Seal (Rubber) around Door Aperture 11 BD.3183 BD.3211 Seal (Rubber) around Door Aperture 12 BD.3185 BD.3211 Seal (Rubber) around Door Aperture 13 BD.3185 BD.3187 BPIAte, Tapping, for Door Fixing 14 BD.3188 Spring for Door 15 BD.3187 Retailner for Spring As req'd. BD.3187 BOSH Assembly For Petrol Filler DOOR 1 BD.3187 BOSH, Assembly For Petrol Filler DOOR 1 BD.3188 BD.3188 PETROL Filler CAP BD.3188 PETROL FILLER CAP 1 Fitted from Chassis No. 65001 to 660017 670032 and subs. 670033 and subs. 670032 Filler Cap				
AS.502/12H				
D.3171 PETROL FILLER BOX ASSEMBLY  BD.3171 PETROL FILLER BOX ASSEMBLY  BD.4223 Tube, Drain (Rubber) on Petrol Filler Box  BD.3210 Hose, Petrol Pipe  C.824 Cilp, securing Petrol Pipe Hose  C.824 Cilp, securing Petrol Pipe Hose  D.3220 BREATHER PIPE EXTENSION  BD.3221 Tube (Rubber) for Breather Pipe  D.3221 Tube (Rubber) around Door Aperture  BD.3221 Seal (Rubber) around Door Aperture  BD.3182 DOOR FOR PETROL FILLER BOX  BD.3211 Seal (Rubber) around Door Aperture  BD.3185 Plate, Tapping, for Door Fixing  Screw, Set, securing Door  Washer, Facking  As req'd.  Spring for Door Fixing  BD.3166 Spring for Door Door Box Aperture  BD.3167 Box Assembly For Petrol Filler  BD.3168 Spring for Door  BO.3171 Washer, Plain, on Bolt  LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.3178 NB.313/3H  BD.3178 Doit, ejacent to Spring Retainer  LOCK  BD.3178 Distance Assembly For PETROL FILLER  BD.3178 Doit, ejacent to Spring Filler Cap  BD.3189 Seal (Cork) inside Filler Cap  BD.3189 Seal (Cork) inside Filler Cap  Filted from Chassis No.  660018 and subs.  670033 and subs.  670033 and subs.				
BD.3171   PETROL FILLER BOX ASSEMBLY   1	AN.102/L			
BD.4223	C./23	wasner, Snakeproof, under Nuts		10
BD.3192	BD.3171	PETROL FILLER BOX ASSEMBLY		1
BD.3192	BD.4223	Tube, Drain (Rubber) on Petrol Filler Box		1
BD.3220 BREATHER PIPE EXTENSION  BD.3221 Tube (Rubber) for Breather Pipe BD.3210 Grommet on Breather Pipe  BD.3211 Seal (Rubber) around Door Aperture BD.3211 Seal (Rubber) around Door Aperture BD.3181 Plate, Tapping, for Door Fixing Spring for Door BD.3183 Retainer for Spring BD.3185 Seal (Guster to Spring Retainer AW.102/T Washer, Plath, on Bolt NN.116/L Nut on Bolt C.722 Washer, Shakeproof, under Nut  BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.3180 STRIKER ASSEMBLY FOR PETROL FILLER BD.3178 Plate, Tapping, for fixing Striker LOCK BD.3189 PETROL FILLER CAP  BD.3188 PETROL FILLER CAP  BD.3189 Seal (Cork) inside Filler Cap Spring, between Filler Cap Spring, between Filler Cap Spring, securing Filler Cap Spring, securing Filler Cap Spring, securing Filler Cap Spring, securing Filler Cap Spring, between Filler Cap Spring, between Filler Cap In Hinge In Split, securing Filler Cap Spring, between Filler Cap In Hinge In Spring In Spring In Hinge In Spring In Spring In In Hinge In Spring In Spring In In Hinge In Spring In In Hinge In I	BD.3192	Hose, Petrol Pipe		
BD.3210 Tube (Rubber) for Breather Pipe 1 BD.3210 Grommet on Breather Pipe 1 BD.3211 Seal (Rubber) around Door Aperture 1 BD.3185 Plate, Tapping, for Door Fixing 2 SNS.316/314 Screws, Set. securing Door 4 C.722 Washer, Shakeproof, on Setscrews 4 C.3337 Washer, Packing As req'd. BD.3186 Spring for Door 1 BNB.616/5H Bolt, adjacent to Spring Retainer 1 NN.116/L Nut on Bolt 1 NN.313/3H Bolt, securing Striker 2 BD.3178 Plate, Tapping, for fixing Striker 2 BD.3178 Plate, Tapping, for fixing Striker 4 C.721 Washer, Shakeproof, on Bolts 4 BD.3188 PETROL FILLER CAP 1 BD.3188 PETROL FILLER CAP 1 BD.3189 Seal (Cork) inside Filler Cap 1 Fitted to Chassis No. 660018 and subs. 670033 plus Plate, Tapping, between Filler Cap 2 Plate, Spiring, between Filler Cap 1 Plate	C.824	Clip, securing Petrol Pipe Hose		2
BD.3210   Grommet on Breather Pipe   1	BD.3220	BREATHER PIPE EXTENSION		1
BD.3182   DOOR FOR PETROL FILLER BOX   1	BD 3221	Tube (Rubber) for Breather Pipe		1
BD.3211   Seal (Rubber) around Door Aperture   1				1
BD.3185 Plate, Tapping, for Door Fixing NS.316/314 Screw, Set, securing Door C.722 Washer, Shakeproof, on Setscrews 4 C.3377 Washer, Packing As req'd. BD.3186 Spring for Door BD.3187 Retainer for Spring Retainer C.721 Washer, Plain, on Bolt NN.116/L Nut on Bolt C.722 Washer, Shakeproof, under Nut  BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.3178 Plate, Tapping, for fixing Striker C.721 Washer, Shakeproof, on Bolts  BD.3178 Plate, Tapping, for fixing Striker C.721 Washer, Shakeproof, on Bolts  BD.3188 PETROL FILLER CAP  BD.3188 PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 660017 670001 to 670032  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 66001 and subs. 670033 and subs.  BD.3189 Seal (Cork) inside Filler Cap C.3321 Spring, between Filler Cap and Hinge Plate Plate  C.721 Plate  C.722 Plate  C.723 Plate  C.724 Pin, Split, securing Filler Cap to Joint Pin In Hinge Plate  C.725 Plate  C.726 Plate  C.727 Plate  C.727 Plate  C.727 Plate  C.728 Plate  C.729 Plate  C.729 Plate  C.729 Plate  C.729 Plate  C.720 Plate  C.720 Plate  C.720 Plate  C.720 Plate  C.720 Plate  C.721 Plate  C.721 Plate  C.721 Plate  C.721 Plate  C.722 Plate  C.722 Plate  C.723 Plate  C.724 Plate  C.725 Plate  C.726 Plate  C.726 Plate  C.727 Plate  C.727 Plate  C.727 Plate  C.728 Plate  C.728 Plate  C.729 Plate  C.729 Plate  C.729 Plate  C.720 Plate	BD.3182	DOOR FOR PETROL FILLER BOX		1
BD.3185 Plate, Tapping, for Door Fixing NS.316/314 Screw, Set, securing Door C.722 Washer, Shakeproof, on Setscrews 4 C.3377 Washer, Packing As req'd. BD.3186 Spring for Door BD.3187 Retainer for Spring Retainer C.721 Washer, Plain, on Bolt NN.116/L Nut on Bolt C.722 Washer, Shakeproof, under Nut  BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.3178 Plate, Tapping, for fixing Striker C.721 Washer, Shakeproof, on Bolts  BD.3178 Plate, Tapping, for fixing Striker C.721 Washer, Shakeproof, on Bolts  BD.3188 PETROL FILLER CAP  BD.3188 PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 660017 670001 to 670032  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 66001 and subs. 670033 and subs.  BD.3189 Seal (Cork) inside Filler Cap C.3321 Spring, between Filler Cap and Hinge Plate Plate  C.721 Plate  C.722 Plate  C.723 Plate  C.724 Pin, Split, securing Filler Cap to Joint Pin In Hinge Plate  C.725 Plate  C.726 Plate  C.727 Plate  C.727 Plate  C.727 Plate  C.728 Plate  C.729 Plate  C.729 Plate  C.729 Plate  C.729 Plate  C.720 Plate  C.720 Plate  C.720 Plate  C.720 Plate  C.720 Plate  C.721 Plate  C.721 Plate  C.721 Plate  C.721 Plate  C.722 Plate  C.722 Plate  C.723 Plate  C.724 Plate  C.725 Plate  C.726 Plate  C.726 Plate  C.727 Plate  C.727 Plate  C.727 Plate  C.728 Plate  C.728 Plate  C.729 Plate  C.729 Plate  C.729 Plate  C.720 Plate	BD.3211	Seal (Rubber) around Door Aperture		1
C.722 Washer, Shakeproof, on Setscrews  C.3377 Washer, Packing  BD.3186 Spring for Door  BD.3187 Retainer for Spring Retainer  AW.102/T Washer, Plain, on Bolt  C.722 Washer, Shakeproof, under Nut  BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.3178 Plate, Tapping, for fixing Striker  LOCK  BD.3178 Plate, Tapping, for fixing Striker  C.721 Washer, Shakeproof, on Bolts  BD.3188 PETROL FILLER CAP  D.3188 PETROL FILLER CAP  See and Company of the Company		Plate, Tapping, for Door Fixing		
C.3377   Washer, Packing   As req'd.				•
BD.3186 Spring for Door Retainer for Spring No.3187 Retainer for Spring No.3187 Retainer for Spring No.3187 Retainer for Spring No.3187 Retainer for Spring No.3180 In the spring				·
NB.616/5H AW.102/T Washer, Plain, on Bolt NI.116/L NI.116				1
AW.102/T Nut on Bolt 1 NN.116/L Nut on Bolt 1 NN.116/L Nut on Bolt 1 BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR 1  BD.2130 STRIKER ASSEMBLY FOR PETROL FILLER 1 LOCK BD.3178 Plate, Tapping, for fixing Striker 2 NB.313/3H Bolt, securing Striker 4 C.721 Washer, Shakeproof, on Bolts 4  BD.3188 PETROL FILLER CAP 1 Fitted from Chassis No. 660001 to 660017 670001 to 670032  BD.3699 PETROL FILLER CAP 1 Fitted to Chassis No. 660018 and subs. 670033 and subs. 670033 and subs. 670033 and subs. 670033 and subs. 6700331 Plate Plate 1 L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate 1 L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate 1 Plate				1
NN.116/L C.722 Washer, Shakeproof, under Nut  BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.2130 STRIKER ASSEMBLY FOR PETROL FILLER LOCK  BD.3178 Plate, Tapping, for fixing Striker NB.313/3H Bolt, securing Striker C.721 Washer, Shakeproof, on Bolts  BD.3188 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 660017 670001 to 670032  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs. 670033 and subs.  BD.3189 Seal (Cork) inside Filler Cap C.3321 Spring, between Filler Cap to Joint Pin in Hinge Plate				1
C.722 Washer, Shakeproof, under Nut  BD.3640 LOCK ASSEMBLY FOR PETROL FILLER DOOR  BD.2130 STRIKER ASSEMBLY FOR PETROL FILLER LOCK  BD.3178 Plate, Tapping, for fixing Striker RB.313/3H Bolt, securing Striker C.721 Washer, Shakeproof, on Bolts  BD.3188 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 660017 670001 to 6700032  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs.  BD.3189 Seal (Cork) inside Filler Cap C.3321 Spring, between Filler Cap and Hinge Plate L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate				i
BD.2130 STRIKER ASSEMBLY FOR PETROL FILLER LOCK  BD.3178 Plate, Tapping, for fixing Striker NB.313/3H Bolt, securing Striker C.721 Washer, Shakeproof, on Bolts  BD.3188 PETROL FILLER CAP  BD.3189 PETROL FILLER CAP  BD.3189 Seal (Cork) inside Filler Cap C.3321 Spring, between Filler Cap to Joint Pin in Hinge Plate  1 Fitted from Chassis No. 660001 to 660017 670001 to 670032 Fitted to Chassis No. 660018 and subs. 670033 and subs.		Washer, Shakeproof, under Nut		1
LOCK  BD.3178 Plate, Tapping, for fixing Striker  NB.313/3H Bolt, securing Striker  C.721 Washer, Shakeproof, on Bolts   BD.3188 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 660017 670001 to 670032  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs.  BD.3189 Seal (Cork) inside Filler Cap  C.3321 Spring, between Filler Cap and Hinge Plate  L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate	BD.3640	LOCK ASSEMBLY FOR PETROL FILLER DOOR		1
BD.3178 Plate, Tapping, for fixing Striker  NB.313/3H Bolt, securing Striker  C.721 Washer, Shakeproof, on Bolts   BD.3188 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  BD.3189 Seal (Cork) inside Filler Cap  C.3321 Spring, between Filler Cap and Hinge Plate L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate  Plate	BD.2130			1
NB.313/3H C.721  Bolt, securing Striker Washer, Shakeproof, on Bolts  4  BD.3188  PETROL FILLER CAP  1 Fitted from Chassis No. 66001 to 66001 to 670032  BD.3699  PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs.  BD.3189  Seal (Cork) inside Filler Cap  C.3321  Spring, between Filler Cap and Hinge Plate L.102/4U  Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate	BD 3179			2
BD.3188  PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 660017 670001 to 670032  BD.3699  PETROL FILLER CAP  1 Fitted from Chassis No. 660001 to 66001 to 66001 to 670032  Fitted to Chassis No. 660018 and subs. 670033 and subs.  BD.3189  Seal (Cork) inside Filler Cap  Spring, between Filler Cap and Hinge Plate L.102/4U  Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate				4
BD.3699 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs. 670033 and subs. 670033 and subs. 670034 Pin, Spling, between Filler Cap and Hinge Plate L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate Plate				4
BD.3699 PETROL FILLER CAP  BD.3699 PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs. 670033 and subs. 670033 and subs. 670034 Pin, Spling, between Filler Cap and Hinge Plate L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate Plate				4 Sixed from Charie No.
BD.3699  PETROL FILLER CAP  1 Fitted to Chassis No. 660018 and subs. 670033 and subs.  BD.3189  Seal (Cork) inside Filler Cap  C.3321  Spring, between Filler Cap and Hinge Plate  L.102/4U  Pin, Split, securing Filler Cap to Joint Pin in Hinge Plate  1 Fitted to Chassis No. 660018 and subs.  670033 and subs.	BD.3188	PETROL FILLER CAP		660001 to 660017
BD.3189 Seal (Cork) inside Filler Cap 1  C.3321 Spring, between Filler Cap and Hinge Plate 1  L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge 1  Plate	BD 3400	DETDOL FILLED CAP		
BD.3189 Seal (Cork) inside Filler Cap 1 C.3321 Spring, between Filler Cap and Hinge Plate 1 L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge 1 Plate	BD.3077	PETROL FILLER CAP		660018 and subs.
C.3321 Spring, between Filler Cap and Hinge Plate 1 L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge 1 Plate	BD.3189	Seal (Cork) inside Filler Cap		
L.102/4U Pin, Split, securing Filler Cap to Joint Pin in Hinge 1 Plate		Spring, between Filler Cap and Hinge Plate		
	L.102/4U	Pin, Split, securing Filler Cap to Joint Pin in Hinge		1
	C.2501/3	Washer, Plain, under Split Pin		1

## FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
BD.2780	FRONT END ASSEMBLY (COMPRISING L.H. AND R.H. FRONT WINGS AND CONNECTING PANEL)		1	
BD.3551 BD.3552 BD.3553 BD.2561 BD.2563/1	Steady for L.H. Front Wing Steady for R.H. Front Wing Bracket, Attachment, for Wing Steady Motif for Head Lamp Containers Screw, Set (Special) securing Motifs		1 1 2 2 4	
FW.105/T AW.104/T	Washer for Motifs' Washer on Setscrews		8 4	
BD.3382	STONEGUARD ASSEMBLY FOR L.H. FRONT WING		1	
BD.3383	STONEGUARD ASSEMBLY FOR R.H. FRONT WING		1	
BD.3335	Support for L.H. Stoneguard		1	
BD.3336 FS.104/5D	Support for R.H. Stoneguard Screw, Set, securing Supports		1 6	
W.104/T	Washer, Plain, on Setscrews		6	
FN.104/L C.724	Nut on Setscrews Washer, Shakeproof, under Nuts		6 6	
BD.3217	REAR WING, L.H.		1	
3D.3218	REAR WING, R.H.		1	
3D.2401/2	Screw, Set, securing Rear Wings		14 14	
BD.542/2 C.725	Washer, Special on Setscrews Washer, Shakeproof, on Setscrews		14	
BD.3346	FRONT SUPPORT FOR R.H. REAR WING		1	
BD.3347	FRONT SUPPORT FOR L.H. REAR WING		1	
3D.3348	REAR SUPPORT FOR R.H. REAR WING		1	
BD. <b>3349</b>	REAR SUPPORT FOR L.H. REAR WING		1	
FS.104/6D FS.105/10D	Screw, Set, securing Rear Wing Supports Screw, Set, securing Rear Wing Supports		4	
FN.104/L C.724	Nut on Setscrews Washer, Shakeproof, under Nuts		8 8	
BD.3226	COVER FOR L.H. REAR WING		1	
BD. <b>322</b> 7	COVER FOR R.H. REAR WING		1	
BD. <b>2122</b>	LOCK FOR L.H. REAR WING COVER		1	
	LOCK FOR R.H. REAR WING COVER		1	
BD. <b>2121</b>				
	Screw. Set. securing Locks		4	
BD.2121 AS.502/4H AN.102/L	Screw, Set, securing Locks Nut on Setscrews		4	
AS.502/4H				

Part No.	Description.	Plate No. per No. Unit.	Remarks.	
2312	ESCUTCHEON FOR LOCKS ON WING COVERS	2		
BD.540/9	Screw, Self-Tapping, securing Escutcheons	4		
BD.3384	STONEGUARD ASSEMBLY FOR L.H. REAR WING	1		
BD.3385	STONEGUARD ASSEMBLY FOR R.H. REAR WING	1	·	
FS.104/6D FN.104/L C.724	Screw, Set, securing Stoneguards Nut on Setscrews Washer, Shakeproof, under Nuts	4 4 4		
BD.3225	BONNET ASSEMBLY	1		
FS.104/4D FW.104/T C.724	Screw, Set, securing Bonnet to Hinges Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews	8 8 8		
BD.2948	BONNET HINGE ASSEMBLY, L.H.	1		
BD.2949	BONNET HINGE ASSEMBLY, R.H.	1		
BD.3250 BD.2848	<b>Bracket</b> Assembly, mounting Bonnet Hinges <b>Plate,</b> Tapping, for Bonnet Hinges	2 2		
BD.3270	PROP ASSEMBLY, HOLDING BONNET IN "OPEN" POSITION	1		
BD.3272 BD.1708/1 FW.105/T L.102/6U BD.3798	Pin, hingeing Bonnet Prop Washer, Spring, on Hinge Pin Washer, Plain, on Hinge Pin Pin, Split, through Hinge Pin Bracket and Clip Assy., fixing Prop in "closed" position	1 1 1 1		
AS.402/3H AN.102/L C.723	Screw, Set, securing Clip Assembly Nut on Setscrews Washer, Shakeproof, under Nut	2 2 2		
BD.3273	ANCHOR BRACKET FOR BONNET PROP	1		
FS.104/3D FS.104/4D C.724 BD.3333	Screw, Set, securing Anchor Bracket Screw, Set, securing Anchor Bracket Washer, Shakeproof, on Setscrews Plate, Tapping, for Bonnet Prop	1 2 3 1		11 B
BD.3271	SOCKET ASSEMBLY FOR BONNET PROP	1		
FS.104/4D FN.104/L C.724	Screw, Set, securing Socket to Front Wing Valance Nut on Setscrews Washer, Shakeproof, under Nuts	2 2 2		
BD.2950	BONNET CATCH ASSEMBLY	1		
BD.2952 NS.125/4D C.724	Plate, Guide, for Bonnet Catch Screw, Set, securing Bonnet Catch Washer, Shakeproof, on Setscrews	1 3 3		

# FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

				670001 TO 670184
Part No.	Description.	Plate No.	No. per Unit.	Remarks.
BD.2951	HOOK AND STRIKER ASSEMBLY FOR BONNET CATCH		» <b>1</b>	
BD.3386 FS.104/4D	Bracket, mounting Hook and Striker Screw, Set, securing Hook and Striker		1 10	
FW.104/T	Washer, Plain, on Setscrews		2 10	
FN.104/L C.724	Nut on Setscrews Washer, Shakeproof, under Nuts		10	
C.7 2 1	,			
BD.2954	CONTROL WIRE, RELEASING BONNET CATCH (COMPLETE WITH KNOB AND FITTINGS)		1	
C.2711	Clip, securing Control Wire		1	
NS.131/5D C.3116/2	Screw, Set, securing Clip Nut on Setscrew		1	
C.725	Washer, Shakeproof, under Nut		1	
C.2735	Clip, securing Control Wire		2	
BD.4321	RUBBER BUFFER FOR BONNET REST		4	
BD.2877	RADIATOR GRILLE ASSEMBLY (IN BONNET)		1	
BD.2877/1-2	Frame, Outer only		1	
BD.2877/3	Vane, Centre		1	
BD.2877/4 BD.2877/5	Vane, No. 1, L.H. Vane, No. 1, R.H.		1	
BD.2877/6	Vane, No. 2, L.H.		1	
BD.2877/7 BD.2877/8	Vane, No. 2, R.H. Vane, No. 3, L.H.		1	
BD.2877/9	Vane, No. 3, R.H.		1	
BD.2877/10	Vane, No. 4, L.H. Vane, No. 4, R.H.		1	
BD.2877/11 BD.2877/12	Vane, No. 5, L.H.		i	
BD.2877/13	Vane, No. 5, R.H.		1	
BD.2877/14 BD.2877/15	Vane, No. 6, L.H. Vane, No. 6, R.H.		i	
BD.3285	Stud, Special, on Radiator Grille		10	
AW.102/T	Washer, Plain, on Special Studs		10	
AN.102/L C.723	Nut on Special Studs Washer, Shakeproof, under Nuts		10 10	
C.723	Washer, Shakeproof, under 14413		,,	
BD.3286	BADGE ON BONNET		1	
AW.102/T	Washer, Plain, on Badge Stud		1	
AN.102/L	Nut on Stud		1 1	
C.723	Washer, Shakeproof, under Nut		. •	
BD.2855	FRONT BUMPER BAR		2	
C.4202/3	Nut, securing Bumper Bars to Spring Bars		6	
C.3088	Washer for Bumper fixing		2	Fitted to Chassis No. 660001 and subs. 670011 and subs.
C.3695	SPRING - BAR, MOUNTING BUMPER BARS		2	
NB.150/32D	Bolt, securing Spring Bars to Brackets		2	
C.728	Washer, Shakeproof, on Bolts		8 2	Fitted from Chassis No. 670001 to 670010
NB.150/24D FW.208/T	Bolt, securing Spring Bars to Supports Washer, Plain, on Bolts		6	5,5001 (5 0,0010
NB.150/20D	Bolt, securing Spring Bars to Brackets		8	Fitted to Chassis No.
C.728 NB.150/10D	Washer, Shakeproof, on Bolts Bolt, securing Spring Bars to Supports		2	660001 and subs.
FW.208/T	Washer, Plain, on Bolts		6 J	670011 and subs.
C.3837 C.741	Nut, Dome, securing Spring Bars to Extensions Washer, Shakeproof, under Dome Nuts		4 .	
C./71	Tradici distrationi distri polite itam		•	

Part No.	Description.	Plate No. per No. Unit. Remarks.	
C.3943	SCREWED EXTENSION FOR SPRING-BAR	4 Fitted to Chassis No. 660001 and subs.	· · · · · · · · · · · · · · · · · · ·
C.3945	FIXING  Washer, Spacing, on Screwed Extensions	670011 and subs. 4 Fitted to Chassis No.	
C.3849	Weeken (Bukken) at M/r a second a test	660001 and subs. 670011 and subs.	
C.793	Washer (Rubber) at Wing mounting holes Washer, Spacing	8	
C 3848 C.3225/1	Tube, Spacing Washer, Wing Clamping	4) Fitted from Chassis No. 4 670001 to 670010	
C.3225	Washer, Wing Clamping	4 Fitted to Chassis No. 660001 and subs. 670011 and subs.	
C.3830	Piece, Distance	2	
C.3831	BUMPER SUPPORT MEMBER	1	
C.3833	BUMPER SUPPORT STRUT, L.H.	1	
C.3832	BUMPER SUPPORT STRUT, R.H.	1	
NB.137/7D	Bolt, securing Support Struts to Chassis Frame	2	
C.741	Washer, Shakeproof, on Bolts	2	
C.3205	STEADY BRACKET FOR STARTING HANDLE	1 Fitted from Chassis No. 660001 to 660028 670001 to 670068 670070 and 670075	
BD.2856/1	REAR OVER-RIDER, R.H.	1	
BD.2856/2	REAR OVER - RIDER, L.H.	1	
C.3279	Nut, Dome, securing Over-Riders to Spring Bars	4	
FW.106/T C.726	Washer, Plain, on Over-Rider Studs Washer, Shakeproof, under Dome Nuts	2 4	
C.3784	SPRING-BAR, MOUNTING OVER-RIDERS	2	
C.3778	Piece, Distance, between Spring Bars and Support Brackets	2	
C.2869	Grommet (Rubber) on Distance Pieces	2	
NB.137/7D NB.137/25D	Bolt, securing Spring Bars to Chassis Frame Bolt, securing Spring Bars to Chassis Frame	2 4	
NN.137/L C.726	Nut on Bolts Washer, Shakeproof, under Nuts	6 6	
C.3779	TIE BRACKET FOR R.H. OVER-RIDER	1	
C.3780	TIE BRACKET FOR L.H. OVER-RIDER	1	
C.3781	SUPPORT BRACKET FOR R.H. OVER-RIDER	1	
C.3782	SUPPORT BRACKET FOR L.H. OVER-RIDER	1	
NB.150/41D	Bolt, through Support Bracket, securing Spring Bar	2 Fitted from Chassis No. 660001 to 660023 660060 and subs. 670001 to 670052	
NB.150/44D	Bolt, through Support Bracket, securing Spring Bar	670173 and subs. 2 Fitted from Chassis No. 660024 to 660059	
C.3837 C.728	Nut, Dome, on Bolts Washer, Shakeproof, under Dome Nuts	670053 to 670172 2 2	

FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

	Destates	Plate	No. p	
Part No.	Description.	No.	Unit	. Remarks.
C.3236	FRONT NUMBER PLATE ASSEMBLY		1	NOT REQUIRED FOR U.S.A
C.3229	FRONT LICENCE PLATE ASSEMBLY		1	FOR EXPORT TO U.S.A.
C.2946	REAR NUMBER PLATE PANEL ASSEMBLY	,	1	NOT REQUIRED FOR U.S.A. AND CANADA
C. <b>294</b> 1	REAR NUMBER PLATE PANEL ASSEMBLY		1	FOR EXPORT TO U.S.A. AND CANADA
C.2945	REAR NUMBER PLATE		1	SUPPLIED TO SPECIAL ORDER ONLY. NOT REQUIRED FOR U.S.A. AND CANADA
C.2944 NS.125/4D FS.504/20H FW.104/T FN.104/L C.724	Seal (Rubber) around Number Plate Panel (5' long) Screw, Set, securing Number Plate Panel Screw, Set, securing Number Plate Panel Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts		1 4 4 8 4 4	C.S.A. AND CANADA
C.2840	COMMISSION NUMBER PLATE		1	
BD.4004	RECORD-BREAKING REPLICA PLATE		1	
BD.4005/1	Screw, Wood, securing Replica Plate		4	
C.1107	LICENCE HOLDER		1	
BD.3442	GRAB RAIL		1	
BD.1506/2	Screw, Wood, securing Grab Rail		4	
	INTERIOR TRIMMING			
BD.3654 BD.3655 BD.3656 BD.3657 BD.3631 BD.633 BD.3693 BD.3693 BD.3660 BD.3661 BD.3662 BD.3663 BD.3663 BD.3663 BD.3781 BD.3782 BD.3783 BD.3784 BD.3783 BD.3784 BD.3785 BD.3785 BD.3786 BD.3787 BD.3787 BD.3787 BD.3787 BD.3787	Strip, Tacking, for Waist Piping around Scuttle Strip, Tacking, for Waist Piping around Tonneau Strip, Tacking, for Waist Piping at Corners Strip, Tacking, for Waist Piping at Corners Strip, Tacking, for Waist Piping on Doors Piping, Waist (13' 6" long) Piping, Draught, around Doors (12' long) Retainer, L.H., for Piping Retainer, R.H., for Piping Screw, Self-Tapping, securing Retainers Hide for Piping on L.H. Door (8" × 29") Hide for Piping around Scuttle (9" × 51") Hide for Piping around Scuttle (9" × 51") Hide for Piping around Tonneau (3" × 66") Plug, for ends of Piping Piping Assembly for Door Casings (16' 3" long) Piping Assembly for Door Casings (16' 3" long) Piping Assembly for Rear Wings (6' long) Moquette for Side Curtain Tray Moquette for Side Curtain Tray Moquette for Battery Container Moquette for E.H. side of Locker Floor Moquette for R.H. side of Locker Floor Gasket "Rubo" for Shut Pillar (4' 6" long) Gasket "Rubo" for Hinge Pillar (6' long) Casing Assy., for L.H. Rear Quarter Casing Assy., for R.H. Rear Quarter Screw, Self-Tapping, securing Rear Quarter		1 1 2 2 1 1 1 1 4 1 1 1 1 8 1 2 1 1 1 1 1 1 1 1 1 1 1 1 1	
BD.3813 BD.3814	Casing Assy., for L.H. Rear Quarter Casing Assy., for R.H. Rear Quarter Screw, Self-Tapping, securing Rear Quarter		-	

Part No.	Description.	Plate No.	No. per Unit.	r Remarks.	
BD.3871	COVER ASSEMBLY FOR PROPELLER SHAFT TUNNEL		1		
BD.3045	Piping, Assembly, for Prop Shaft Tunnel Cover (3' long)		1		
BD.3868	SEAT, L.H., ASSEMBLY		1		
BD.3869	SEAT, R.H., ASSEMBLY		1		
	NOTE.—The above is for the supply of fully Trimmed Seats, complete with Base Frame, Runners, Adjusting Lever and Hinges, BUT LESS CUSHION.				
BD.4006	SEAT SQUAB FRAME ASSEMBLY, L.H.		1		
BD.4007	SEAT SQUAB FRAME ASSEMBLY, R.H.		1		
	NOTE.—The above is fully Trimmed and complete with Hinges.				
BD.3252	SEAT BASE FRAME ASSEMBLY, L.H.		1		
BD.3253	SEAT BASE FRAME ASSEMBLY, R.H.		1		
	NOTE.—The above is complete with Runners, Adjusting Lever and Tension Spring.				
BD.3870	SEAT CUSHION ASSEMBLY		2		
BD.3287 BD.3288 BD.3675 BD.3676	Hinge for L.H. Seat Hinge for R.H. Seat Hinge, Inner, for L.H. Seat Hinge, Inner, for R.H. Seat		2 2 1 1	Fitted from Chassis No. 670001 to 670010 Fitted to Chassis No.	
BD.3768 BD.3769	Hinge, Outer, for L.H. Seat Hinge, Outer, for R.H. Seat		1	660001 and subs. 670011 and subs.	
BD.3255 BD.541/10 C.2441/2	Pivot for Hinges  Washer, Plain, on Pivots  Nut on Pivots		4 8 4		
FG.105/X BD.3308/9	Washer, Spring, under Nuts Runner on Seats (comprising one Plain and one		4 2		
NS.525/6H	Slotted Runner per set) Screw, Set, securing Runners to Floor		8		
FS.504/4H FN.104/L C.724	Screw, Set, securing Runners to Seats Nut, fixing Setscrews to Seats Washer, Shakeproof, under Nuts		8 8 8		•
BD.3258 BD.3259	Lever, Adjusting, on L.H. Seat Lever, Adjusting, on R.H. Seat		1		
FS.104/4D FW.104/T	Screw, Set, securing Adjusting Levers Washer, Plain, on Setscrews		2 2		
FN.104/L C.724 C.3317	Nut on Setscrews Washer, Shakeproof, under Nuts Spring, Tension, for Adjusting Levers		2 2 2		
BD.3317	HOODSTICKS ASSEMBLY		1		
BD.4374	Rubber, Sealing, in channel of Canopy Rail (44" long)		1		

## FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

				6/0001 10 6/0104
Part No.	Description.	Plate No.	No. pe Unit.	
BD.3260	TOGGLE CLAMP AT CENTRE AND EACH		3	
BD.2010/3	Screw, Set, securing Toggle Clamps		6	
BD.3241 AS.102/12D AS.102/16D AW.102/T	RETAINER, ON BODY, FOR HOODSTICKS Screw, Set, securing Retainers Screw, Set, securing Retainers Washer, Plain, on Setscrews		2 2 2 4	
	, , , , , , , , , , , , , , , , , , ,			
BD.4525	WEBBING STRIP ON HOODSTICKS (4" x 50")		1	
C.2015/1 BD.532/4 BD.531/2	Screw, Set, securing Webbing to Rear Stick Washer, Cup, on Setscrews Nut, Dome, on Setscrews		2 2 2	
BD.3824	HOOD CLOTH ASSEMBLY (COMPLETE WITH BACKLIGHT)		1	
BD.3833	Fastener "Durable Dot" for Hood		4	
C.2015/3 BD.532/4 BD.531/2	Screw, Set, securing Hood Cloth to Floating Stick Washer, Cup, on Setscrews Nut, Dome, on Setscrews		2 2 2	
BD.1369	BACKLIGHT ASSEMBLY		1	
2162	Glass only, for Backlight		. 1	
BD.3838	PIN BEAD ALONG CANOPY RAIL		1	
BD.3825	TONNEAU COVER ASSEMBLY		1	FOR L.H. DRIVE MODELS ONLY
BD.4646	TONNEAU COVER ASSEMBLY		1	FOR R.H. DRIVE MODELS ONLY
BD.3565	Fastener "Zip" on Tonneau Cover		1	
BD.3822	Fastener "Tenax" securing Tonneau Cover to sides		2	
BD.4673	of Scuttle Fastener "Tenax" securing Tonneau Cover at side		1	
BD.3833	of Mirror Fastener "Durable Dot" securing Tonneau Cover at rear end		4	•
BD.3372	SIDE CURTAIN ASSEMBLY, L.H.		1	
BD.3373	SIDE CURTAIN ASSEMBLY, R.H.		1	
BD.3374	FRAME ASSEMBLY FOR L.H. SIDE CURTAIN		1	
BD.3375	FRAME ASSEMBLY FOR R.H. SIDE CURTAIN		1	
BD.3376	GLASS FRAME ASSEMBLY FOR L.H. SIDE CURTAIN		1	
BD.3377	GLASS FRAME ASSEMBLY FOR R.H. SIDE CURTAIN		1	
BD.3376/4	WINDOW ("PERSPEX") FOR SIDE CURTAINS		2	
C.2025/3 C.2025/4 BD.532/2	Screw, Set, around Glass Frame Screw, Set, around Glass Frame Washer, Cup, on Setscrews		16 10 2	
•	•			

### FITTED ONLY FROM CHASSIS No. 660001 TO 660058 670001 TO 670184

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
BD.3378	FIXING ROD ASSEMBLY, L.H.		1		
BD.3379	FIXING ROD ASSEMBLY, R.H.		1		
BD.3425	Plate, Fixing, Assembly, Rear, behind Door Casings, for Side Curtain Fixing Knobs		2		
BD.3426	Plate, Fixing, Assembly, Front L.H., behind Door Casings, for Side Curtain Fixing Knobs		1		
BD.3427	Plate, Fixing, Assembly, Front R.H., behind Door Casings, for Side Curtain Flxing Knobs		1		
M.110/8R	Screw, Wood, securing Fixing Plates		16		
BD.3429	VNOR EIVING SIDE CLIRTAINS TO DOORS		4		
BD.5427	KNOB, FIXING SIDE CURTAINS TO DOORS		7		
BD.3428 C.2027/1	Escutcheon under Fixing Knobs Screw, Set, securing Escutcheons		<b>4</b> 8		

		_		0/0103 AND 3083.
Part No.	Description.	Plate No.	No. pe Unit.	r Remarks.
BD.4099	BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS) (R.H. DRIVE ONLY)	U.1	1	Fitted to Chassis No. 660059 and subs.
BD.4100	BODY SHELL (COMPLETE WITH DOORS AND BOOT LID BUT LESS TRIMMINGS) (L.H. DRIVE ONLY)		1	670185 and subs.
BD.4101 BD.4102 BD.4258 BD.4546 BD.4114 BD.4115 BD.4159 BD.4085 BD.3163 BD.4179 BD.2476 BD.4179 BD.2476 BD.4195 BD.4263 BD.4263 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363 BD.4363	Sill Assembly, L.H. Sill Assembly, R.H. Bracket, mounting Sill Assemblies Angle, fixing Sill to Dash Side Face-Panel Assembly for L.H. Shut Pillar Face-Panel Assembly for R.H. Shut Pillar Wheel-Arch Assembly, L.H. Wheel-Arch Assembly, R.H. Container, Battery, Assembly Bracket Assembly, Mounting Battery Support for L.H. Rear Bumper Support for R.H. Rear Bumper Panel, Tonneau Door Assembly, L.H. Door Assembly, R.H. Lid Assy. for Luggage Compartment Frame Assy. for Luggage Compartment Frame Assy. for Petrol Filler Door, Access, for Petrol Filler Bonnet Assembly Rear End Assembly		1 1 4 2 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	SHELL ONLY
SD.1005	BODY MOUNTING DETAILS		1 set	
BD.6635 BD.3743 BD.3743 BD.3788 BD.3143 BD.4700 BD.4373 FS.106/10D FS.106/14D FW.106/T FN.106/L FG.105/X FS.105/80 C.985 FN.105/L FG.105/X BD.4548/1 BD.4548/2 NS.237/6D C.725 C.726 BD.541/2 BD.541/14	Pad, Mounting Pad (Felt) 12"×22" Pad (Felt) Felt (Black) 3"×45" Felt (Black) 1"×18" Felt (Black) 2"×36" Packing (Alum) for Body Mounting Screw, Set Screw, Set Washer on Setscrews Nut on Setscrews Nut on Setscrews Washer, Spring, under Nuts Screw, Set Washer, Special Nut on Bolts Washer, Spring, under Nuts Packing (Alum) Packing (Alum) Screw, Set Washer, Shakeproof Washer, Shakeproof Washer, Special Washer, Special Washer, Special		2 2 2 2 2 2 2 2 2 2 1 6 4 1 0 1 2 2 4 4 4 2 2 2 2 2 4 4 4 2 2 2 2 2 4 4 4 4 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 2 4 4 4 4 2 2 2 2 2 2 2 2 2 3 4 4 4 4	RIGHT HAND DRIVE ONLY
BD.4079	SCUTTLE ASSEMBLY		1	For Chassis No. 660059 to 660910
BD.4776	SCUTTLE ASSEMBLY SCUTTLE ASSEMBLY (COMPLETE WITH HEATER BOX)		1	For Chassis No. 670185 to 671492  RIGHT HAND DRIVE ONLY For Chassis No. 660911 and subs.
BD.4791	SCUTTLE ASSEMBLY (COMPLETE WITH HEATER BOX)		1	LEFT HAND DRIVE ONLY For Chassis No. 671493 and subs.
BD.4120 BD.4121 BD.4097 BD.4122 BD.4124 BD.4661 BD.4662	Panel Assy., L.H. Panel Assy., R.H. Panel Assy., Main Outer Panel Assy., Main Outer Panel Assy., Main Outer Panel Assy., Cross Beam Bracket, Support, Inner, for Grab Rail Bracket, Support, Outer, for Grab Rail		1 1 1 1 1 1 1	RIGHT HAND DRIVE ONLY LEFT HAND DRIVE ONLY

	Description.	Plate No.	No. po Unit.	
	SCUTTLE ASSEMBLY (continued)			
FS.104/4D	Screw, Set, securing Support Brackets		2	
FW.104/T	Washer on Setscrews		2	
FN.104/L	Nut on Setscrews		2	
C.724 3D.2477	Washer, Shakeproof, under Nuts Panel, Shroud		2	
C.3766	Grommet for Steering Column		i	
BD.3145	Plate, Cover, for Grommet		i	
S.104/5D	Screw, Set, securing Cover Plate		2	
W.104/T	Washer on Setscrews		2	
N.104/L C.724	Nut on Setscrews Washer, Shakeproof, under Nuts		2 2	
3D. <del>4</del> 634	Facia-Panel		1	RIGHT HAND DRIVE ONLY
3D.4606	Facia-Panel		i	LEFT HAND DRIVE ONLY
3D.4638	Hide for Facia-Panel, L.H.		. 1	
BD.4639	Hide for Facia-Panel, R.H.		1	
BD.4052	Piping, around Faica Panel (4' 6" long)		1	
C.2015/2 AN.102/L	Screw, Set, securing Facia Panel Nut on Setscrews		7	
C.723	Washer, Shakeproof, under Nuts		4	
	······································		•	
BD.3631/2 BD.3662	<b>Roll,</b> Trimming, around top of Scuttle ( $43\frac{1}{2}$ " long) Hide, covering Trimming Roll on Scuttle ( $51$ " $\times$ 9")		1 1	
BD. <del>44</del> 67	INSTRUMENT PANEL ASSEMBLY (LESS ALL INSTRUMENTS)	U.2	1	Fitted from Chassis No. 660059 to 661025 670185 to 672942 Also to 672944, 672945, 672949
BD.7791	INSTRUMENT PANEL ASSEMBLY (LESS INSTRUMENTS)		1	Fitted from Chassis No. 661026 to 661036 672950 to 673008
BD.8103	INSTRUMENT PANEL ASSEMBLY (LESS		1	Also to 672943, 672946, 672947, 672948 Fitted to Chassis No.
	INSTRUMENTS)			661037 and subs. 673009 and subs.
BD. <del>449</del> 0	Plate, fixing Instrument Panel		2	
M.108/6R	Screw, Wood, securing Fixing Plate		6	
FN.104/L C. <b>724</b>	Nut, on Setscrews, securing Fixing Plate Washer, Shakeproof, under Nuts		4	
W.104/T	Washer, Plain, on Setscrews		4	
	SCUTTLE CASINGS			
3D.4684	Casing, Top	U.3	1	
	<u>-</u>	U.3	-	FITTED
3D.4873	Casing, Top	U.3	1	FITTED
BD.4873 BD.539/1 BD.532/1	<u>-</u>	U.3	-	FITTED
3D.4873 3D.539/1 3D.532/1 C.2015/6	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back	U.3	1 6 6 2	FITTED
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews	U.3	1 6 6 2	FITTED
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews	U.3	1 6 6 2 2 2	FITTED
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L C.723	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts		1 6 6 2 2 2 2	FITTED FOR USE WHEN RADIO IS FITTED
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L C.723	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews	U.3 U.4	1 6 6 2 2 2	FITTED FOR USE WHEN RADIO IS FITTED  Fitted from Chassis No.
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L C.723 BD.4685	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument		1 6 6 2 2 2 2	FITTED FOR USE WHEN RADIO IS FITTED  Fitted from Chassis No.
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L C.723 BD.4685	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel		1 6 6 2 2 2 2 2	FITTED FOR USE WHEN RADIO IS FITTED  Fitted from Chassis No. 660059 to 661025 670185 to 672942 Also to 672944, 672945, 672949 Fitted to Chassis No. 661026 and subs. 672950 and subs.
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L C.723 BD.4685	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel		1 6 6 2 2 2 2 1 1	FITTED FOR USE WHEN RADIO IS FITTED  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No.
3D.4873 3D.539/1 3D.532/1 C.2015/6 3D.532/3 AN.102/L C.723 3D.4685 3D.8094	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel Casing, Top, enclosing bottom of Instrument Panel Screw, Self-Tapping, securing Casing		1 6 6 2 2 2 2 2 1	FITTED FOR USE WHEN RADIO IS FITTEI  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 672950 and subs. 672950 and subs.
BD.4873 BD.539/1 BD.539/1 C.2015/6 BD.532/3 AN.102/L C.723 BD.4685 BD.8094 BD.539/1 BD.532/1	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel Casing, Top, enclosing bottom of Instrument Panel Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws		1 6 6 2 2 2 2 1 1	FITTED FOR USE WHEN RADIO IS FITTED  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 661026 and subs. 672950 and subs.
3D.4873 3D.539/1 3D.532/1 C.2015/6 3D.532/3 AN.102/L C.723 3D.4685 3D.8094 3D.539/1 3D.532/1 3D.4690	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel Casing, Top, enclosing bottom of Instrument Panel Screw, Self-Tapping, securing Casing	U.4	1 6 6 2 2 2 2 2 1 1	FITTED FOR USE WHEN RADIO IS FITTEI  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 672950 and subs. 672950 and subs.
3D.4873 3D.539/1 3D.532/1 C.2015/6 3D.532/3 AN.102/L C.723 3D.4685 3D.8094 3D.532/1 3D.532/1 3D.532/1 3D.532/1	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel  Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Casing, Top, Rear Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws	U.4 U.5	1 6 6 2 2 2 2 2 1 1 4 4 4 1 1 1 1	FITTED FOR USE WHEN RADIO IS FITTEI  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 672950 and subs. 672950 and subs.
3D.4873 3D.539/1 3D.532/1 C.2015/6 3D.532/3 AN.102/L C.723 3D.4685 3D.8094 3D.539/1 3D.532/1 3D.532/1 3D.532/1 3D.532/1 3D.532/1 3D.532/1 3D.532/1	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel  Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Casing, Top, Rear Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws Casing, Side, L.H.	U.4 U.5 U.6	1 6 6 2 2 2 2 1 1 1 1 1 1 1 1 1 1	FITTED FOR USE WHEN RADIO IS FITTEI  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 672950 and subs. 672950 and subs.
3D.4873 3D.539/1 3D.532/1 C.2015/6 3D.532/3 AN.102/L C.723 3D.4685 3D.8094 3D.532/1 3D.4690 3D.539/4 3D.532/1 3D.4688 3D.4689	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel  Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Casing, Top, Rear Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws Casing, Side, L.H. Casing, Side, R.H.	U.4 U.5	1 6 6 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1	FITTED FOR USE WHEN RADIO IS FITTEI  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 672950 and subs. 672950 and subs.
3D.4873 3D.539/1 3D.532/1 C.2015/6 3D.532/3 AN.102/L C.723 3D.4685 3D.8094 3D.539/1 3D.532/1 3D.4690 3D.532/1 3D.4688 3D.4688 3D.4689 3D.539/4	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel  Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Casing, Top, Rear Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws Casing, Side, L.H. Casing, Side, R.H. Screw, Self-Tapping, securing Side Casings	U.4 U.5 U.6	1 6 6 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1	FITTED FOR USE WHEN RADIO IS FITTED  Fitted from Chassis No. 660059 to 661025 670185 to 672942  Also to 672944, 672945, 672949  Fitted to Chassis No. 661026 and subs. 672950 and subs.
BD.4684  BD.4873  BD.539/1  BD.532/1  C.2015/6  BD.532/3  AN.102/L  C.723  BD.4685  BD.8094  BD.539/1  BD.539/1  BD.539/1  BD.4688  BD.539/4  BD.539/4	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel  Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Casing, Top, Rear Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws Casing, Side, L.H. Casing, Side, R.H. Screw, Self-Tapping, securing Side Casings Washer, Cup, on Self-Tapping Screws	U.4 U.5 U.6	1 6 6 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1	Fitted from Chassis No. 660059 to 661025 670185 to 672942 Also to 672944, 672945, 672949 Fitted to Chassis No. 661026 and subs. 672950 and subs.
BD.4873 BD.539/1 BD.532/1 C.2015/6 BD.532/3 AN.102/L C.723 BD.4685 BD.8094 BD.539/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1 BD.532/1	Casing, Top Screw, Self-Tapping, securing Casing at front end Washer, Cup, on Self-Tapping Screws Screw, Set, securing Casing at back Washer, Cup, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Casing, Top, enclosing bottom of Instrument Panel  Casing, Top, enclosing bottom of Instrument Panel  Screw, Self-Tapping, securing Casing Washer, Cup, on Self-Tapping Screws Casing, Top, Rear Screw, Self-Tapping, securing Rear Casing Washer, Cup, on Self-Tapping Screws Casing, Side, L.H. Casing, Side, R.H. Screw, Self-Tapping, securing Side Casings	U.4 U.5 U.6	1 6 6 2 2 2 2 2 1 1 1 1 1 1 1 1 1 1 1 1	FITTED FOR USE WHEN RADIO IS FITTED FITTED FOR USE WHEN RADIO IS FITTED

Part No.	Description.	Plate No.	No. pe Unit.	
C.4387	CAR HEATER ASSEMBLY		1	CAR HEATER MAY BE FITTED FROM CHASSIS 660059 TO 660910, 670185 TO 671492 FROM CHASSIS No. 660911 AND SUBS., 671493 AND SUBS. CAR HEATER IS FITTED AS STAN- DARD EQUIPMENT
FN.104/L FW.104/T FG.104/X	Nut, securing Heater Washer, Plain, on Heater Studs Washer, Spring, under Nuts		3 3 3	
C.4391	SEALING RUBBERS ON HEATER UNIT PIPES		2	
C.4392	VALVE, CONTROLLING WATER SUPPLY TO HEATER		1	
C.4393 C.4394 C.4395 BD.1492/1 FW.104/T FG.104/X	Knob for Valve Screw, securing Knob to Valve Spindle Bracket, mounting Valve Screw, Set, securing Bracket Washer, Plain, on Stud Washer, Spring, on Setscrew		1 1 1 1	
C.4396	HEATER HOSE, FROM MANIFOLD TO VALVE		1	
C.4397	HEATER HOSE, FROM VALVE TO HEATER		1	
C.4398	HEATER HOSE, FROM HEATER TO INTER- MEDIATE RETURN PIPE		1	
C.3994	HEATER HOSE, FROM INTERMEDIATE PIPE TO FRONT RETURN PIPE		1	FITTED ONLY TO THE FOLLOWING SPORTS MODELS: R.H. AND L.H. DRIVE FIXED HEAD COUPE MODELS, L.H. DRIVE
C.4399	HEATER HOSE, FROM FRONT RETURN PIPE TO BANJO ON WATER PUMP		1	
C.290 C.1505 C.4403 C.2296/1 C.821	Adapter, in Manifold, for Heater Hose connection Banjo, for Hose connection (on Water Pump) Bolt, securing Banjo Washer (Copper) at each side of Banjo Clip, securing Heater Hoses to Banjo, Adapter and		1 2 1 4 3	FOR OPEN 2-SEATER AND L.H. DRIVE FIXED HEAD MODELS ONLY
C.2905/1	Valve Clip, securing Heater Hoses to Front Return Pipe, Intermediate Pipe, Heater and Valve		7	
BD.215/1	HEATER HOSE, FROM FRONT RETURN PIPE TO BANJO ON WATER PUMP		1	
C.290 C.1505 C.1506 C.2296/1 C.821	Adapter, in Manifold, for Heater Hose connections Banjo for Hose connection (on Water Pump) Bolt, securing Banjo Washer (Copper) at each side of Banjo Clip, securing Heater Hose to Banjo, Adapter and Valve		2 1 1 2 3	FOR R.H. DRIVE FIXED HEAD MODELS ONLY
C.2905/1	Clip, securing Heater Hoses to Front Return Pipe, Intermediate Pipe, Heater and Valve		7	
BD.233	HOSE, FROM FRONT RETURN PIPE TO REAR PIPE		1	FOR R.H. DRIVE FIXED HEAD MODELS ONLY

Part No.	Description.	Plate No.	No. pe Unit.	
C.4400	INTERMEDIATE RETURN PIPE		1	
C.4401	FRONT RETURN PIPE		1]	
C.4402 AS.302/4H AN.102/L AG.102/X	Clip, securing Front Return Pipe Screw, Set, securing Clips Nut on Setscrews Washer, Spring, under Nuts		2 2 2 2 2	FOR OPEN 2-SEATER AND L.H. DRIVE FIXED HEAD MODELS ONLY
C.4836	FRONT RETURN PIPE		1)	
C.4837 C.4954 AS.302/4H AN.102/L AG.102/X	Clip, securing Front Return Pipe Clip, securing Front Return Pipe Screw, Set, securing Clips Nut on Setscrews Washer, Spring, under Nuts		1 1 2 2 2	FOR R.H. DRIVE FIXED HEAD MODELS ONLY
C.4543	RHEOSTAT SWITCH FOR HEATER (LUCAS 78262/B)		1	
C.4525 C.4526 C.1042 C.2706 C.1071/2	Cable, Connector, for Rheostat (Lucas 860138) Cable, Connector, for Rheostat (Lucas 860139) Grommet, for Heater Lead Grommet, for Rheostat Cable Clip (Bowden) securing Heater Cables		1 1 1 1	FITTED TO R.H. DRIVE CARS ONLY FITTED TO L.H. DRIVE CARS ONLY
BD.4753	HEATER BOX AT FRONT OF SCUTTLE		1	
<b>B</b> D.4754	HEATER BOX AT REAR OF SCUTTLE		, 1	
BD.4136/1	TIE PLATE FOR BEAM PANEL		1	
C.4485	WARNING PLATE		1	
BD.538/4	Screw, Self-Tapping, securing Warning Plate		2	
	DETAILS OF DEMISTER			Fitted to Chassis No. 661026 and subs. 672963 and subs.
BD.6521	DEMISTER OUTLET ASSEMBLY FOR HEATER MOTOR		1	
BD.711/1	Screw, Self-Tapping, securing Outlet Assy. to Heater Motor		2	•
BD.6523	AIR DUCT ASSEMBLY AT BACK OF INSTRU- MENT PANEL		. 2	
BD.5281/3	HOSE, CONNECTING OUTLET ASSEMBLY TO R.H. AIR DUCT (20" LONG)		1	
BD.5281/4	HOSE, CONNECTING OUTLET ASSEMBLY TO L.H. AIR DUCT (23" LONG)		1	
BD.6666	BRACKET, SUPPORTING AIR DUCT AT BACK OF PANEL		2	

Part No.	Description.	Plate No.	No. pe Unit.	r Remarks.
BD.6667	CHANNEL FOR FIXING OF AIR DUCT SUPPORT BRACKET	in the second	2	3,
		4.		
BD.6528	BRACKET, ON R.H. SIDE OF CROSS BEAM, SUPPORTING CHANNEL		1	
	e e e			
BD.6529	BRACKET, ON L.H. SIDE OF CROSS BEAM, SUPPORTING CHANNEL		1	
AS.102/4D AN.102/L AW.102/T	Screw, Set, securing Support Brackets and Channel Nut on Setscrews Washer, Plain, under Nuts	gr e	10 10 10	en e
BD.6601	ESCUTCHEON ON SCREEN FACIA	t in a se	<b>2</b>	
			s. 1.	
C.5472	WINDSCREEN WASHER ASSEMBLY (TRICO 800010—JAW. 12—3)		1	Fitted to Chassis No. 661037 and subs. 673009 and subs.
	NOTE.—C.5472 covers the supply of a complete Windscreen Washing Unit complete with Mounting Bracket and fixings.			Also to 661026, 661028 and 661029
C.5473/1	JAR, PUMP AND BRACKET ASSY. (800008)		1	
C.5473/2 C.5473/3	Jar only (Glass) (X.78369) Pump and Cover Assembly (X.82540)		1	
C.5473/8 C.5498	Bracket and Strap Assembly (X.78364-1E) Strainer-Tube Assembly (X.76431-1M)		1	
	HOSE CONNECTIONS			
C.5472/9	Hose, from connection under Pump to "T" Junction (81846, 16" long)		1	
C.5472/12	Hose, from "T" Junction to L.H. Jet (R.H. DRIVE CARS ONLY) and to R.H. Jet (L.H. DRIVE		1	
C.5472/13	CARS ONLY) (F.15—19" long) Hose, from "T" Junction to R.H. Jet (R.H. DRIVE CARS ONLY) and to L.H. Jet (L.H. DRIVE CARS ONLY) (F.15—43" long)		1	
C.5472/10 C.5472/14 C.5472/11	Hose, from top of Pump to Control (81846—41" long) Hose, from top of Pump to Control (81846—55" long) Hose, from Control to Manifold (81846—23" long)		1	FOR L.H. DRIVE CARS ONLY FOR R.H. DRIVE CARS ONLY
C.5473/6	TEE CONNECTION FOR HOSES (X.77689-1)		1	

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
C.5473/4	JET ASSEMBLY COMPLETE (X.78778C.)		2	
C.5495 C.5499	Jet only (81600-C) Button (Knurled) for Jet cleaning (81153-1C)		2 2	
C.5496 C.5497	Washer (Plastic) on Button (81635) Washer (Rubber) between Jet Assy, and Scuttle (75172)		2	
C.5472/7	CONTROL ASSEMBLY ON INSTRUMENT PANEL (900106)		1	
C.5473/5	TUBE ASSEMBLY IN MANIFOLD (770750)		1	
BD.8106	BRACKET, ON SCUTTLE, MOUNTING JAR BRACKET		1	
NS.119/4D NS.119/10D BD.8107 NN.119/L C.723/A	Screw, Set, securing Bracket Screw, Set, securing Jar Bracket Piece, Distance, on Setscrew Nut on Setscrews Washer, shakeproof, under Nuts		4 1 1 5 5	

Part No.	Description.	Plate No.	No. per Unit. Remarks.
BD.4266	MAIN FLOORBOARD ASSEMBLY, L.H.		1 }
BD.4267	MAIN FLOORBOARD ASSEMBLY, R.H.		LEFT HAND DRIVE ONLY
BD.4268	MAIN FLOORBOARD ASSEMBLY, L.H.	U.8	1)
BD.4269	MAIN FLOORBOARD ASSEMBLY, R.H.	U.9	RIGHT HAND DRIVE ONLY
BD.1493/4 BD.1711	Screw, Set, securing Floorboards Plate, Fixing, for Floorboards		22 18
C.274	Washer, Shakeproof, on Setscrews		22
BD.3416	Plate, Tapping, for Seat Slides		4
NS.525/5H	Screw, Set, securing Tapping Plates		8
BD.3037 BD.3461	Plate, Cover, for access to rear Jack socket Plate, Seating, for Jack Cover Plates		2 2
M.106/3R BD.1256	Screw, Wood, securing Seating Plates Nut, "Tee" on Floorboards, for Gearbox Cover fixing		20 12
BD.3746	Asbestos under R.H. Floorboard		1
BD.3755	Plate, fixing Asbestos in position		1
BD.1503/6 BD.4702	Screw, Wood, securing fixing Plate Felt (Black) under Floorboards (SIII) 1"×48"		13
BD.4703	Felt (Black) under Floorboards (Dash) 1"×18"		2 2
	CARPETS AND FELTS		
BD.4583 BD.4584	Carpet for Main L.H. Floorboard Carpet for Main R.H. Floorboard		1
BD.4585	Carpet, Front, L.H.		<u>i</u>
BD.4586	Carpet, Front, R.H.		1
BD.4591	Carpet for Toeboard (L.H. side)		RIGHT HAND DRIVE MODELS ON
BD.4592	Carpet for Pedals (R.H. side)		1)
BD.4593 BD.4594	Carpet for Toeboard (R.H. side) Carpet for Pedals (L.H. side)		LEFT HAND DRIVE MODELS ONL
BD.4596	Carpet for Gearbox Cover		1
BD.4587	Felt for Dash Front, L.H.		1) LEET HAND DRIVE MODELS ON
BD.4588	Felt for Dash Front, R.H.		LEFT HAND DRIVE MODELS ON
BD.4589 BD.4590	Felt for Dash Front, L.H. Felt for Dash Front, R.H.		RIGHT HAND DRIVE MODELS ON
BD.4596/6	Felt for Gearbox Cover		1
BD.4695	Seal (Rubber) for Gearbox Cover		i
BD.4596/7	Mutocel for Gearbox Cover		2
BD.3862	Carpet for Luggage Compartment Floor		1
BD.1286 BD.1814/2	Fastener, securing Carpets Rivet, Pop, securing Fasteners to inside face of Scuttle		20 14
M.104/4R	Screw, Wood, securing Fasteners to Main Floor- boards		6
BD.4741 BD.633	Retainer for Main Floorboard Carpet		2
BD.540/3	Piping under Retainers (28" long) Screw, Self-Tapping, securing Retainers		10
BD.3866	GAUNTLET FOR CHANGE-SPEED LEVER		1
BD.3867	GAUNTLET FOR HANDBRAKE LEVER		1
BD.4876	Retainer for Handbrake Lever Gauntlet		1
BD.542/8	Rivet, Bifurcated, securing Retainer to Gauntlet		6
BD.1502/2	Screw, Wood, securing Retainer to Floorboards		4
BD.3861	MOQUETTE AROUND DIPPER SWITCH		1

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	 
BD.3162	PROPELLER SHAFT TUNNEL ASSEMBLY	U.10	1 .		
FS.404/3D BD.1493/2	Screw, Set, securing Prop. Shaft Tunnel to Frame Screw, Set, securing Prop. Shaft Tunnel to Battery		4 4		
FW.104/T BD.542/3 C.724	Container Washer, Plain, for Setscrews Washer, Oval, for Setscrews Washer, Shakeproof, on Setscrews		4 4 8		
BD.3143 BD.4704	Felt (Black) between Prop. Shaft Tunnel and Battery Container (1"×15") Felt (Black) between Prop. Shaft Tunnel and Floorboards (1"×30")	·	1 2		
BD.4085	BATTERY CONTAINER ASSEMBLY		1		
BD.3365	BATTERY COVER ASSEMBLY		1		
BD.4705	Felt (Black) for Battery Container (1"×21")		2		
BD.4078 BD.1493/1	CLUTCH/GEARBOX COVER ASSEMBLY Screw, Set, securing Gearbox Cover		1 4		
BD.1493/2 BD.542/3 C.724	Screw, Set, securing Gearbox Cover Washer, Oval, on Setscrews Washer, Shakeproof, on Setscrews		14 16 18		
BD.3777	DIPSTICK INSPECTION LID (IN GEARBOX COVER)		<b>1</b> .		
BD.3012	WINDSCREEN ASSEMBLY, L.H.	U.11	1		
BD.3013	WINDSCREEN ASSEMBLY, R.H.	U.12	1		
BD.3017 BD.3018 BD.3237 BD.3071	Frame Assy., L.H. Frame Assy., R.H. Glass only Everseal for Screen Glasses (1½"×13')		1 1 2 1		
BD.6205 BD.2159/3 C.2015/9 C.2015/10	Rubber, sealing Screen (65" long) Rubber (Sponge) sealing Screen (21" long) Screw, Set, securing Windscreen to Side Pillars Screw, Set, securing Windscreen to Side Pillars		1 2 2 2 2		
BD.3014	WINDSCREEN CENTRE PILLAR ASSEMBLY	U.13	1		
BD.3239	Hook at top of Centre Pillar, for Hood Clamp	U.14			
C.2015/5 BD.4696	Screw, Set, through Hook Nut (Special) securing Centre Pillar	U.15	3 1		

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
		. 10.	- Inc.	itematika.
BD.3765	WINDSCREEN SIDE PILLAR, L.H.	U.16	1	
BD.3766	WINDSCREEN SIDE PILLAR, R.H.	U.17	1	
BD.4672 FB.108/14D FW.108/T C.728	Plate, Tapping, for Side Pillar fixing Bolt, securing Side Pillars Washer, Plain, on Bolts Washer, Shakeproof, on Bolts		2 4 4 4	
BD.3887 BD.3545	Grommet (Rubber) under feet of Side Pillars Hook at top of Side Pillars for Hood Clamps	U.18 U.19	2 2	
BD.3539/1 BD.3822	Screw, Set, securing Hooks Fastener ("Tenax") at bottom of Side Pillars	U.20	4 2	
	RACING WINDSCREEN ASSEMBLY	U.21		FOR DETAILS, SEE PAGE 95B
C.2887	INTERIOR MIRROR ON SCUTTLE	U.22	1	Fitted from Chassis No. 660059 to 660207
C.2887/1	Bracket only		1	670185 to 670608
C.2887/2	Glass only		1	
C.4097	INTERIOR MIRROR ON SCUTTLE		1	Fitted from Chassis No. 660208 to 661051 670609 to 673586
C.4097/1 C.2887/2	Bracket only Glass only			0,000, 10 0,000
C.5500	INTERIOR MIRROR ON SCUTTLE		1	Fitted to Chassis No. 661052 and subs.
C.5500/1 C.5500/2	Bracket only Glass only		1	673587 and subs.
C.2015/6 AN.102/L C.723 BD.4673	Screw, Set, securing Mirror to Scuttle Nut on Setscrews Washer, Shakeproof, under Nut Fastener ("Tenax") through Mirror Bracket (Tonneau Cover fixing)		1 }	2 required for Chassis No. 660880 and subs. 671466 and subs. Fitted from Chassis No. 660059 to 660879 670185 to 671465
8D.6229	COWL FOR MIRROR C.2887		1]	FOR R.H. DRIVE CARS ONLY WHEN
BD.6230	COWL FOR MIRROR C.4097		1 }	RACING SCREENS ARE FITTED
BD.6231	COWL FOR MIRROR C.2887		<b>1</b> ]	FOR L.H. DRIVE CARS ONLY WHEN
BD.6232	COWL FOR MIRROR C.4097		1	RACING SCREENS ARE FITTED
BD.539/4	Screw, Self-Tapping, securing Mirror Cowl		6	
BD.6233	COWL OVER L.H. SCREEN PILLAR APERTURE		1	FOR USE WHEN RACING SCREENS
BD.6234	COWL OVER R.H. SCREEN PILLAR APERTURE		1	ARE FITTED
BD.539/4	Screw, Self-Tapping, securing Cowl for Screen Pillar Aperture		8	

Part No.	Description.	Plate No.	No. p Unit		
BD.4194	DOOR, LEFT HAND	U. <b>2</b> 3	1	SHELL ONLY	
BD.4195	DOOR, RIGHT HAND		1	SHELL ONLY	
BD.4349	Lock for L.H. Door (complete with Safety Catch		1		
BD.4350	mechanism)  Lock for R.H. Door (complete with Safety Catch		1		
BD.4347	mechanism) Plate, covering L.H. Door Lock		1		
BD.4348	Plate, covering R.H. Door Lock		1 -		
BD.4240 BD.4241	Handle for Safety Catch, L.H. (W.B.1/3298) Handle for Safety Catch, R.H. (W.B.1/3299)		1		
BD.4242	Screw, securing Handles		2		
BD.4243	Washer, Shakeproof, on Screws		2 2		
BD.3556 BD.3559	Bracket, fixing Door Lock Straps Strap (Leather) operating Door Locks (complete with Swivel BD.3540)		2		
BD.539/16	Screw, Self-Tapping, securing Straps		4		
BD.4438 BD.4439	Casing Assembly for L.H. Door Casing Assembly for R.H. Door		1		
BD.539/16	Screw, Self-Tapping, securing Casings		10		
BD.532/1 BD.3660	Washer, Cup, on Self-Tapping Screws Hide, covering Trimming Roll on L.H. Door (29"×8")		10 1		
BD.3661	Hide, covering Trimming Roll on R.H. Door (29"×8")		1		
BD.3631/1	Roll at top of Doors (27½" long)		2 8		
BD.3630 BD.4649	Plug in ends of Piping Strip, Tacking, for Door Waist	*	2		
BD.4650	Strip, Tacking, for Door Waist Roll		2		
BD.4651 BD.4652	Strip, Tacking, for Quarter Waist Roll Strip, Tacking, for Scuttle Waist Roll		2 1		
BD.2045/4	Rubber, Sealing, for Hinge Pillar and Door Sills		4		
BD.2899/4 BD.633	Piping (Draught Excluder) for Hinge Pillar (25" long) Piping (Draught Excluder) for Door Sills (28" long)		2		
BD.4349	DOOR LOCK ASSEMBLY, L.H.		1,		
BD.4350	DOOR LOCK ASSEMBLY, R.H.		1		
BD.4371	Lock only	U.24	2		
AS.502/3H AN.102/L	Screw, Set, securing Lock to Cover Plate Nut on Setscrews		8 8		
BD.3557	Link, between Door Lock and Lever	U.25	2	•	:
AS.302/4H	Screw, Set, securing Link to Door Lock		<b>2</b> 2		
AW.102/C AN.102/L	Washer, Plain, on Setscrews Nut on Setscrews		2		
C.723	Washer, Shakeproof, under Nuts		2		
J.104/6S	Pin, Clevis, securing Link to Operating Lever Washer on Clevis Pins		2 2		
FW.104/T L.103/6U	Pin, Split, through Clevis Pins		2	•	
BD.3670	Lever, Operating, Assy., for L.H. Door Lock	U.26	1		
BD.3671 R.303/8W	Lever, Operating, Assy., for R.H. Door Lock Rivet, securing Lever to Bracket		2		
AW.102/C	Washer, between Bracket and Operating Lever		2		
AW.102/T	Washer, under head of Rivet	U.27	2 2		
BD.4338 AS.502/3H	Bracket for Operating Lever Screw, Set, securing Bracket to Cover Plate	3.27	2		
AS.502/4H	Screw, Set, securing Bracket to Cover Plate		2		
AN.102/L BD. <del>434</del> 1	Nut on Setscrews Guide for Operating Lever	U.28	2		
AS.502/3H	Screw, Set, securing Guide to Cover Plate		4		
AN.102/L BD.3316	Nut on Setscrews Spring, between Lever and Bracket	U.28A	4 2		

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
BD.4347	COVER PLATE FOR L.H. DOOR LOCK	U.29	1		
BD.4348	COVER PLATE FOR R.H. DOOR LOCK		1		
AS.502/3H AN.102/L	Screw, Set, securing Cover Plate to Door Nut on Setscrews		8 8		
BD.4340 AS.502/2H AN.102/L	Pivot Screw, Set, securing Pivot to Cover Plates Nut on Setscrews	U. <b>3</b> 0	2 4 4		
BD.4344	TENSION LEVER ASSEMBLY FOR L.H. DOOR LOCK	U. <b>3</b> 1	1		
BD.4343	TENSION LEVER ASSEMBLY FOR R.H. DOOR LOCK		1		
BD.4376	ANCHOR BRACKET ASSEMBLY	U.32	2		
AS.502/3H C.723	Screw, Set, securing Anchor Bracket Washer, Shakeproof, on Setscrews		2 2		
AN.102/L C.724 BD.4466	Nut on Setscrews Washer, Shakeproof, under Nuts Spring, between Anchor Bracket and Pivot Pin	U. <b>33</b>	2 2 2		
BD.4346	LINK BETWEEN TENSION LEVER AND SAFETY CATCH	U.34	1		
L.102/4U	Pin, Split, securing Link to Tension Lever and		4		•
AW.102/C	Safety Catch Washer, Plain, behind Split Pins		4		
BD.4431	SAFETY CATCH ASSEMBLY	U.35	2		
AS.502/2H C. <b>724</b>	Screw, Set, securing Safety Catch to Door Washer, Shakeproof, on Setscrews		4		
BD.4240	HANDLE FOR SAFETY CATCH, L.H.	U.36	1		
BD.4241	HANDLE FOR SAFETY CATCH, R.H.		1		
BD.4242 BD.4243	Screw, securing Handles Washer, Shakeproof, on Screws		2 2		
BD.2930	STRIKER FOR DOOR LOCKS	U.37	2		
AS.302/4H BD.530/2 C.723	Screw, Set, securing Strikers Nut, Clinch, on Setscrews Washer, Shakeproof, under Nuts		4 4 4		

Part No.	Description.	Plate No.		Remarks.
BD.2941	DOOR DOVETAIL BUFFER	U.38	2	
AS.502/4H C.723 AN.102/L	Screw, Set, securing Buffers Washer, Shakeproof, on Setscrews Nut on Setscrews		8 8 8	
BD.2942	DOOR DOVETAIL STRIKER	U.39	2	
AS.502/4H AN.102/L C.723	Screw, Set, securing Strikers Nut on Setscrews Washer, Shakeproof, under Nuts		8 8 8	
BD.3560	COVER PLATE, ON DOOR CASINGS, FOR	U.40	2	
BD.524/4	Rivet, Bifurcated, for Cover Plates		8	
BD.4438	CASING ASSEMBLY FOR L.H. DOOR	U.41	1	
BD.4439	CASING ASSEMBLY FOR R.H. DOOR		1	
BD.4052 BD.3049 BD.4447 BD.4448 BD.3822	Piping Assembly at top of Doors Piping Assembly around Door Casings Pocket for L.H. Door Pocket for R.H. Door Fastener "Tenax" on Doors		2 2 1 1 2	
BD.4691	CASING ASSEMBLY AT BOTTOM OF L.H.	U.42	1	
BD.4692	CASING ASSEMBLY AT BOTTOM OF R.H.	•	1	
BD.539/4 BD.532/1	Screw, Self-Tapping, securing Casings Washer, Cup, on Self-Tapping Screws		16 16	
BD.4157	DOOR HINGE	U.43	4	
BD.4701/1 BD.4701/2 FS.104/5D FN.104/L C.724 BD.4155	Shim, between Hinge and Door (-036" thick) Shim, between Hinge and Door (-064" thick) Screw, Set, securing Hinges to Doors Nut on Setscrews Washer, Shakeproof, under Nuts Plate, mounting Hinges		As req'd As req'd 16 16 16 4	choose Shims of desired thickness
BD.4156	PIVOT PIN THROUGH HINGE BOSS	U.45	4	
FW.104/T FN.104/L C.724	Washer on Pivot Pins Nut on Pivot Pins Washer, Shakeproof, under Nuts		4 4 4	
BD.4675	STOP PLATE FOR BOTTOM HINGE (ON HINGE PILLAR)	U.46	2	

Part No.	Description.	Plate No.	No. pe Unit.	
	LUGGAGE COMPARTMENT			
BD.4173	Floor Assembly for Luggage Compartment	U.47	1	NOT REQUIRED WHEN WIRE ROAD WHEELS ARE FITTED
BD.7760	Floor Assembly for Luggage Compartment		1	REQUIRED WHEN WIRE ROAD WHEELS ARE FITTED
BD.4184 BD.1502/2 BD.532/2 BD.538/5	Plate, Cover, for Petrol Tank Filler Neck Screw, Wood, securing Cover Plate Washer, Cup, on Woodscrews Screw, Self-Tapping, securing Cover Plate	U.48	1 3 3 3	WILLIS ARE III LIS
3D.4506 3D.4507 3D.4663	Floorboard, L.H. for Luggage Compartment Floorboard Assy., R.H., for Luggage Compartment Felt (Black) 1"×39" under forward edge of Floor- boards	U.49 U.50	1 1	
BD.4664	Felt (Black) 1"×36" under rear edge of Floor- boards		1	
BD.4665	Felt (Rubberised) 3½"×24" under side edges of Floorboards		2	
BD.4666 BD.1493/3 FS.404/6H BD.701	Felt (Rubberised) 2"×12" for top of Petrol Tank Screw, Set, securing Floorboards Screw, Set, securing Floorboards Plate, Fixing, for Setscrews		2 12 4 16	
C.724 BD.3143 BD.2045/2	Washer, Shakeproof, on Setscrews  Felt (Black) 1"× 38" around Petrol Tank Filler Neck Seal (Sponge Rubber) at front of Luggage Compart-		16 1 1	
BD.4694 BD.1814/1	ment Aperture (33" long) Retainer for Sponge Rubber Seal Rivet, Pop, securing Retainer		1 6	
BD. <del>4</del> 190	GUTTER ASSEMBLY AROUND LUGGAGE COMPARTMENT LID APERTURE		1	
BD.4875/1 BD.4875/2	Rubber, Sealing, around Gutter (104" long) Rubber, Sealing, around Gutter (104" long)		<b>!</b> }	Fitted from Chassis No. 660001 to 661164 670001 to 674940
BD.9345/1	SEALING RUBBER ON FLANGE OF LUGGAGE LID (104" LONG)		1	Fitted to Chassis No. 661165 and subs. 674941 and subs.
BD, <b>4</b> 265	LUGGAGE COMPARTMENT LID ASSEMBLY (COMPLETE WITH CASING, LIGHT, LOCK AND HANDLE BUT LESS HINGES)		1	
BD.8256	Lid only (comprising Panel, Wood Frame and Lock- ing Bar)	U.51	1	
BD.4436 BD.539/1 BD.532/1	Casing on Luggage Lid Screw, Self-Tapping, securing Casing Washer, Cup, on Screws	U.52	1 23 23	
BD. <b>4322</b> AS.502/5H AN.102/L C.2501/3	Lock for Luggage Lid Screw, Set, securing Lock Nut on Setscrews Washer, Plain, under Nuts	U.53	1 2 2 2	
BD. <b>3266</b>	Handle for Luggage Lid (complete with Sealing Washer)	U.54	1	
BD.7798 BD.3265/9 BD.4323 M.108/7R BD.82	Locking-Barrel for Luggage Lid Handle (WB.1/3325) Screw, Set, through flanges of Handle Socket Assy. for Lock Screw, Wood, securing Sockets Escutcheon for Lock Rod	U.55	1 2 2 6 2	
AS.502/4H AN.102/L	Screw, Set, securing Escutcheon Nut on Setscrews		4	

Part No.	Description.	Plate No.	No. per Unit.	Remarks.
	FIXINGS FOR MISCELLANEOUS ITEMS IN LUGGAGE COMPARTMENT			
BD.3431 BD.6811 BD.3527 BD.3535 BD.3432 BD.2385 BD.3434 BD.3438	Clip, fixing Jack Clip Bracket Assy., fixing Jack Socket holding Jack Clip, securing Jack Socket Clip, fixing Jack Ratchet Clip, fixing Wheel Brace Clip, fixing Tyre Pump Clip, fixing Budget Key for Rear Wheel Covers			ALTERNATIVE TO BD.6811 ALTERNATIVE TO BD.3431
BD.3430	Clip, fixing Grease Gun		2 F	Fitted from Chassis No. 660059 to 660881 670185 to 671600
BD.5211	Clip, fixing Grease Gun		2 F	Fitted to Chassis No.
BD.3437	Strap, securing Tool Roll		1	660882 and subs. 671601 and subs.
BD.4327	PROP FOR LUGGAGE LID IN "OPEN" POSITION	U.57	1	
BD.1708/1	Washer, Spring (Double Coil) on Prop		1	
FW.105/T L.103/7U BD.2244	Washer, Plain, behind Spring Washer Pin, Split, securing Prop in Bracket Clip, Spring, housing Prop when not in use		1	itted from Chassis No.
BD.3839	Clip, Spring, housing Prop when not in use		1 F	660059 to 660104 670185 to 670338 Fitted to Chassis No.
BD.539/1	Screw, Self-Tapping, securing Clip		1	660105 and subs. 670339 and subs.
BD.4287	HINGE FOR LUGGAGE COMPARTMENT LID	U.58	2	
FS.104/5D BD.541/9	Screw, Set, securing Hinges to Lid Washer on Setscrews		6 6	
C.724 BD.4311	Washer, Shakeproof, on Setscrews Pin, Pivot, through Boss of Hinges		6 2	
FN.204/L C.724	Nut on Pivot Pins Washer, Shakeproof, under Nuts		2 2	
BD.4172	SPARE WHEEL TRAY ASSEMBLY	U.59	1	
BD.4515	CLAMP SECURING SPARE WHEEL IN TRAY	U.60	1 }	
C.3864 BD.2244	Nut for Clamp	U.61	1   1	OT REQUIRED WHEN WIRE ROAD WHEELS ARE FITTED
BD.1814/2 BD.4520	Clip, Spring Rivet, Pop, securing Spring Clip Hinge Pin for Spare Wheel Clamp		i	WILLIA ARE IIIILD
BD.7766	CLAMP SECURING SPARE WHEEL IN TRAY		1 }	
BD.7782	Nut for Clamp		1 F	OR USE WHEN WIRE ROAD WHEELS ARE FITTED
BD.22 <del>44</del> BD.1814/2 BD.7779	Clip, Spring Rivet, Pop, securing Spring Clip Hinge Pin for Spare Wheel Clamp			WHEELS ARE FILLED
BD.4363	PETROL FILLER BOX ASSEMBLY	U.62	1	
BD.4369	Tube, Drain (Rubber) on Petrol Filler Box		1	
BD.4368	Hose, Petrol Pipe Clip, securing Petrol Pipe Hose		1 2	

		070103 AND 3003.			
Part No.	Description.	Plate No.	No. per Unit. Remarks.		
BD.3220	VENT PIPE EXTENSION	U.63	1		
BD.3221 BD.3210	Tube (Rubber) for Vent Pipe Extension Grommet on Vent Pipe Extension	U.64 U.65	1		
BD.4357/1	DOOR FOR PETROL FILLER BOX		1 Fitted from Chassis No. 660059 to 660074 670185 to 670266		
BD.4357	DOOR FOR PETROL FILLER BOX	U.66	1 Fitted to Chassis No. 660075 and subs. 670267 and subs.		
BD.4354 AN.102/L C.738 FW.105/T	Seal (Rubber) around Door aperture Nut, securing Door to Hinge Plate Washer, Shakeproof, under Nuts Washer, Packing, between Door and Hinge Plate	U.67			
BD.4358/1	HINGE ASSY. FOR PETROL FILLER DOOR		Fitted from Chassis No. 660059 to 660074		
BD.4358	HINGE ASSY. FOR PETROL FILLER DOOR	U.68	670185 to 670266  1 Fitted to Chassis No. 660075 and subs. 670267 and subs.		
AS.302/3H C.738	Screw, Set, securing Hinge Washer, Shakeproof, on Setscrews		2 2		
BD.4360	LOCK ASSY. FOR PETROL FILLER DOOR	U.69	1		
BD.8071	Clip, Spring, securing Lock to Door (WB.7/4098)		1		
BD.4353	STRIKER ASSY. FOR PETROL FILLER LOCK	U.70	1		
AS.302/3H C.738	Screw, Set, securing Striker Washer, Shakeproof, on Setscrews		2 2		
BD.3699	PETROL FILLER CAP	U.71	1		
BD.3189 BD.4394 L.102/4U	Seal (Cork) Inside Filler Cap Spring, between Filler Cap and Hinge Plate Pin, Split, securing Filler Cap to Joint Pin in Hinge	U.72 U.73			
C.2501/3	Plate Washer, Plain, under Split Pin		1		
BD.8735	FRONT WING, R.H.		1) Fitted from Chassis No.		
BD.8736	FRONT WING, L.H.	U.74	660059 to 660674 1 670185 to 671096		
BD.8737	FRONT WING, R.H.		1 Fitted to Chassis No. 660675 to 661024		
BD.8738	FRONT WING, L.H.		1 671097 to 672926		
BD.8739	FRONT WING, R.H.		1 Fitted to Chassis No. 661025 and subs.		
BD.8740	FRONT WING, L.H.		1 672927 and subs.		
BD.4144	VALANCE ALONG BACK OF L.H. FRONT WING		1		
BD.4145	VALANCE ALONG BACK OF R.H. FRONT WING		1		
BD.4551	VALANCE AT FORWARD END OF L.H. FRONT WING	U.75	1		
BD.4552	VALANCE AT FORWARD END OF R.H. FRONT WING		1		

Part No.	Description.	Plate No.	No. per Unit.	Remarks.	
BD.4220	EXTENSION AT REAR OF L.H. FRONT WING		1		
BD.4221	EXTENSION AT REAR OF R.H. FRONT WING		1		
FS.104/4D	Screw, Set, securing Wing Valance Extensions		18		
S.104/6D N.104/L	Screw, Set, securing Wing Valance Extensions Nut on Setscrews		2 20		
C.724 C.4170 NS.125/4D	Washer, Shakeproof, under Nuts Bracket, on Chassis Frame, for Wing Valance Screw, Set, securing Brackets		20 2 3		
BD.5183	VENTILATOR BOX ASSY. IN L.H. FRONT WING		1		
BD.5184	VENTILATOR BOX ASSY. IN R.H. FRONT WING		1	Fitted to Chassis No. 660675 and subs. 671097 and subs.	
NS.513/4H	Screw, Set, securing Ventilator Boxes		12 12		
NN.131/L C.721	Nut on Setscrews Washer, Shakeproof, under Nuts		12 ]		
BD.5188	DOOR ASSEMBLY FOR VENTILATORS		2]	Fitted to Chassis No.	
AN.102/L AW.102/T C.723	Nut, securing Doors to Ventilator Boxes Washer, Plain, under Nuts Washer, Shakeproof, under Nuts		6 6 6	660675 and subs. 671097 and subs.	
BD.5190	SEAL (RUBBER) FOR VENTILATOR DOORS		2	Fitted to Chassis No. 660675 and subs. 671097 and subs.	
BD.5189	GAUZE FOR VENTILATORS		2 }	Fitted to Chassis No. 660675 and subs.	
BD.711/6	Screw, Self-Tapping, securing Gauze		<b>4</b> j	671097 and subs.	
3D.5127	HINGE ASSEMBLY FOR L.H. VENTILATOR		<b>1</b> }		
3D.51 <b>2</b> 8	HINGE ASSEMBLY FOR R.H. VENTILATOR		1		
BD.5123 BD.650 C.3350 R.303/5W	Plunger, for Springs Rivet, Fulcrum, for Plungers Washer (Brass) at each side of Plungers Rivet, securing Plungers		2 2 4 2 2	Fitted to Chassis No. 660675 and subs. 671097 and subs.	Ą
3D.5176 3D.5125 C.3571 114/10U	Spring Sleeve, holding Spring Slug, in Sleeve, adjusting tension on Spring Pin, Split, securing Sleeve	A	s req'd		
BD.3712/1	Plate, Adjusting, between Hinge and Door (-064"	A	s req'd		•
3D.3712/2	thick) Plate, Adjusting, between Hinge and Door (.048" thick)	. A	s req'd		
3D.3712/3	Plate, Adjusting, between Hinge and Door (-036" thick)	A	s req'd	Fitted to Chassis No. 660675 and subs.	
BD.3712/4	Plate, Adjusting, between Hinge and Door (.022" thick)	A	s req'd	671097 and subs.	
AS.502/3H AN.102/L AG.102/T	Screw, Set, securirng Hinges to Vent Boxes Nut on Setscrews Washer, Spring, under Nuts		6 6		

			070103 AND 3003.
Part No.	Description.	Plate No.	No. per Unit. Remarks.
BD.4050	HEADLAMP CONTAINER ON L.H. FRONT WING	U.76	1 .
BD.4051	HEADLAMP CONTAINER ON R.H. FRONT WING	U.77	1
BD.2561 BD.2563/1 FW.105/T AW.104/T	Motif on Headlamp Containers Screw, Set (Special) securing Motifs Washer for Motifs Washer on Setscrews	U.78	Fitted from Chassis No. 660001 to 661156 670001 to 674717
BD.9266/1 FW.105/T AN.104/L AW.104/T	Stud for fixing of Motif to Headlamp Washer on Studs Nut on Studs Washer under Nuts		Fitted to Chassis No.  661157 and subs.  674718 and subs.
BD.3551	STEADY FOR L.H. FRONT WING		1
BD.3552	STEADY FOR R.H. FRONT WING		1
FS.104/5D FW.104/T FN.104/L C.724 BD.3553 AS.102/4D AW.102/T AN.102/L C.723	Screw, Set, securing Wing Steady Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Bracket, Attachment, for Front Wing Steady Screw, Set, securing Attachment Brackets Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts		4 8 4 4 2 6 6 6 6
BD.4469	TIE ROD BETWEEN FRONT WINGS (201/ LONG)		1
BD.4312	REAR WING ASSEMBLY, L.H.	U.79	1 NOT REQUIRED WHEN WIRE ROA
BD.4313	REAR WING ASSEMBLY, R.H.		1 WHEELS ARE FITTED
BD.9458	REAR WING ASSEMBLY, L.H.		1 FOR USE WHEN WIRE ROAD
BD.9459	REAR WING ASSEMBLY, R.H.		1 WHEELS ARE FITTED
BD.2401/1 BD.2401/2 BD.542/2 C.725	Screw, Set, securing Rear Wings Screw, Set, securing Rear Wings Washer, Special, on Setscrews Washer, Shakeproof, on Setscrews		4 4 14 14
BD.813	PIPING BETWEEN REAR WINGS AND BODY (6 FT. LONG)		2 SUPERSEDED BY BD.8598
BD.8598	PIPING BETWEEN REAR WINGS AND BODY (6 FT. LONG)		2 SUPERSEDES BD.813
BD.4512	STEADY FOR L.H. REAR WING		1
BD.4513	STEADY FOR R.H. REAR WING		1
BD.4514 BD.4709 FS.104/4D FW.104/T FN.104/L C.724	Bracket, Attachment, for Rear Wing Steady Plate, Steady, for Rear Wings Screw, Set, securing Steady Plate Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, on Setscrews		2 2 2 2 2 2 2

Part No.	Description.	Plate No.	No. per Unit. Remarks.
BD.4449	COVER FOR L.H. REAR WING	U.80	1 NOT REQUIRED WHEN WIRE SPO
BD.4450	COVER FOR R.H. REAR WING		1 ROAD WHEELS ARE FITTED
BD.2122	LOCK FOR L.H. REAR WING COVER	U.81	1 }
BD.2121 AS.502/4H AN.102/L C.723	LOCK FOR R.H. REAR WING COVER Screw, Set, securing Locks Nut on Setscrews Washer, Shakeproof, under Nuts		NOT REQUIRED WHEN WIRE SPO ROAD WHEELS ARE FITTED
2312	ESCUTCHEON FOR LOCKS ON WING COVERS	U.82	NOT REQUIRED WHEN WIRE SPO
BD.540/9	Screw, Self-Tapping, securing Escutcheons		4 ROAD WHEELS ARE FITTED
BD.4764/1	SEALING RUBBER FOR WING COVERS (56" LONG)		2 NOT REQUIRED WHEN WIRE SPO ROAD WHEELS ARE FITTED
BD.7769	MOULDING (BRASS) AROUND L.H. REAR WING		1
BD.7770	MOULDING (BRASS) AROUND R.H. REAR WING		REQUIRED ONLY WHEN WIRE SPOKE ROAD WHEELS ARE FITTED
BD.1229/1	Screw, Self-Tapping, securing Mouldings		16
BD.4412	BONNET ASSEMBLY	U.83	1
FS.104/4D FW.104/T C.724	Screw, Set, securing Bonnet to Hinges Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		8 8 8
BD.4379	BONNET HINGE ASSEMBLY	U.84	2
BD.4440 PS.104/4D FW.104/T C.724	Plate, Tapping, for Bonnet Hinge Screw, Set, securing Hinges to Dash Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		4 8 8 8
BD.3270	PROP ASSEMBLY, HOLDING BONNET IN "OPEN" POSITION	U.85	1
BD.3272 FW.105/T	Pin, hingeing Bonnet Prop Washer, Plain, on Hinge Pin		1
L.102/6Ú BD.1708/1 BD.4699	Pin, Split, through Hinge Pin Washer, Spring, on Hinge Pin Bracket and Clip Assy., fixing Prop in "closed" position		1 1 1 Fitted from Chassis No. 660059 to 660115
BD.4834	Bracket and Clip Assy., fixing Prop in "closed" position		670185 to 670377  1 Fitted to Chassis No. 660116 and subs.
AS.402/4H AN.102/L C.723	Screw, Set, securing Clip Assy. Nut on Setscrews Washer, Shakeproof, under Nuts		670378 and subs. 2 2 2
BD.4418	STAY ASSEMBLY FOR BONNET PROP		1 .
FS.104/4D FS.104/3D	Screw, Set, securing Stay Screw, Set, securing Stay		2 . 1

	· · · · · · · · · · · · · · · · · · ·			
Part No.	Description.	Plate No.	No. per Unit.	Remarks.
BD.3271	SOCKET ASSEMBLY FOR BONNET PROP	U.86	1	
FS.104/4D FN.104/L C.724	Screw, Set, securing Socket to Front Wing Valance Nut on Setscrews Washer, Shakeproof, under Nuts		2 2 2	
BD.2950	CATCH ASSEMBLY FOR BONNET	U.87	1	
BD.2952 NS.125/4D C.724	Plate, Guide, for Bonnet Catch Screw, Set, securing Bonnet Catch Washer, Shakeproof, on Setscrews	U.88	1 3 3	
BD.2951	HOOK AND STRIKER ASSY. FOR BONNET CATCH	U.89	1	
BD.5106 FS.104/4D FW.104/T FN.104/L C.724	Bracket, mounting Hook and Striker Screw, Set, securing Hook and Striker Washer on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts	U.90	1 9 4 9	
BD.2954	CONTROL WIRE, RELEASING BONNET CATCH (COMPLETE WITH KNOB AND FITTINGS)	U.91	1	
C.2711 NS.131/5D NN.131/L C.725 C.2735	Clip, securing Control Wire Screw, Set, securing Clip Nut on Setscrew Washer, Shakeproof, under Nut Clip, securing Control Wire		1 1 1 1 2	ONE ONLY REQUIRED FOR L.H DRIVE CARS
C.4443	ADJUSTER FOR BONNET CONTROL WIRE		1	
C.3880 FW.104/T NN.125/L C.724	Post for Control Wire Adjuster Washer, Plain, for Post Nut for Adjuster Washer, Shakeproof, under Nuts		1 4 5 5	
BD <b>.461</b> 6	RUBBER BUFFER FOR BONNET REST	U.92	6	
BD.2877	RADIATOR GRILLE ASSEMBLY (IN BONNET)	U.93		
BD.2877/1-2 BD.2877/3 BD.2877/4 BD.2877/5 BD.2877/6 BD.2877/7 BD.2877/9 BD.2877/10 BD.2877/11 BD.2877/12 BD.2877/12 BD.2877/13 BD.2877/14 BD.2877/14	Frame, Outer, only Vane, Centre Vane, No. 1, L.H. Vane, No. 2, L.H. Vane, No. 2, R.H. Vane, No. 3, L.H. Vane, No. 3, R.H. Vane, No. 4, R.H. Vane, No. 5, L.H. Vane, No. 5, L.H. Vane, No. 5, L.H. Vane, No. 5, L.H. Vane, No. 5, R.H. Vane, No. 6, R.H. Vane, No. 6, R.H.		1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	
BD.4755 AW.102/T AN.102/L C.723	Stud, Special, on Radiator Grille Washer, Plain, on Studs Nut on Studs Washer, Shakeproof, under Nuts		8 8 8	

Part No.	Description.	Plate No.	No. pe Unit.		
BD.3286	BADGE ON BONNET	U.94	,. <b>1</b>	es de la companya de	
AW.102/T AN.102/L C.723	Washer, Plain, on Badge Stud Nut on Stud Washer, Shakeproof, under Nut		1 1 1		
BD.2855	FRONT BUMPER BAR	U.95	2		
C.4202/3 C.3088	Nut, securing Bumper Bars to Spring Bars Washer for Bumper fixing		6 2		
C.3695	SPRING-BAR, MOUNTING BUMPER BARS	U.96	2		
NB.150/20D C.728 NB.150/10D FW.208/T	Bolt, securing Spring Bars to Brackets Washer, Shakeproof, on Bolts Bolt, securing Spring Bars to Supports Washer, Plain, on Bolts		2 8 2 6		
C.3837	Nut, Dome, securing Spring Bars to Extensions	U.97	4	Fitted from Chassis No. 660059 to 660934 670185 to 671796	
C.5819	Nut, Dome, securing Spring Bars to Extensions		4	Fitted to Chassis No. 660935 and subs.	
C.741	Washer, Shakeproof, under Dome Nuts		4	671797 and subs.	
C.3943	SCREWED EXTENSION FOR SPRING-BAR FIXING	U.98	4		
C.3945 C.3849 C.793 C.3225 C.3830	Washer, Spacing, on Screwed Extensions Washer (Rubber) at Wing mounting holes Washer, Spacing Washer, Wing Clamping Piece, Distance	U.99 U.100	4 8 6 4 2		
C.3831	BUMPER SUPPORT MEMBER	Ú.101	1		
C.3833	BUMPER SUPPORT STRUT, L.H.	U.102	1		
C.3832	BUMPER SUPPORT STRUT, R.H.	U.103	1		
NB.137/7D C.741	Bolt, securing Support Struts to Chassis Frame Washer, Shakeproof, on Bolts		2 2	- 14 - 14	
3D. <b>2</b> 856/1	REAR OVER-RIDER, R.H.	U.104	1		
BD.2856/2	REAR OVER-RIDER, L.H.		1		
C.3279	Nut, Dome, securing Over-Riders to Spring Bars	U.105	4	Fitted from Chassis No. 660059 to 660934	
C.5829	Nut, Dome, securing Over-Riders to Spring Bars		4	670185 to 671796 Fitted to Chassis No. 660935 and subs.	·
FW.106/T C. <b>726</b>	Washer, Plain, on Over-Rider Studs Washer, Shakeproof, under Dome Nuts		4	671797 and subs.	
C.3784	SPRING - BAR, MOUNTING OVER - RIDERS	U.106	2		
C.3778	Piece, Distance, between Spring Bars and Support	U.107	2		
C.2869 NB.137/7D	Brackets Grommet (Rubber) on Distance Pieces Bolt, securing Spring Bars to Chassis Frame (at centre)	U.108	2 2		

Part No.	Description.	Plate No.	No. pe Unit.	
NB.137/23D	Bolt, securing Spring Bars to Chassis Frame (at each end)		4	.9
NN.137/L C.726	Nut on Bolts Washer, Shakeproof, under Nuts		6 6	
BD.4178	SUPPORT BRACKET FOR R.H. OVER-RIDER	U.109	1 }	NOT REQUIRED WHEN WIRE ROAD
BD.4179	SUPPORT BRACKET FOR L.H. OVER-RIDER	U.110	1	WHEELS ARE FITTED
BD.7763	SUPPORT BRACKET FOR L.H. OVER-RIDER		1 }	FOR USE WHEN WIRE ROAD
BD.7764	SUPPORT BRACKET FOR R.H. OVER-RIDER		1	WHEELS ARE FITTED
C.8265 C.3837	Bolt, through Support Bracket, securing Spring Bar Nut, Dome, on Bolts		2 2	Fitted from Chassis No. 660059 to 660934 670185 to 671796
C.5819	Nut, Dome, on Bolts		2	Fitted from Chassis No.
C.728	Washer, Shakeproof, under Dome Nuts		2	660935 and subs. 671797 and subs.
C.3236	FRONT NUMBER PLATE ASSEMBLY	٠	1	NOT REQUIRED FOR U.S.A.
C.3229	FRONT LICENCE PLATE ASSEMBLY		.1	FOR EXPORT TO U.S.A. From Chassis No. 660001 to 660074 670001 to 670265
C.4182	FRONT LICENCE PLATE ASSEMBLY		1	FOR EXPORT TO U.S.A. From Chassis No. 660075 and subs. 670266 and subs.
C.2945	REAR NUMBER PLATE		1	SUPPLIED TO SPECIAL ORDER ONLY. NOT REQUIRED FOR U.S.A. AND CANADA
BD.4257	REAR NUMBER PLATE PANEL ASSEMBLY		1	NOT REQUIRED FOR U.S.A. AND CANADA ALTERNATIVE TO BD.5644
BD.5644	REAR NUMBER PLATE PANEL ASSEMBLY		1	NOT REQUIRED FOR U.S.A. AND CANADA ALTERNATIVE TO BD.4257
BD.4256	REAR NUMBER PLATE PANEL ASSEMBLY			FOR EXPORT TO U.S.A. AND CANADA ALTERNATIVE TO BD.5645
BD.5645	REAR NUMBER PLATE PANEL ASSEMBLY		1	FOR EXPORT TO U.S.A. AND CANADA ALTERNATIVE TO BD. 4256
C.2944 NS.125/4D FW.104/T C.724	Seal (Rubber) around Number Plate Panel (5' long) Screw, Set, securing Number Plate Panel Washer, Plain, on Setscrews Washer, Shakeproof, on Setscrews		1 8 8 8	
C.2840	COMMISSION NUMBER PLATE		1	SUPERSEDED BY C.7704
C.7704	COMMISSION NUMBER PLATE		1	SUPERSEDES C.2840

FITTED ONLY TO CHASSIS No. 660059 AND SUBS. 670185 AND SUBS.

Part No.	Description.	Plate No.	No. per Unit.	r Remarks.
BD.8294	RECORD - BREAKING REPLICA PLATE		1	
C.1107	LICENCE HOLDER		1	
BD.4660	GRAB RAIL	U.111	1	
BD.4659 NN.137/L C.726	Escutcheon for Grab Rail Nut, securing Grab Rail Washer, Shakeproof, under Nuts		2 2 2	
	INTERIOR TRIMMING			
BD.4653 BD.4654 BD.4655 BD.4656 BD.4676 BD.4677 BD.4686 BD.4687 BD.539/1	Fillet, Tacking, Windscreen (18" × 24" × 18") Fillet, Tacking, Windscreen (18" × 54" × 18") Fillet, Tacking, Windscreen (18" × 13" × 14") Fillet, Tacking, Rear (18" × 33" × 24") Fillet, Tacking, Assembly, L.H. Rear Quarter Fillet, Tacking, Assembly, R.H. Rear Quarter Casing Assembly for L.H. Rear Quarter Casing Assembly for R.H. Rear Quarter Screw, Self-Tapping, securing Rear Quarter		1 2 2 1 1 1 1 1 1	
BD.532/1 BD.4710 BD.4711 BD.4712 BD.4713 BD.4721	Casings Washer, Cup, on Self-Tapping Screws Rexine for Side Curtain Tray Rexine for L.H. Wheel Arch Rexine for R.H. Wheel Arch Rexine for Battery Container Moquette for Shut Pillar (3"×21")		14 1 1 1 1 2	
BD.3631	ROLL, TRIMMING TOP OF DOORS, TONNEAU, AND SCUTTLE (13' 7" LONG)		1	
BD.3631/1 BD.3631/2 BD.3631/3 BD.3660 BD.3661 BD.3662 BD.3663	Roll, Trimming top of Doors (27½" long) Roll, Trimming top of Scuttle (43½" long) Roll, Trimming top of Tonneau (64½" long) Hide, covering Trimming Roll on L.H. Door (29"×8") Hide, covering Trimming Roll on R.H. Door (29"×8") Hide, covering Trimming Roll on Scuttle (51"×9") Hide, covering Trimming Roll on Tonneau (66"×3")		2 1 1 1 1 1 1 1	
BD.3871	COVER ASSEMBLY FOR PROPELLER SHAFT TUNNEL	U.111/	A 1	
BD.3045	Piping Assembly for Prop Shaft Tunnel Cover (3' long)		1	
BD.3868 BD.3869	SEAT, L.H. ASSEMBLY SEAT, R.H. ASSEMBLY		1 }	Fitted from Chassis No. 660001 to 661151 670001 to 674390 674392 to 674408 674410 to 674433
BD.9250	SEAT, L.H. ASSEMBLY		}	Fitted to Chassis No. 674434 and subs.
BD.9251	SEAT, R.H. ASSEMBLY		1 ]	Also to 674391 and 674409

NOTE.—The above is for the supply of fully Trimmed Seats, complete with Base Frame, Runners, Adjusting Lever and Hinges, BUT LESS CUSHION.

Part No.	Description.	Plate No. per No. Unit. Remarks.
BD.4006	SEAT SQUAB FRAME ASSEMBLY, L.H.	U.112 1 ALTERNATIVE TO BD.4792
BD.4007	SEAT SQUAB FRAME ASSEMBLY, R.H.	1 ALTERNATIVE TO BD.4793
BD.4792	SEAT SQUAB FRAME ASSEMBLY, L.H.	1 ALTERNATIVE TO BD.4006 OR BD.400 RESPECTIVELY for Chassis No. 660001 to 674390
BD.4793	SEAT SQUAB FRAME ASSEMBLY, R.H.	660001 to 661151 670001 to 674390 674392 to 674408 674410 to 674433
BD.9222	SEAT SQUAB FRAME ASSEMBLY, L.H.	1 Fitted to Chassis No. 661152 and subs. 674434 and subs.
BD.9223	SEAT SQUAB FRAME ASSEMBLY, R.H.	1 Also to 674391 and 674409
	NOTE.—The above is fully Trimmed and complete with Hinges.	
BD.3252	SEAT BASE FRAME ASSEMBLY, L.H.	U.113 1
BD.3253	SEAT BASE FRAME ASSEMBLY, R.H.	1
	NOTE.—The above is supplied less Runners, Adjusting Lever and Tension Spring.	
BD.3870	SEAT CUSHION ASSEMBLY	U.114 2
BD.3675 BD.3676 BD.3768 BD.3769 BD.4794 BD.4795 BD.4796 BD.4797 BD.3255 BD.541/10 C.4202/2 FG.105/X BD.3308/9 NS.525/8H FS.504/4H FN.104/L C.724 NS.525/12H BD.4750/1 BD.4750/1 BD.4750/2 BD.3258 BD.3259 FS.104/4D FW.104/T FN.104/L C.724 C.3317	Hinge, Inner, for L.H. Seat Hinge, Inner, for R.H. Seat Hinge, Outer, for R.H. Seat Hinge, Outer, for R.H. Seat Hinge, Inner, for R.H. Seat Hinge, Inner, for R.H. Seat Hinge-and-Pocket, Outer, for R.H. Seat Hinge-and-Pocket, Outer, for R.H. Seat Pivot for Hinges Washer, Plain, on Pivots Nut on Pivots Nut on Pivots Washer, Spring, under Nuts Runner on Seats (comprising 1 Plain and 1 Slotted Runner per set) Screw, Set, securing Outer Runners to Floor Screw, Set, securing Runners to Seats Nut, fixing Setscrews to Seats Washer, Shakeproof, under Nuts Screw, Set, securing Inner Runners to Floor Packing under Inner Runners Packing under Inner Runners Lever, Adjusting, on L.H. Seat Lever, Adjusting, on R.H. Seat Screw, Set, securing Adjusting Levers Washer, Plain, on Setscrews Nut on Setscrews Washer, Shakeproof, under Nuts Spring, Tension, for Adjusting Lever	Fitted from Chassis No. 660059 to 660227 670185 to 670725  Fitted to Chassis No. 660228 and subs. 670726 and subs.  4 8 8 4 4 2 4 As req'd As req'd As req'd 1 1 2 2 2 2 2 2 2 2
BD.3317	HOODSTICKS ASSEMBLY	U.115 1 Fitted from Chassis No. 660059 to 660227 670185 to 670725
BD.4727	HOODSTICKS ASSEMBLY	1 Fitted from Chassis No. 660228 to 660725 660727 to 660728 670775 to 671097

Part No.	Description.	Plate No.	No. per Unit. Remarks.
BD.5848	HOODSTICKS ASSEMBLY		1 Fitted to Chassis No. 660726 only 660729 and subs. 671098 and subs.
BD.6228 BD.4374 BD.3342 BD.541/10 BD.3529 BD.4730 BD.541/12 BD.4731	Seal at centre of Canopy Rail (7" long) Rubber, Sealing, in channel of Canopy Rail (44" long) Screw, Pivot, securing Hoodsticks Washer on Pivot Screws Piece, Distance, behind Hoodsticks Screw, Pivot, securing Hoodsticks Washer on Pivot Screws Piece, Distance, behind Hoodsticks		1 1 2     Fitted from Chassis No. 2     660059 to 660227     670185 to 670725 2     Fitted to Chassis No. 2 660228 and subs. 670726 and subs.
3D.3541	TOGGLE CLAMP ASSEMBLY AT EACH SIDE OF HOODSTICKS		2
3D.3542	TOGGLE CLAMP ASSEMBLY IN CENTRE OF HOODSTICKS		1
3D.3241	RETAINER, ON BODY, FOR HOODSTICKS		2
3D.536/1 AN.102/L C.723	Stud, in Retainers Nut, on Studs, securing Retainers to Body Washer, Shakeproof, under Nuts		4 4 4
3D.3823	WEBBING STRIP ON HOODSTICKS (2" x 60")		2
C.2015/6 BD.532/4 BD.531/2	Screw, Set, securing Webbing to Rear Stick Washer, Cup, on Setscrews Nut, Dome, on Setscrews		2 2 2
3D.3824	HOOD CLOTH ASSEMBLY (COMPLETE WITH BACKLIGHT)		1 Fitted from Chassis No. 660059 to 660725 660727 to 660728 670185 to 671097
3D.5866	HOOD CLOTH ASSEMBLY (COMPLETE WITH BACK CURTAIN AND ZIP FASTENER)		1 Fitted from Chassis No. 660726 only 660729 to 661045 671098 to 67339
D.3833 D.5549	Fastener "Durable Dot" for Hood Fastener "Zip" for Back Curtain (43" long)		1 PLEASE STATE COLOUR WHEI ORDERING
SD.8267	HOOD CLOTH ASSEMBLY (COMPLETE WITH BACK CURTAIN AND ZIP FASTENERS)		1) Frank or Charle N
D.3833 D.8240 D.8241 D.568/1 D.568/2	Fastener "Durable Dot" for Hood Fastener, Zip (30" long) at bottom of Back Curtain Fastener, Zip (14" long) at sides of Back Curtain Socket "Lift the Dot" on flap of Back Curtain Clinch-Plate, securing Socket to flap of Back Curtain		Fitted to Chassis No.  661046 and subs.  673396 and subs.  2 2 2
3D.8266 C.2015/3 3D.532/4	Stud, in Hoodstick, for "Lift the Dot" Fasteners Screw, Set, securing Hood Cloth to Floating Stick Washer, Cup, on Setscrews		2 2 2

				670185 AND SUBS.
Part No.	Description.	Plate No.	No. pe Unit.	r Remarks.
BD.4405	BACKLIGHT ASSEMBLY	U.116	1	
BD,8070	Glass only, for Backlight		1	
2179	Buffer (Rubber), on Back Light Frame		4	
BD.3838	PIN BEAD ALONG CANOPY RAIL		1	
BD.3825	TONNEAU COVER ASSEMBLY		1	FOR LEFT HAND DRIVE CARS ONLY From Chassis No. 670185 to 671465
BD.4646	TONNEAU COVER ASSEMBLY		1	FOR RIGHT HAND DRIVE CARS
BD.3565	Fastener "Zip" on Tonneau Cover (34' long)		1	From Chassis No. 660059 to 660879
BD.6453	TONNEAU COVER ASSEMBLY		1	FOR LEFT HAND DRIVE CARS ONLY For Chassis No. 671466 and subs.
BD.6454	TONNEAU COVER ASSEMBLY		1	FOR RIGHT HAND DRIVE CARS
BD.3565	Fastener "Zip" on Tonneau Cover (34" long)		1	For Chassis No. 660880 and subs.
BD.3822	Fastener "Tenax" securing Tonneau Cover to		2 ]	Fitted from Chassis No.
BD.4673	sides of Scuttle Fastener "Tenax" securing Tonneau Cover at side		1	660059 to 660879 670185 to 671465
BD.3833	of Mirror Fastener "Durable Dot" securing Tonneau Cover		4	5.5.55
BD.1749	at rear end Fastener "Lift the Dot" for Tonneau Cover		3	Fitted to Chassis No. 660880 and subs. 671466 and subs.
BD.4492	SIDE CURTAIN ASSEMBLY, L.H.	U.117	1)	Fitted from Chassis No.
BD.4493	SIDE CURTAIN ASSEMBLY, R.H.		1	660059 to 660810 670185 to 671195
BD.5853	SIDE CURTAIN ASSEMBLY, L.H.		1 }	Fitted to Chassis No.
BD.5854	SIDE CURTAIN ASSEMBLY, R.H.		1 ]	660811 and subs. 671196 and subs.
BD.4494	FRAME ASSEMBLY FOR L.H. SIDE CURTAIN		1]	Fitted from Chassis No. 660059 to 660810
BD.4495	FRAME ASSEMBLY FOR R.H. SIDE CURTAIN		1 ]	670185 to 671195
8D.5855	FRAME ASSEMBLY FOR L.H. SIDE CURTAIN		1)	Fitted to Chassis No.
BD.5856	FRAME ASSEMBLY FOR R.H. SIDE CURTAIN		1	660811 and subs. 671196 and subs.
22,230	TIME ASSESSED FOR RAIL SIDE CORTAIN		- <b>,</b>	
BD.4496	GLASS FRAME ASSEMBLY FOR L.H. SIDE CURTAIN		1	Fitted from Chassis No. 660059 to 660810
BD.4497	GLASS FRAME ASSEMBLY FOR R.H. SIDE CURTAIN		1	670185 to 671195

		Plate No. per
Part No.	Description.	No. Unit. Remarks.
BD.5857	GLASS FRAME ASSEMBLY FOR L.H. SIDE CURTAINS	1 Fitted to Chassis No. 660811 and subs.
BD.5858	GLASS FRAME ASSEMBLY FOR R.H. SIDE CURTAINS	1 671196 and subs.
BD.4389	WINDOW ("PERSPEX") FOR SIDE CURTAINS	Fitted from Chassis No.
C.2025/1 C.4549/2 C.2025/4 BD.532/2	Screw, Set, around Glass Frame Screw, Set, around Glass Frame Screw, Set, around Glass Frame Washer, Cup, on Setscrews	2 660059 to 660810 16 670185 to 671195 8 2
BD.5851	WINDOW ("PERSPEX") FOR SIDE CURTAINS	Fitted to Chassis No.
C.2025/1 C.4549/3 C.2025/4 BD.532/2	Screw, Set, around Glass Frame Screw, Set, around Glass Frame Screw, Set, around Glass Frame Washer, Cup, on Setscrews	2 660811 and subs. 671196 and subs. 8 2
BD.4498	FIXING ROD ASSEMBLY, L.H.	1)
BD.4499	FIXING ROD ASSEMBLY, R.H.	1 Fitted from Chassis No.
BD.4667 AS.502/3H	Plate, Fixing, Assembly, behind Door Casings, for Side Curtain Fixing Knobs Screw, Set, securing Fixing Plates	660059 to 660810 670185 to 671195
BD.5859	FIXING ROD ASSEMBLY, L.H.	<b>1</b> ]
BD.5860	FIXING ROD ASSEMBLY, R.H.	1 Fitted to Chassis No.
BD.4667	Plate, Fixing, Assembly, behind Door Casings, for Side Curtain Fixing Knobs	660811 and subs. 671196 and subs.
AS.502/3H	Screw, Set, securing Fixing Plates	16
BD.3429	WHOR FIVING CIDE CURTAINS TO SOCIE	•
BD.3429	KNOB, FIXING SIDE CURTAINS TO DOORS  Escutcheon under Fixing Knobs	4
C.2027/1	Screw, Set, securing Escutcheons	4 8

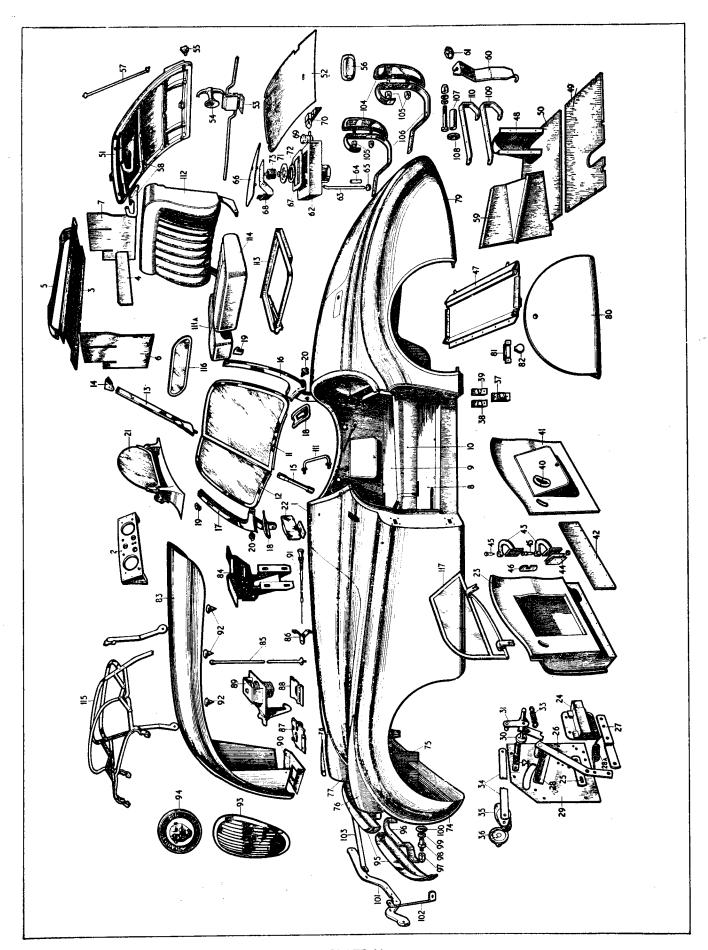


PLATE U.