



SPARES DIVISION

VOLUME I

XK.150 AND XK.150'S'

SPARE PARTS CATALOGUE

Incorporating

AUTOMATIC TRANSMISSION UNIT

OVERDRIVE UNIT

ENGINE NUMBERS

XK.150 WITH 3.4 LITRE ENGINE	-	-	-	-	V.1001 ONWARDS
XK.150 'S' WITH 3.4 LITRE ENGINE	-	-	-	-	VS.1001 ONWARDS
XK.150 WITH 3.8 LITRE ENGINE	-	-	-	-	VA.1001 ONWARDS
XK.150 'S' WITH 3.8 LITRE ENGINE	-	-	-	-	VAS.1001 ONWARDS

NOTE: Suffix /7, /8 or /9 to the Engine numbers denotes Compression Ratio.

CHASSIS NUMBERS

OPEN CAR	-	-	RIGHT-HAND DRIVE	-	820001 ONWARDS
OPEN CAR	-	-	LEFT-HAND DRIVE	-	830001 ONWARDS
FIXED HEAD COUPE	-	-	RIGHT-HAND DRIVE	-	824001 ONWARDS
FIXED HEAD COUPE	-	-	LEFT-HAND DRIVE	-	834001 ONWARDS
				ALSO	847001 ONWARDS
DROP HEAD COUPE	-	-	RIGHT-HAND DRIVE	-	827001 ONWARDS
DROP HEAD COUPE	-	-	LEFT-HAND DRIVE	-	837001 ONWARDS

NOTE: 'S' Models are distinguished by the addition of a letter 'T' as a prefix to the Chassis number.

Suffix 'BW' to the Chassis number denotes that an Automatic Transmission Unit is fitted.

Suffix 'DN' to the Chassis number denotes that an Overdrive Unit is fitted.

JAGUAR CARS LIMITED, COVENTRY, ENGLAND

Telephone:

Allesley 2121 (P.B.X.)

Telegraphic Address:

"JAGUAR" COVENTRY

Telex: 31622

Code: Bentley's 2nd

INTERPRETATION OF CATALOGUE

Attention is drawn to the lay-out of this catalogue. It will be observed that the heading of each assembly is printed in **BOLD BLOCK LETTERS**, whilst the spares relevant to each assembly are printed in small type and inset to the right.

The fact that certain items (printed in small type) are not "inset" indicates that they do not form part of any assembly and must, therefore, be ordered as individual items.

ILLUSTRATIONS

To aid identification of spares, "exploded" illustrations are incorporated in this catalogue.

These illustrations may be used in the following manner:—

(a) If a Front Engine Mounting is required, the index shows that the details for the item are printed on page 7 and that it is illustrated on Plate 1. Turning to page 7 the necessary information for the ordering of the part is given, whilst the column headed "Plate No." indicates that reference to item number 74 on Plate 1 will give a photographic view of the component required.

(b) The details for each illustrated item are printed in the script in numerical Plate number order. An item may therefore be first identified photographically. For example, if a Seal is required for the Water Pump, a picture of the part may be found on Plate 4, together with its Plate reference number. It is now an easy matter to find Plate number "4-6" in the script and the Part No. and Technical Description are at once apparent.

ORDERING

Customers are advised to make themselves familiar with the method of ordering spare parts in accordance with the explanatory notes which follow.

COLOURED PAGES

Certain pages of this Catalogue are printed on tinted paper. The colour code printed below will help users of the Catalogue to make quick reference to the sections indicated by the applicable colour.

Details for **STANDARD TRANSMISSION** printed on **WHITE PAPER**

Details for **AUTOMATIC TRANSMISSION** printed on **PINK PAPER**

Details for **OVERDRIVE UNIT** printed on **BLUE PAPER**

Details for **'S' MODELS** printed on **YELLOW PAPER**

INSTRUCTIONS FOR ORDERING SPARE PARTS

To avoid delay through inaccurate interpretation, it is of great importance that the information detailed in the following paragraphs be strictly adhered to when placing orders.

CAR TYPE

Always quote the engine and chassis numbers except when Stock Orders are placed, in which case the Year and Model must be indicated.

If **Gearbox components** are required it is necessary to quote on the order the **serial number of the Gearbox**, together with any **prefix or suffix letters** which may be indicated.

An order for spares in connection with an **Automatic Transmission Unit** must be accompanied by the **Transmission Serial Number**. If it is desired to replace the **Converter Assembly**, however, the order for this Component must bear the **Serial number of the Converter** which will be found stamped on the engine side of the Flywheel, adjacent to the Starter Ring Gear.

Orders for parts affecting **Overdrive Unit** should be clearly marked with the **Serial Number of the Unit** for which the parts are required.

The Serial numbers are stamped on a brass plate which is fitted to the dash and also on the Units referred to above.

DETAILS OF PARTS REQUIRED

When ordering, the most complete information should be given to enable us to deal with your requirements expeditiously and to minimise delay in the despatch of the goods. Therefore we strongly recommend that the following procedure be adopted:—

- (1) Identify part with technical description in catalogue.
- (2) On order, quote (a) part number; (b) technical description.

Note: In no case should the illustration plate number be given.

- (3) If doubt exists as to the part number or technical description, a dimensioned sketch will assist in the interpretation of the order, or, alternatively, the old part should accompany the order as a pattern. When patterns are sent, it is most important that they be labelled, indicating the name and address of the sender, together with any reference such as order number, etc. Patterns will not be returned unless instructions to that effect accompany the order. In the absence of such instructions, patterns will be scrapped after retention for a period of ONE WEEK.
- (4) To order in "sets" is misleading. Please, therefore, state the specific quantity required.

SPECIAL ATTENTION

Particular attention is drawn to the fact that when such items as wings, doors, door glasses, etc., are required, care should be taken to indicate whether they are located on the left-hand or right-hand side of the car. The position is determined by the driver's own left or right hand when seated in the car.

Orders for any coloured parts such as **carpets, casings, etc.**, should clearly state the **precise colour required**.

DESPATCH INSTRUCTIONS

The full address of the destination to which the goods are to be sent, together with that of the customer, should be clearly defined.

Whilst every effort will be made to observe customers wishes as to the mode of transport, It is the normal custom to utilize the quickest possible method, whether it be post, passenger train or road transport, this being dependent upon the size and weight of the package and the destination.

PRICES

Current retail prices shown in the Jaguar Master Parts Price List are subject to alteration without notice, and are for delivery at Works. Postage, carriage and packing will be charged extra.

DAMAGE BY FIRE OR ACCIDENT

Whilst every precaution is taken, we do not accept liability for damage which may be caused by fire to any motor car or part thereof entrusted to us for any purpose whatsoever. Nor is liability accepted for accidental damage.

DESPATCH INSTRUCTIONS

The full address of the destination to which the goods are to be sent, together with that of the customer, should be clearly defined.

Whilst every effort will be made to observe customers wishes as to the mode of transport, it is the normal custom to utilize the quickest possible method, whether it be post, passenger train or road transport, this being dependent upon the size and weight of the package and the destination.

PRICES

Current retail prices shown in the Jaguar Master Parts Price List are subject to alteration without notice, and are for delivery at Works. Postage, carriage and packing will be charged extra.

DAMAGE BY FIRE OR ACCIDENT

Whilst every precaution is taken, we do not accept liability for damage which may be caused by fire to any motor car or part thereof entrusted to us for any purpose whatsoever. Nor is liability accepted for accidental damage.

INDEX

Description	Page No.	Plate	Description	Page No.	Plate
CYLINDER BLOCK	1—8	1	CYLINDER HEAD (XK.150 'S') ...	32—42	6
Cap Screws	1		Breather Cover	37	6
Chain Tensioner Filter Gauze	2	1	Brake Servo Adaptor	39	6
Connecting Rods	3	1	Brake Servo Hose	39	6
Connecting Rod Bearings	3	1	Brake Servo Valve	39	
Crankshaft	2	1	Camshafts	35	6
Crankshaft Bearings	2	1	Camshaft Covers	36—37	6
Crankshaft Damper	3	1	Cylinder Head	32—33	6
Crankshaft Thrust Washers	2	1	Cylinder Head Gasket	33	6
Cylinder Block	1	1	Decarbonising Gaskets	33	
Cylinder Block Liners	2		Exhaust Manifolds	38	6
Cylinder Head Studs	1	1	Inlet Manifolds	38	6
Distributor Sealing Ring	1	1	Oil Filler Cap	37	6
Drain Tap	2	1	Oil Pipes	37	6
Dynamo Bracket	2	1	Rev. Counter Drive	35—36	
Fan Pulley	3	1	Rev. Counter Gearbox	36	
Flywheel	4	1	Sparkling Plugs	41	
Front Engine Mountings	7	1	Sparkling Plug Terminals	41	
Liners	2		Starting Pipe	40	6
Oil Pipes	6	1	Thermostat	40	6
Oil Pump Drive Gear	3	1	Valves	34	6
Oil Sump	5	1	Valve Guides	32—33	6
Oil Sump Dipstick	6	1	Valve Inserts	32—33	6
Oil Sump Filter	5	1	Valve Pads	34	6
Oil Sump Hose	6	1	Valve Springs	34	6
Overhaul Gaskets	8		Valve Tappets	34	6
Pistons	4—5	1	Water Outlet Elbow	40	6
Piston Rings	4—5	1	Water Outlet Pipe	40	6
Rear Engine Mountings	7	1			
Timing Chain Gear	3	1			
OIL PUMP	10	2	TIMING GEAR	45—48	7
OIL CLEANER	12	3	Adjusting Plate	45	7
WATER PUMP	14—16	4	Camshaft Sprockets	45	7
Belt	14	4	Chain Tensioner	48	7
Bypass Hose	15	4	Chain Tensioner Repair Kit	48	
Fan	14	4	Idler Sprocket	45	7
Fan Pulley	14	4	Idler Sprocket Eccentric Shaft	45	7
Heater Hoses	15—16	4	Intermediate Sprockets	46	7
Heater Pipes	15—16	4	Intermediate Sprockets Shaft	46	7
Water Pump Impeller	14	4	Micro. Adjustment Plate	45	7
Water Pump Seal	14	4	Mounting Brackets	45	7
Water Pump Spindle	14	4	Timing Chains	46—47	7
			Timing Cover	48	7
			Timing Cover Oil Seal	48	7
			Vibration Damper	46—47	7
			Vibration Damper Bracket	47	
CYLINDER HEAD (XK.150)	18—28	5	CARBURETTERS (XK.150)	50—54	8
Breather Cover	23	5	Acceleration Needle	51	8
Brake Servo Flange	25		Acceleration Jet	51	8
Brake Servo Hose	25		Connecting Rod	51	8
Brake Servo Valve	25		Distributor Suction Pipe	53	8
Camshafts	21	5	Flexible Coupling	52	8
Camshaft Covers	22—23	5	Flexible Petrol Pipe	53	8
Cylinder Head	18—19	5	Insulators	52	8
Cylinder Head Gasket	19	5	Jet	50	8
Decarbonising Gaskets	20		Jet Needle	50	8
Exhaust Manifolds	24	5	Overflow Pipes	53	8
Inlet Manifold	24	5	Petrol Feed Pipe	53	8
Oil Filler Cap	23	5			
Oil Pipes	23	5			
Rev. Counter Drive	22—23	5			
Rev. Counter Gearbox	22				
Sparkling Plugs	27				
Sparkling Plug Terminals	28				
Starting Pipe	26	5			
Thermostat	27	5			
Valves	20	5			
Valve Guides	18—19	5			
Valve Inserts	18—19	5			
Valve Pads	21	5			
Valve Springs	20	5			
Valve Tappets	20	5			
Water Outlet Elbow	27	5			
Water Outlet Pipe	26	5			
			CARBURETTERS AND PETROL		
			FILTER (XK.150)	56—60	9
			Acceleration Needle	56	9
			Acceleration Jet	56	9
			Connecting Rod	57	9
			Distributor Suction Pipe	58	9
			Flexible Coupling	57	9
			Flexible Petrol Pipe	59—60	9
			Insulators	58	9
			Jet	56	9
			Jet Needle	56	9
			Overflow Pipes	58	9
			Petrol Feed Pipe	59	9
			Petrol Filter	59	9

INDEX

Description	Page No.	Plate
CARBURETTORS AND PETROL		
FILTER (XK.150 'S')	64—68	10
Acceleration Needle	64	10
Acceleration Jet	64	10
Control Rods	66	10
Coupling	67	10
Distributor Suction Pipe	68	10
Insulators	67	10
Jet	64	10
Jet Needle	64	10
Overflow Pipes	67	10
Petrol Feed Pipe	68	10
Petrol Filter	68	10
Throttle Slave Shafts	66	10
 AIR CLEANER (R.H.D. XK.150)	72	11
 AIR CLEANER (L.H.D. XK.150)	74	12
 AIR CLEANER (XK.150 'S')	78	13
 ACCELERATOR CONTROLS (R.H.D. STANDARD OR OVERDRIVE TRANSMISSION)		
Accelerator Pedal	81—82	
Accelerator Pedal Bracket	81	
Accelerator Pedal Pad	81	
Accelerator Pedal Roller	81	
Accelerator Pedal Shaft	81	
Control Rods	81—82	
Intermediate Lever	81	
Throttle Return Spring	82	
Throttle Spindle Support Bracket	82	
 ACCELERATOR CONTROLS (L.H.D. STANDARD OR OVERDRIVE TRANSMISSION) Chassis No. 830001 to 831139, 837001 to 837627, 834001 to 835718		
Accelerator Fulcrum Lever	85—86	
Accelerator Pedal	85	
Accelerator Pedal Cross Shaft	85	
Accelerator Pedal Pad	86	
Accelerator Pedal Push Rod	85	
Control Rods	85—86	
Throttle Return Spring	86	
Throttle Spindle Support Bracket	86	
 ACCELERATOR CONTROLS (L.H.D. STANDARD OR OVERDRIVE TRANSMISSION) Chassis No. 831140 and subs., 837628 and subs., 835719 and subs.		
Accelerator Pedal	89—90	
Accelerator Pedal Shaft Bearing	89	
Accelerator Pedal Bracket	89	
Accelerator Pedal Cross Shaft	89	
Accelerator Pedal Pad	89	
Accelerator Pedal Roller	89	
Intermediate Lever	90	
Throttle Return Spring	90	
Throttle Spindle Support Bracket	90	
 ACCELERATOR CONTROLS (R.H.D. AUTOMATIC TRANSMISSION) Chassis No. 827001 to 827193, 824001 to 824584		
Accelerator Pedal	94—96	
Accelerator Pedal Bracket	94	
Accelerator Pedal Pad	94	
Accelerator Pedal Roller	94	
Accelerator Pedal Shaft	94	

Description	Page No.	Plate
ACCELERATOR CONTROLS (continued)		
Control Rods	94—95	
Kick Down Control Rod	96	
Kick Down Cross Shaft	95	
Kick Down Lever	95	
Throttle Return Spring	94	
Throttle Spindle Support Bracket	95	
 ACCELERATOR CONTROLS (R.H.D. AUTOMATIC TRANSMISSION) Chassis No. 820001 and subs., 827194 and subs., 824585 and subs.		
Accelerator Pedal	98—100	
Accelerator Pedal Bracket	98	
Accelerator Pedal Pad	98	
Accelerator Pedal Roller	98	
Accelerator Pedal Shaft	98	
Control Rods	98—99	
Kick Down Control Rod	100	
Kick Down Cross Shaft	100	
Throttle Return Spring	98	
Throttle Spindle Support Bracket	99	
 ACCELERATOR CONTROLS (L.H.D. AUTOMATIC TRANSMISSION) Chassis No. 830001 to 831139, 837001 to 837627, 834001 to 835718		
Accelerator Fulcrum Lever	102—104	
Accelerator Pedal	102	
Accelerator Pedal Cross Shaft	103	
Accelerator Pedal Pad	102	
Accelerator Pedal Push Rod	102	
Control Rods	102—104	
Kick Down Control Rods	103	
Kick Down Lever	103	
Kick Down Return Spring	104	
Throttle Return Spring	103	
Throttle Spindle Support Bracket	104	
 ACCELERATOR CONTROLS (L.H.D. AUTOMATIC TRANSMISSION) Chassis No. 831140 and subs., 837628 and subs., 835719 and subs.		
Accelerator Pedal	106—108	
Accelerator Pedal Bracket	106	
Accelerator Pedal Pad	106	
Accelerator Pedal Shaft	106	
Accelerator Pedal Shaft Bearing	106	
Control Rods	107—108	
Kick Down Control Rod	106—107	
Kick Down Return Spring	107	
Throttle Return Spring	108	
Throttle Spindle Support Bracket	108	
 ACCELERATOR CONTROLS (R.H.D. XK.150 'S')		
Accelerator Pedal	111—112	
Accelerator Pedal Bracket	111	
Accelerator Pedal Pad	111	
Accelerator Pedal Shaft	111	
Control Rods	111—112	
Throttle Slave Shafts	112	
Throttle Slave Shaft Levers	112	
 ACCELERATOR CONTROLS (L.H.D. XK.150 'S')		
Accelerator Pedal	114—116	
Accelerator Pedal Pad	114	
Accelerator Pedal Shaft	114	
Accelerator Pedal Shaft Bearing	114	
Control Rods	114—116	
Intermediate Lever	115	
Throttle Slave Shafts	115	
Throttle Slave Shaft Levers	115—116	

INDEX

Description	Page No.	Plate	Description	Page No.	Plate
CLUTCH UNIT (XK.150 3.4 Litre) ...	120	23	GEARBOX (STANDARD TRANSMISSION SHAVED GEARS) (continued)		
CLUTCH UNIT (XK.150 'S' and XK.150 3.8 Litre) ...	124	24	Mainshaft Bearing ...	145	28
CLUTCH CONTROLS ...	128—134	25	Mainshaft Gears ...	148	29
Clutch Fork ...	129	25	Operating Sleeves ...	148	29
Clutch Hose ...	133	25	Remote Control ...	145	
Clutch Housing ...	128	25	Reverse Gear ...	148	29
Clutch Housing Support Bracket ...	128	25	Reverse Slipper ...	148	29
Clutch Master Cylinder ...	131	25	Reverse Spindle ...	148	29
Clutch Master Cylinder Repair Kit ...	131		Speedometer Driven Gear ...	145	28
Clutch Operating Shaft ...	128	25	Speedometer Driving Gear ...	148	29
Clutch Pedal ...	129	25	Striking Rods ...	146	28
Clutch Pedal Bearing ...	129	25	Synchronising Sleeves ...	148	29
Clutch Pedal Pad ...	130	25	Top Cover ...	146	28
Clutch Pedal Return Spring ...	129	25			
Clutch Pedal Shaft ...	130	25	GEARBOX (STANDARD TRANSMISSION MOSS GEARS) ...	153—157	30—31
Clutch Pipes ...	132—133	25	Breather Plug ...	154	30
Slave Cylinder ...	134	25	Casing ...	153	30
Slave Cylinder Bracket ...	134	25	Change-Speed Forks ...	154	30
Slave Cylinder Repair Kit ...	134		Change-Speed Lever ...	155	30
			Change-Speed Lever Housing ...	155	30
GEARBOX (STANDARD TRANSMISSION GROUND GEARS) ...	137—141	26—27	Change-Speed Lever Knob ...	155	30
Breather Plug ...	138	26	Change-Speed Selector ...	154	30
Casing ...	137	26	Constant Pinion ...	156	31
Change-Speed Forks ...	138	26	Constant Pinion Bearing ...	153	30
Change-Speed Lever ...	139	26	Countershaft ...	157	31
Change-Speed Lever Housing ...	139	27	Countershaft Gear Unit ...	157	31
Change-Speed Lever Knob ...	139	26	Countershaft Thrust Washers ...	157	31
Change-Speed Selector ...	138	26	Drain Plug ...	153	30
Constant Pinion ...	140	27	Filler Plug ...	153	30
Constant Pinion Bearing ...	137	26	Mainshaft ...	156	31
Countershaft ...	141	27	Mainshaft Bearing ...	153	30
Countershaft Gears ...	141	27	Mainshaft Gears ...	156	31
Countershaft Thrust Washers ...	141	27	Operating Sleeves ...	156	31
Drain Plug ...	137	26	Rear End Cover ...	153	26
Filler Plug ...	137	26	Rear End Cover Oil Seal ...	137	26
Mainshaft ...	140	27	Remote Control ...	138	
Mainshaft Bearing ...	137	26	Reverse Gear ...	140	27
Mainshaft Gears ...	140	27	Reverse Slipper ...	140	27
Operating Sleeves ...	140	27	Reverse Spindle ...	140	27
Rear End Cover ...	137	26	Speedometer Driven Gear ...	137	26
Rear End Cover Oil Seal ...	137	26	Speedometer Driving Gear ...	140	27
Remote Control ...	138		Striking Rods ...	138	26
Reverse Gear ...	140	27	Synchronising Sleeves ...	140	27
Reverse Slipper ...	140	27	Top Cover ...	138	26
Reverse Spindle ...	140	27			
Speedometer Driven Gear ...	137	26	GEARBOX (OVERDRIVE TRANSMISSION, ELECTRICAL OPERATION) (GROUND GEARS) ...	162—165	32—33
Speedometer Driving Gear ...	140	27	Breather Plug ...	163	32
Striking Rods ...	138	26	Casing ...	162	32
Synchronising Sleeves ...	140	27	Change-Speed Forks ...	162	32
Top Cover ...	138	26	Change-Speed Lever ...	163—164	32
			Change-Speed Lever Housing ...	164	32
GEARBOX (STANDARD TRANSMISSION SHAVED GEARS) ...	145—149	28—29	Change-Speed Lever Knob ...	163—164	32
Breather Plug ...	146	28	Change-Speed Selector ...	162	32
Casing ...	145	28	Constant Pinion ...	165	33
Change-Speed Forks ...	146	28	Constant Pinion Bearing ...	162	32
Change-Speed Lever ...	147	28	Countershaft ...	165	33
Change-Speed Lever Housing ...	147	28	Countershaft Gears ...	165	33
Change-Speed Lever Knob ...	147	28	Countershaft Thrust Washers ...	165	33
Change-Speed Selector ...	146	28	Drain Plug ...	162	32
Constant Pinion ...	148	29	Filler Plug ...	162	32
Constant Pinion Bearing ...	145	28	Mainshaft ...	164	33
Countershaft ...	149	29	Mainshaft Bearing ...	162	32
Countershaft Gear Unit ...	149	29	Mainshaft Gears ...	164	33
Countershaft Thrust Washers ...	149	29	Operating Sleeves ...	164	33
Drain Plug ...	145	28	Remote Control ...	163	
Filler Plug ...	145	28	Reverse Gear ...	165	33
Mainshaft ...	148	29	Reverse Slipper ...	165	33
			Reverse Spindle ...	165	33
			Selector Lever ...	164	32
			Selector Lever Bushes ...	164	32
			Selector Lever Pivot Jaw ...	164	32
			Striking Rods ...	162	32
			Synchronising Sleeves ...	164	33
			Top Cover ...	163	32

INDEX

Description	Page No.	Plate
GEARBOX (OVERDRIVE TRANSMISSION, ELECTRICAL OPERATION) (SHAVED GEARS)	168—171	34—35
Breather Plug	169	34
Casing	168	34
Change-Speed Forks	168	34
Change-Speed Lever	169—170	34
Change-Speed Lever Housing	170	34
Change-Speed Lever Knob	169—170	34
Change-Speed Selector	168	34
Constant Pinion	171	35
Constant Pinion Bearing	168	34
Countershaft	171	35
Countershaft Gear Unit	171	35
Countershaft Thrust Washers	171	35
Drain Plug	168	34
Filler Plug	168	34
Mainshaft	170	35
Mainshaft Bearing	168	34
Mainshaft Gears	170	35
Operating Sleeves	170	35
Remote Control	169	35
Reverse Gear	171	35
Reverse Slipper	171	35
Reverse Spindle	171	35
Selector Lever	170	34
Selector Lever Bushes	170	34
Selector Lever Pivot Jaw	170	34
Striking Rods	168	34
Synchronising Sleeves	170	35
Top Cover	169	34

GEARBOX (OVERDRIVE TRANSMISSION, MANUAL OPERATION) (SHAVED GEARS)	175—179	36—37
Breather Plug	176	36
Casing	175	36
Change-Speed Forks	175	36
Change-Speed Lever	176	36
Change-Speed Lever Housing	176	36
Change-Speed Lever Knob	176	36
Change-Speed Selector	175	36
Constant Pinion	178	37
Constant Pinion Bearing	175	36
Countershaft	178	37
Countershaft Gear Unit	179	37
Countershaft Thrust Washers	179	37
Drain Plug	175	36
Filler Plug	175	36
Mainshaft	178	37
Mainshaft Bearing	175	36
Mainshaft Gears	178	37
Manual Operating Lever	177	36
Operating Sleeves	178	37
Remote Control	176	37
Reverse Gear	178	37
Reverse Slipper	178	37
Reverse Spindle	178	37
Selector Lever	176	36
Selector Lever Bushes	177	36
Selector Lever Pivot Jaw	177	36
Striking Rods	175	36
Synchronising Sleeves	178	37
Toggle Spring	177	36
Toggle Spring Stay	177	36
Top Cover	176	36

AUTOMATIC TRANSMISSION UNIT	183—193	38—41
Accelerator Detent Plunger	190	41
Brake Band (Forward)	185	38
Brake Band (Reverse)	185	38
Clutch Friction Discs	187	39
Clutch Plates	187	39
Clutch Retractor Springs	187	39
Collector Ring	186	39
Collector Ring Gasket	186	39
Converter	183	38

AUTOMATIC TRANSMISSION UNIT (continued)		
Converter Shuttle Valves	189	40
Detent Piston (Governor Control)	190	41
Dipstick	183	38
Extension Case	190	41
Extension Case Gasket	190	41
Extension Case Oil Seal	190	41
Extension Detent Cam	190	41
Extension Valve and Fork	190	41
Forward Gear Free Wheel Unit	188	39
Front Planetary Carrier	187	39
Front Planetary Carrier Thrust Washer	187	39
Front Pump and Collector Ring	185	39
Front Pump Body	186	39
Front Pump 'O' Ring	185	39
Front Pump Oil Seal	186	39
Front Pump Thrust Washers	186	39
Front Ring Gear	187	39
Front Ring Gear Piston Rings	187	39
Front Sun Gear	187	39
Front Sun Gear Piston Rings	187	39
Front Sun Gear Piston Seal	187	39
Front Sun Gear Thrust Washer	187	39
Gaskets Set	193	41
Governor Assembly	190	41
Governor Drive Gear on Mainshaft	188	39
Governor Driven Gear in Rear Pump	191	41
Governor Return Spring	190	41
Governor Shaft	190	41
Intermediate Speed Hold Bellows	192	41
Intermediate Speed Hold Outer Tube	192	41
Intermediate Speed Hold Seal	192	41
Intermediate Speed Hold Solenoid	193	41
Intermediate Speed Hold Spring	192	41
Mainshaft	186	39
Mainshaft Bearing	188	39
Oil Filter	189	40
Oil Filter Retainer	189	40
Oil Sump	189	40
Oil Sump Gasket	189	40
Parking Brake Operating Rod	184	38
Parking Brake Piston	191	41
Parking Gear on Mainshaft	188	39
Parking Pawl and Toggle	191	41
Rear Planetary Carrier	186	39
Rear Planetary Carrier Piston Ring	186	39
Rear Planetary Carrier Thrust Washer	186	39
Rear Pump	191	41
Rear Pump Gaskets	191	41
Rear Pump Gears	191	41
Rear Ring Gear	187	39
Rear Ring Gear 'O' Ring	187	39
Rear Ring Gear Piston Ring	187	39
Rear Sun Gear	187	39
Rear Sun Gear Washers	187	39
Relief Valve	189	40
Relief Valve Retainers	189	40
Reverse Gear Free Wheel Unit	188	39
Reverse Servo Cylinder	184	38
Reverse Servo Gaskets	184	38
Seals Kit	193	41
Selector Control Oil Seal	183	38
Selector Control Shaft	183	38
Selector Lever	183	38
Servo Cylinder Plate	184—185	38
Servo Piston (Inner)	184	38
Servo Piston (Outer)	184	38
Servo Piston Seal	184	38
Speedometer Drive Gear	191	41
Speedometer Driven Gear	192	41
Speedometer Gear Gasket	191	41
Speedometer Gear Housing	191	41
Toggle Arm Lever	183	38
Transmission Case	183	38
Universal Joint Flange	188	39
Universal Joint Flange Nut	188	39
Valve Block	188	40
Valve Block Base Plate	188	40

INDEX

Description	Page No.	Plate	Description	Page No.	Plate
AUTOMATIC TRANSMISSION UNIT			OVERDRIVE UNIT (XK.150 3.4 Litre)		
<i>(continued)</i>			<i>(continued)</i>		
Valve Block Gaskets	188	40	Spacing Washer (Rear Bearing)	208	43
Valve Block Manifold Plate	189	40	Speedometer Drive Assembly	208	43
AUTOMATIC TRANSMISSION MOUNTING DETAILS			Speedometer Pilot Bush	208	43
Converter Drive Plate	198—201		Sun-Wheel	207	43
Converter Housing	199		Uni-Directional Clutch	208	43
Converter Housing Covers	198		Uni-Directional Clutch Inner Member	208	43
Converter Housing Stoneguard	198		Uni-Directional Clutch Rollers	208	43
Converter Housing Stoneguard Clips	198		Uni-Directional Clutch Spring	208	43
Converter Reinforcement Plate	199		Uni-Directional Clutch Thrust Washer	208	43
Front Engine Mounting	199		OVERDRIVE UNIT (XK.150 3.8 Litre) ...		
Front Engine Mounting Bracket	199		OVERDRIVE UNIT (XK.150 'S' 3.4 Litre)		
Rear Engine Mounting	200		OVERDRIVE UNIT (MANUAL) (XK.150 'S' 3.8 Litre)		
Rear Engine Mounting Bracket	200		Accumulator Piston	214—219	44—45
Throttle Switch	201		Accumulator Piston Housing	215	44
Throttle Switch Bracket	200		Accumulator Piston Housing 'O' Rings	215	44
Throttle Switch Lever	201		Accumulator Piston Rings	215	44
OVERDRIVE UNIT (XK.150 3.4 Litre) 204—209			Accumulator Piston Spring	216	44
Accumulator Piston	205	42	Accumulator Spacing Tube	216	44
Accumulator Piston Housing	205	42	Annulus	217	45
Accumulator Piston Housing 'O' Rings	205	42	Annulus Bearing	218	45
Accumulator Piston Rings	205	42	Annulus Flange	219	45
Accumulator Piston Spring	206	42	Annulus Spacing Washers	218	45
Accumulator Spacing Tube	206	42	Annulus Thrust Washers	217	45
Annulus	207	43	Brake Ring	217	45
Annulus Bearing	208	43	Breather	214	44
Annulus Flange	209	43	Bridge Piece	215	44
Annulus Spacing Washers	208	43	Cam	215	44
Annulus Thrust Washers	207	43	Circlip (Mainshaft)	214	44
Brake Ring	207	43	Clutch Bearing	217	45
Breather	204	42	Clutch Bearing Circlip	217	45
Bridge Piece	205	42	Clutch Sliding Member	217	45
Cam	205	42	Clutch Springs	217	45
Circlip (Mainshaft)	204	42	Clutch Thrust Ring	217	45
Clutch Bearing	207	43	Collar (Operating Valve Shaft)	214	44
Clutch Bearing Circlip	207	43	Drain Plug	215	44
Clutch Sliding Member	207	43	Drain Plug Washer	215	44
Clutch Springs	207	43	Extension	214	44
Clutch Thrust Ring	206	43	Extension Gasket	214	44
Collar (Operating Valve Shaft)	204	42	Flange	219	45
Drain Plug	205	42	Front Casing	214	44
Drain Plug Washer	205	42	Front Casing Studs	214	44
Extension	204	42	Non-Return Valve	214	44
Extension Gasket	204	42	Oil Filter	215	44
Flange	209	43	Operating Piston	215	44
Front Casing	204	42	Operating Piston Rings	215	44
Front Casing Studs	204	42	Operating Valve	214	44
Non-Return Valve	204	42	Operating Valve Ball	214	44
Oil Filter	205	42	Operating Valve Lever	214	44
Operating Piston	205	42	Operating Valve Plug	214	44
Operating Piston Rings	205	42	Operating Valve Plunger	214	44
Operating Valve	204	42	Operating Valve Shaft	214	44
Operating Valve Ball	204	42	Operating Valve Spring	214	44
Operating Valve Lever	204	42	Planetary Carrier	217	45
Operating Valve Plug	204	42	Pump Body	214	44
Operating Valve Plunger	204	42	Pump Plug	214	44
Operating Valve Shaft	204	42	Pump Plunger	214	44
Operating Valve Spring	204	42	Pump Spring	214	44
Planetary Carrier	207	43	Rear Casing	218	45
Pump Body	204	42	Rear Casing Oil Seal	219	45
Pump Plunger	204	42	Rear Casing Studs	218	45
Pump Spring	204	42	Shaft (Operating Valve)	214	44
Rear Casing	208	43	Selector Lever	216	44
Rear Casing Oil Seal	209	43	Selector Lever Bracket	216	44
Rear Casing Studs	208	43	Selector Lever Bracket Gasket	216	44
Shaft (Operating Valve)	204	42	Selector Lever Cover Plates	216	44
Solenoid	206	42	Spacing Washer (Rear Bearing)	218	45
Solenoid Bracket	206	42	Speedometer Drive Assembly	218	45
Solenoid Bracket Gasket	206	42			
Solenoid Cover Plate	206	42			
Solenoid Lever	206	42			

INDEX

Description	Page No.	Plate	Description	Page No.	Plate
OVERDRIVE UNIT (MANUAL) (XK.150 'S' 3.8 Litre) (continued)			REAR AXLE (POWR LOK STANDARD OR AUTOMATIC TRANSMISSION) ...248—252	51	
Speedometer Pilot Bush	218	45	Brake Caliper Adaptor Plates	250—251	
Sun-wheel	217	45	Crown Wheel and Pinion	248	51
Uni-Directional Clutch	218	45	Crown Wheel Lock Strap	248	51
Uni-Directional Clutch Inner Member	218	45	Differential Adjusting Shims	248	51
Uni-Directional Clutch Rollers	218	45	Differential Bearings (Differential Case)	248	51
Uni-Directional Clutch Spring	218	45	Differential Bearing (Inner end of Pinion)	248	51
Uni-Directional Clutch Thrust Washer	218	45	Differential Bearing (Outer end of Pinion)	248	51
			Differential Bolts	248	51
			Differential Case	249—250	
PROPELLER SHAFT (STANDARD TRANSMISSION)	224	46	Differential Clutch Friction Disc	249	51
			Differential Clutch Friction Plate	249	51
PROPELLER SHAFT (AUTOMATIC TRANSMISSION)	228	47	Differential Pinion Mate Gears	249	51
			Differential Side Gears	249	51
PROPELLER SHAFT (OVERDRIVE UNIT)	232	48	Differential Side Gear Ring	249	51
			Hub	251	
			Hub Bearings	250	51
			Hub Bearing Oil Seal	251	51
			Hub Bearing Shims	251	51
			Hub Caps	252	
			Oil Drain Plug	248	51
			Oil Filler Plug	248	51
			Pinion Companion Flange	250	51
			Pinion Oil Seal	248	51
			Rear Axle Casing	248	51
			Rear Axle Shafts	250	51
			Rear Axle Shaft Oil Seal	250	51
REAR AXLE (STANDARD OR AUTOMATIC TRANSMISSION)	235—238	49	REAR AXLE (POWR LOK OVERDRIVE TRANSMISSION)	255—258	52
Crown Wheel and Pinion	235	49	Brake Caliper Adaptor Plates	256—257	
Crown Wheel Lock Strap	235	49	Crown Wheel and Pinion	255	52
Differential Adjusting Shims	235	49	Crown Wheel Lock Strap	255	52
Differential Bearing (Differential Case)	235	49	Differential Adjusting Shims	255	52
Differential Bearing (Inner end of Pinion)	235	49	Differential Bearing (Differential Case)	255	52
Differential Bearing (Outer end of Pinion)	235	49	Differential Bearing (Inner end of Pinion)	255	52
Differential Bolts	235	49	Differential Bearing (Outer end of Pinion)	255	52
Differential Case	236	49	Differential Bolts	256	52
Differential Pinion Mate Gears	236	49	Differential Case	256	52
Differential Side Gears	236	49	Differential Clutch Friction Disc	256	52
Hub	237		Differential Clutch Friction Plate	256	52
Hub Bearings	236	49	Differential Pinion Mate Gears	256	52
Hub Bearing Oil Seal	237	49	Differential Side Gears	256	52
Hub Bearing Shims	237	49	Differential Side Gear Ring	256	52
Hub Caps	238		Hub	257	
Oil Drain Plug	235	49	Hub Bearings	256	52
Oil Filler Plug	235	49	Hub Bearing Oil Seal	257	52
Pinion Companion Flange	236	49	Hub Bearing Shims	257	52
Pinion Oil Seal	235	49	Hub Caps	257—258	
Rear Axle Casing	235	49	Oil Drain Plug	255	52
Rear Axle Shafts	236	49	Oil Filler Plug	255	52
Rear Axle Shaft Oil Seal	236	49	Pinion Companion Flange	256	52
			Pinion Oil Seal	255	52
			Rear Axle Casing	255	52
			Rear Axle Shafts	256	52
			Rear Axle Shaft Oil Seal	256	52
REAR AXLE (OVERDRIVE TRANSMISSION)	242—244	50	FRONT SUSPENSION	261—266	53—55
Crown Wheel and Pinion	242	50	Anti-Roll Bar	263	55
Crown Wheel Lock Strap	242	50	Anti-Roll Bar Bush	263	55
Differential Adjusting Shims	242	50	Anti-Roll Bar Link	263	55
Differential Bearing (Differential Case)	242	50	Anti-Roll Bar Link Bush	263	55
Differential Bearing (Inner end of Pinion)	242	50	Camber Shims	263	
Differential Bearing (Outer end of Pinion)	242	50	Castor Shims	261	53
Differential Bolts	242	50	Front Hub	262	52
Differential Case	242	50	Front Hub Cap	265	
Differential Pinion Mate Gears	242	50	Lower Wishbone	262	54
Differential Side Gears	242	50	Lower Wishbone Ball Pin	262	54
Hubs	244		Lower Wishbone Bush	262	54
Hub Bearing	243	50	Lower Wishbone Gaiter	262	54
Hub Bearing Oil Seal	243	50	Lower Wishbone Shaft	262	54
Hub Bearing Shims	243	50	Stub Axle Bearings	262	54
Hub Caps	244		Stub Axle Carrier	261	53
Oil Drain Plug	242	50	Stub Axle Grease Retainer	261	54
Oil Filler Plug	242	50			
Pinion Companion Flange	243	50			
Pinion Oil Seal	242	50			
Rear Axle Casing	242	50			
Rear Axle Shaft	243	50			
Rear Axle Shaft Oil Seal	243	50			

INDEX

Description	Page No.	Plate	Description	Page No.	Plate
FRONT SUSPENSION (continued)			REAR BRAKES (XK.150 SQUARE PADS) (continued)		
Stub Axle Shaft	261	54	Piston	284	59
Tie Rod Levers	261	53	Repair Kit (Cylinders)	284	
Torsion Bars	264	55	Retraction Plates	285	59
Torsion Bar Adjusting Levers	265	55	Retractor Bush	284	59
Upper Wishbone	263		FRONT BRAKES (XK.150 'S' SQUARE PADS)		
Upper Wishbone Ball Joints	261	53	290—292	60
Upper Wishbone Bush	261	53	Bleed Screw and Ball	290	60
Upper Wishbone Shaft	261	53	Bridge Pipe	290	60
ROAD WHEELS 270—271			Caliper	290	60
FRONT BRAKES (XK.150 ROUND PADS)			Caliper Shims	290	
Bleed Screw and Ball	272	56	Disc	292	60
Bridge Pipe	272	56	Friction Pad	290	60
Caliper	272	56	Hubs	292	
Caliper Shims	272	56	Piston	291	60
Friction Pad	272	56	Repair Kit	291	
Friction Pad Cement	272		REAR BRAKES (XK.150 'S' SQUARE PADS)		
Piston	272	56	294—298	61
Repair Kit	272		Adaptor Plates	297	61
REAR BRAKES (XK.150 ROUND PADS)			Bleed Screw and Ball	294—295	61
Adaptor Plates	274—276	57	Bridge Pipe	294—295	61
Bleed Screw and Ball	274	57	Caliper	294—295	61
Bridge Pipe	274	57	Caliper Shims	295	61
Caliper	274	57	Cylinders	294—295	61
Caliper Shims	274	57	Disc	298	61
Cylinder	274	57	Dust Seal	296	
Disc	276	57	Friction Pad	294—295	61
Friction Pad	274	57	Handbrake	294—297	61
Handbrake	275—276	57	Handbrake Operating Lever	294—297	61
Handbrake Operating Lever	275	57	Handbrake Pad Carriers	294—297	61
Handbrake Pad Carriers	275	57	Handbrake Repair Kit	297	
Handbrake Repair Kit	276		Hubs	298	
Hubs	276		Piston	294—296	61
Repair Kit (Cylinders)	274	57	Repair Kit (Cylinders)	296	
Retractor Pin and Bush	274	57	Retraction Plates	297	61
Piston	274	57	Retractor Bush	294—296	61
FRONT BRAKES (XK.150 SQUARE PADS)			BRAKE VACUUM SERVO		
... ..	279—280	58	301—302	62
Bleed Screw and Ball	279	58	Repair Kits	302	
Bridge Pipe	279	58	RESERVAC		
Caliper	279	58	305—306	63
Caliper Shims	279	58	BRAKE CONTROLS		
Disc	280	58	Brake Pedal	308—314	64
Friction Pad	280	58	Brake Pedal Pads	308	64
Hubs	280		Brake Pedal Return Spring	308	64
Piston	279	58	Brake Pedal Shaft	309	64
Repair Kit	280		Handbrake Cables	312—313	64
REAR BRAKES (XK.150 SQUARE PADS)			Handbrake Cable Abutment	313—314	64
Adaptor Plates	283—286	59	Handbrake Compensator Link	313	64
Bleed Screw and Ball	285—286	59	Handbrake Compensator Rod	313	64
Bridge Pipes	283	59	Handbrake Connecting Link	310—312	64
Caliper	283	59	Handbrake Lever	310—311	64
Caliper Shims	283	59	HYDRAULIC BRAKE PIPES (R.H. DRIVE)		
Cylinders	283	59	316—322	65
Disc	286	59	Anti-Creep Solenoid Valve	321	
Dust Seal	284		Brake Fluid Level Indicator	317	65
Friction Pad	283	59	Brake Fluid Supply Tank	317	65
Handbrake	284—285	59	Brake Hose (Front)	320	65
Handbrake Operating Lever	285	59	Brake Hose (Rear)	322	65
Handbrake Pad Carriers	284—285	59	Brake Master Cylinder	316	65
Handbrake Repair Kit	285		Brake Master Cylinder Repair Kit	316	
Hubs	286		Brake Union (3-Way)	322	65
FRONT BRAKES (XK.150 SQUARE PADS)			Brake Union (5-Way)	320	65
... ..	279—280	58	Brake Vacuum Servo Air Cleaner	319	
Bleed Screw and Ball	279	58	Brake Vacuum Servo Fixings	319	
Bridge Pipe	279	58	REAR BRAKES (XK.150 SQUARE PADS)		
Caliper	279	58	283—286	59
Caliper Shims	279	58	Bleed Screw and Ball	283	59
Disc	280	58	Bridge Pipes	283	59
Friction Pad	280	58	Caliper	283	59
Hubs	280		Caliper Shims	283	59
Piston	279	58	Cylinders	283	59
Repair Kit	280		Disc	286	59
REAR BRAKES (XK.150 SQUARE PADS)			Dust Seal	284	
Adaptor Plates	285—286	59	Friction Pad	283	59
Bleed Screw and Ball	283	59	Handbrake	284—285	59
Bridge Pipes	283	59	Handbrake Operating Lever	285	59
Caliper	283	59	Handbrake Pad Carriers	284—285	59
Caliper Shims	283	59	Handbrake Repair Kit	285	
Cylinders	283	59	Hubs	286	
Disc	286	59	FRONT BRAKES (XK.150 SQUARE PADS)		
Dust Seal	284		279—280	58
Friction Pad	283	59	Bleed Screw and Ball	279	58
Handbrake	284—285	59	Bridge Pipe	279	58
Handbrake Operating Lever	285	59	Caliper	279	58
Handbrake Pad Carriers	284—285	59	Caliper Shims	279	58
Handbrake Repair Kit	285		Disc	280	58
Hubs	286		Friction Pad	280	58

INDEX

Description	Page No.	Plate	Description	Page No.	Plate
HYDRAULIC BRAKE PIPES (L.H. DRIVE)	323—330	65	FUEL SYSTEM (XK.150)	361—364	73
Anti-Creep Solenoid Valve	328—329		Petrol Filter	364	73
Brake Fluid Level Indicator	324	65	Petrol Pipes	362—364	73
Brake Fluid Supply Tank	324	65	Petrol Pump	363	73
Brake Hose (Front)	327	65	Petrol Tank	361	73
Brake Hose (Rear)	329	65	Petrol Tank Element Unit	361	73
Brake Master Cylinder	323	65	Petrol Tank Filter	361	73
Brake Master Cylinder Repair Kit	323		Petrol Tank Mounting Pads	361—362	73
Brake Union (3-Way)	329	65			
Brake Union (5-Way)	327	65			
Brake Vacuum Servo Air Cleaner	326				
Brake Vacuum Servo Fixings	326				
STEERING UNIT	332—334	66	FUEL SYSTEM (XK.150 'S')	368—370	74
Bellows	332	66	Petrol Filter	370	74
Inner Ball Joint	333	66	Petrol Pipes	369—370	74
Inner Ball Joint Shims	333	66	Petrol Pumps	370	74
Mounting	333	66	Petrol Tank	368	74
Mounting Platform	334	66	Petrol Tank Element Unit	368	74
Mounting Shims	333	66	Petrol Tank Filter	368	74
Pinion	332	66	Petrol Tank Mounting Pads	368—369	74
Pinion Bearing	332	66			
Pinion Housing	332	66	CHASSIS	374—378	75
Pinion Oil Seal	332	66	Bump Stops (Front)	376	75
Pinion Oil Seal Retainers	332	66	Bump Stops (Rear)	376	75
Rack	332	66	Chassis Frame	374—375	75
Rack Friction Plunger	332	66	Rear Road Springs	377	75
Rack Tubes	332	66	Rear Road Spring Interleaf	377	
Tie Rods	333	66	Rear Road Spring Plate	378	75
Tie Rod Ball Joints	333	66	Rear Road Spring Shackles	377	75
Tie Rod Gaiters	333	66	Rear Road Spring 'U' Bolts	377	75
			Shock Absorbers (Front)	375	75
			Shock Absorbers (Rear)	376	75
STEERING COLUMN	337—340	67	TOOL KIT	380	
Horn Contacts	338	67			
Horn Slip Ring	338	67			
Inner Column	337	67			
Lower Column	340	67			
Steering Wheel	339	67	ELECTRICAL EQUIPMENT (XK.150 STANDARD TRANSMISSION)	381—407	76—77
Steering Wheel Locknut	337	67	Ammeter	386—387	76
Steering Wheel Split Cone	337	67	Battery	402	
Upper Column	337	67	Battery Cables	402	
			Body Harness	404	
			Cables	405	
			Cable Clips	407	
			Cable Connectors	403	
			Cable Sleeves	406	
HAND CONTROL (AUTOMATIC TRANSMISSION)	343—344	68	Chassis Harness	403	
			Cigar Lighter	391	76
			Cigar Lighter Element	391	
			Control Box	385	76
			Dipper Switch	393	77
COOLING SYSTEM	347—348	69	Direction Indicator Switch	399	77
Radiator Block	347	69	Distributor	383—384	76
Radiator Cowl	347	69	Distributor Bearings	383	
Radiator Drain Tap	348	69	Distributor Brush and Spring	383	76
Radiator Filler Cap	347	69	Distributor Cap	383	76
Radiator Hoses	348	69	Distributor Condenser	383	76
Radiator Overflow Pipe	348	69	Distributor Contacts	383	76
			Distributor Driving Dog	383	
			Distributor Rotor Arm	383	76
EXHAUST SYSTEM (STANDARD OR OVERDRIVE SINGLE SILENCER)	350	70	Distributor Suction Pipe	384	
			Distributor Vacuum Unit	383—384	
			Dynamo	381	76
			Dynamo Armature	381	
			Dynamo Bearings	381	
			Dynamo Brushes	381	
			Dynamo Field Coil	381	
EXHAUST SYSTEM (STANDARD OR OVERDRIVE TWIN SILENCER)	353—354	71	Dynamo Pulley	381	76
			Earth Cables	405	
			Flasher Unit	396	77
			Flashing Indicator Lamps	395—396	
			Fuse Box	385	76
EXHAUST SYSTEM (AUTOMATIC TRANSMISSION)	357—358	72	Fuse Box Cover	385	76

INDEX

(xiii)