



JAGUAR

XK.140

SPARE PARTS CATALOGUE

OPEN TWO-SEATER FIXED HEAD COUPE
DROP HEAD COUPE

ENGINE NUMBERS

ALL MODELS - - - - - - - - G.1001 ONWARDS

NOTE : Suffix /7 or /8 to Engine Number denotes Compression Ratio.
Suffix "S" to Engine Number indicates that the Engine is fitted with a "C" type Cylinder Head.

CHASSIS NUMBERS

OPEN TWO-SEATER	-	RIGHT-HAND DRIVE	-	-	-	800001 ONWARDS
OPEN TWO-SEATER	-	LEFT-HAND DRIVE	-	-	-	810001 ONWARDS
FIXED HEAD COUPE	-	RIGHT-HAND DRIVE	-	-	-	804001 ONWARDS
FIXED HEAD COUPE	-	LEFT-HAND DRIVE	-	-	-	814001 ONWARDS
DROP HEAD COUPE	-	RIGHT-HAND DRIVE	-	-	-	807001 ONWARDS
DROP HEAD COUPE	-	LEFT-HAND DRIVE	-	-	-	817001 ONWARDS

NOTE : Prefix "A" to Chassis Number denotes a Special Equipment Model with Standard Cylinder Head.
Prefix "S" to Chassis Number denotes a Special Equipment Model with "C" type Cylinder Head.

JAGUAR CARS LIMITED, COVENTRY, ENGLAND

Telephone :
Coventry 62677 (P.B.X.)

Telegraphic Address :
"JAGUAR" COVENTRY

Code :
Bentley's 2nd

DIRECTORS

WILLIAM LYONS, CHAIRMAN AND MANAGING DIRECTOR
A. WHITTAKER, GENERAL MANAGER

E. F. HUCKVALE, F.C.C.S., SECRETARY
W. M. HEYNES, M.I.(MECH.)E.(A.D.), M.S.A.E.

INTERPRETATION OF CATALOGUE

Attention is drawn to the layout of this Catalogue. It will be observed that the heading of each assembly is printed in **BOLD BLOCK LETTERS**, whilst the spares relevant to each assembly are printed in small type and inset to the right.

The fact that certain items (printed in small type) are not "inset" indicates that they do not form part of any assembly and must, therefore, be ordered as individual items.

ILLUSTRATIONS

To aid identification of spares, "exploded" illustrations are incorporated in this catalogue.

These illustrations may be used in the following manner :—

- (A) If a Front Engine Mounting is required, the index shows that the details for this item are printed on page 5 and that it is illustrated on plate A. Turning to page 5, the necessary information for the ordering of the part is given, whilst the column headed "Plate No." indicates that reference to item No. 70 on plate A will give a photographic view of the component required.
- (B) The details for each illustrated item are printed in the script in numerical "plate number" order. An item may therefore be first identified photographically. For example, if a Seal is required for the Water Pump, a picture of the part may be found on plate E, together with its plate reference number. It is now an easy matter to find plate number "E.6" in the script and the part number and technical description are at once apparent.

ORDERING

Customers are advised to make themselves familiar with the method of ordering spare parts in accordance with the explanatory notes which follow.

INSTRUCTIONS FOR ORDERING SPARE PARTS

To avoid delay through inaccurate interpretation, it is of great importance that the information detailed in the following paragraphs be strictly adhered to when placing orders.

CAR TYPE

Always quote the engine and chassis numbers except when Stock Orders are placed, in which case the Year and Model must be indicated.

If Gearbox components are required it is necessary to quote on the order the serial number of the Gearbox, together with any prefix or suffix letters which may be indicated.

The Engine, Chassis and Gearbox numbers are stamped on a brass plate which is fitted to the left-hand side of the scuttle under the bonnet.

DETAILS OF PARTS REQUIRED

When ordering, the most complete information should be given to enable us to deal with your requirements expeditiously and to minimise delay in the despatch of the goods. Therefore we strongly recommend that the following procedure be adopted :—

- (1) Identify part with technical description in catalogue.
- (2) On order, quote (a) part number, (b) technical description.

Note : In no case should the illustration plate number be given.

- (3) If doubt exists as to the part number or technical description, a dimensioned sketch will assist in the interpretation of the order, or, alternatively, the old part should accompany the order as a pattern. When patterns are sent, it is **most important** that they be labelled, indicating the name and address of the sender, together with any reference such as order number, etc. Patterns will not be returned unless instructions to that effect accompany the order. In the absence of such instructions, patterns will be scrapped after retention for a period of ONE WEEK.
- (4) To order in "sets" is misleading. Please, therefore, **state the specific quantity required.**

SPECIAL ATTENTION

Particular attention is drawn to the fact that when such items as wings, doors, door glasses, etc., are required, care should be taken to indicate whether they are located on the left-hand or right-hand side of the car. The position is determined by the driver's own left or right hand when seated in the car.

Orders for any coloured parts such as carpets, casings, etc., should clearly state the precise colour required.

DESPATCH INSTRUCTIONS

The full address of the destination to which the goods are to be sent, together with that of the customer, should be clearly defined.

Whilst every effort will be made to observe customers' wishes as to the mode of transport, it is the normal custom to utilize the quickest possible method, whether it be post, passenger train or road transport, this being dependent upon the size and weight of the package and the destination.

PRICES

Current retail prices shown in the Jaguar Master Parts Price List are subject to alteration without notice, and are for delivery at Works. Postage, carriage and packing will be charged extra.

DAMAGE BY FIRE OR ACCIDENT

Whilst every precaution is taken, we do not accept liability for damage which may be caused by fire to any motor car or part thereof entrusted to us for any purpose whatsoever. Nor is liability accepted for accidental damage.

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
CYLINDER BLOCK	1-12	A-E	CYLINDER HEAD (continued)		
Cap Screws (Sealing Rings)	1	A	Camshaft Cover Filler Cap	16	F
Connecting Rod... ..	2	A	Camshaft Cover Gaskets	16	F
Connecting Rod Bearings (Big End)	2	A	Camshaft Cover Sealing Plug	17	F
Connecting Rod Bearings (Small End)	2	A	Camshaft Ring Dowels	13	F
Connecting Rod Bolts	2	A	Camshaft Studs	14	F
Crankshaft	2	A	Conduit (High Tension Leads)	20	F
Crankshaft Bearings	2	A	Cylinder Head Gasket	13	F
Crankshaft Bush... ..	2	A	Cylinder Head Oil Pipe	17	F
Crankshaft Damper	1	A	Engine Decarbonising Gaskets	14	F
Crankshaft Damper Cone	1	A	Exhaust Manifolds	18	F
Crankshaft Oil Pump Gear	2	A	Exhaust Manifold Gaskets	18	F
Crankshaft Oil Thrower	2	A	Exhaust Manifold Studs	13	F
Crankshaft Pulley	1	A	Front Cover	17	F
Crankshaft Thrust Washers	2	A	High Tension Leads	20	
Crankshaft Timing Gear	2	A	Inlet Manifold	18	F
Dynamo Attachment Bracket	1	A	Inlet Manifold Gaskets	18	F
Engine Overhaul Gaskets	6		Inlet Manifold Studs	14	F
Flywheel	2	A	Rev. Counter Adaptor	17	F
Flywheel Dowels	2	A	Rev. Counter Adaptor Oil Seal	16	F
Flywheel Lockplate	2	A	Rev. Counter Adaptor Oil Thrower	16	F
Front Engine Mounting	5	A	Rev. Counter Adaptor Shaft	16	F
Front Engine Mounting Brackets	5	A	Sparkling Plugs	19	F
Heater Pipes	12	E	Starting Pipe	19	F
Oil Cleaner	9	D	Thermostat	18-19	F
Oil Cleaner Element	9	D	Valves	14	F
Oil Cleaner Gasket	10	D	Valve Adjusting Pads	15	F
Oil Cleaner Relief Valve	9-10	D	Valve Collars	15	F
Oil Pipes	4	A	Valve Cotters	15	F
Oil Pump... ..	7-8	B-C	Valve Guides	13	F
Oil Pump Coupling Shaft	7-8	B-C	Valve Inserts	13	F
Oil Pump Delivery Pipe	7-8	B-C	Valve Springs	14-15	F
Oil Pump Drive Shaft	7-8	B-C	Valve Spring Seats	15	F
Oil Pump Gasket	7-8	B-C	Valve Tappets	15	F
Oil Pump Gears... ..	7-8	B-C	Valve Tappet Guides	13	F
Oil Pump Spindle	7-8	B-C	Water Outlet Pipe	18	F
Oil Sump... ..	3	A			
Oil Sump Deflector	3				
Oil Sump Dipstick	4	A			
Oil Sump Drain Plug	3	A			
Oil Sump Filter	4	A			
Oil Sump Gasket	3	A			
Oil Sump Ignition Timing Pointer	4	A			
Oil Sump Seals	3	A			
Pistons	3	A			
Piston Rings	3	A			
Rear Cover	1	A			
Rear Engine Mounting	6	A			
Rear Engine Mounting Brackets	5	A			
Ring Dowels (Rear Cover)	1	A			
Sealing Ring (Rear Cover)	1	A			
Studs (Cylinder Head)	1	A			
Water Drain Tap	1	A			
Water Pump	11	E			
Water Pump Bearing	11	E			
Water Pump Elbow	11	E			
Water Pump Fan	11	E			
Water Pump Fan Belt	11	E			
Water Pump Fan Pulley	11	E			
Water Pump Fan Pulley Carrier	11	E			
Water Pump Gasket	11	E			
Water Pump Hoses	11-12	E			
Water Pump Impeller	11	E			
Water Pump Seal	11	E			
Water Pump Spindle	11	E			
Water Pump Thrower	11	E			
CYLINDER HEAD	13-20	F	TIMING GEAR	21-24	G
Anti-Blow-Back Valve	19	F	Adjusting Plate	21	G
Anti-Blow-Back Valve Spring	19	F	Camshaft Sprockets	21	G
Breather Housing	17	F	Chain Tensioner	24	G
Breather Pipe (Flexible)	17	F	Chain Tensioner Bracket	24	G
Breather Pipe (Tube)	17	F	Chain Tensioner Spring	24	G
Camshafts	15-16	F	Idle Sprocket	21	G
Camshaft Bearings	16	F	Idle Sprocket Eccentric Shaft	21	G
Camshaft Covers	16	F	Intermediate Sprocket (20 Teeth)	22	G
Camshaft Cover Badge	16	F	Intermediate Sprocket (28 Teeth)	22	G
			Intermediate Sprocket Shaft	22	G
			Micro Adjustment Plate	22	G
			Mounting Brackets	21	G
			Oil Spray Bracket	23	G
			Timing Chains	22-23	G
			Timing Cover	24	G
			Timing Cover Gasket	24	G
			Timing Cover Oil Seal	24	G
			Vibration Damper	23	G
			Vibration Damper Bracket	23	G
			CARBURETTER—1$\frac{3}{4}$" AND 2"	25-32	H
			Connecting Shaft	28 & 31	H
			Coupling Shaft	27 & 31	H
			Feed Pipe	28 & 32	H
			Flange Gasket	26 & 32	H
			Flexible Coupling	27 & 31	H
			Flexible Pipe	29 & 32	H
			Float	25 & 30	H
			Float Chambers	25 & 30	H
			Front Carburetter	25 & 30	H
			Gland Spring	25 & 30	H
			Gland Washers	25 & 30	H
			Jet Bearings	25 & 30	H
			Jet and Head	25 & 30	H
			Needle	25 & 30	H
			Needle and Seat... ..	25 & 30	H

INDEX

Description.	Page No.	Plate.
CARBURETTER—1½" AND 2" (continued)		
Oil Damper	25 & 30	H
Overflow Pipes	28	H
Rear Carburetter	25 & 30	H
Sealing Rings	25 & 30	H
Solenoid	26	H
Starting Needle	27	H
Starting Pipe	29	H
Suction Chambers	25 & 30	H
Thermostat Jet	26	H
Throttle Lever	25 & 31	H
Throttle Spindles	25 & 30	H

AIR CLEANERS	33—34	J
----------------------------	--------------	----------

ACCELERATOR CONTROLS (OPEN AND DROP HEAD COUPE)	Page No.	Plate.
Accelerator Pedal	35 & 37	K
Accelerator Pedal Fulcrum Pin	35 & 37	K
Accelerator Pedal Pad	35 & 37	K
Adjustable Bracket	36 & 38	K
Control Rods	35 & 38	K
Intermediate Bracket	37	K
Intermediate Throttle Lever	35 & 37	K
Mounting Bracket	35 & 37	K
Scuttle Bracket	36 & 38	K
Throttle Spindle Support	36 & 38	K

ACCELERATOR CONTROLS (FIXED HEAD COUPE)	Page No.	Plate.
Accelerator Pedal	39 & 42	L
Accelerator Pedal Fulcrum Pin	39 & 42	L
Accelerator Pedal Pad	39 & 42	L
Control Rods	40 & 43	L
Fulcrum Lever	39 & 42	L
Fulcrum Lever Bracket... ..	39 & 42	L
Intermediate Levers	40 & 43	L
Intermediate Shaft	40 & 43	L
Mounting Bracket	39 & 42	L
Push Rod... ..	39 & 42	L
Scuttle Bracket	41 & 43	L
Stop Peg	40 & 43	L
Throttle Spindle Support	41 & 43	L

CLUTCH UNIT	Page No.	Plate.
Clutch Cover Assembly	44	M
Driven Plate	44	M
Pressure Plate	44	M
Release Bearing	44	M
Release Levers	44	M
Thrust Springs	44	M

CLUTCH CONTROLS	Page No.	Plate.
Adjusting Rod	47	N
Adjusting Rod Spring	47	N
Bearing Housing	48	N
Clutch Housing	45	N
Clutch Housing Cover Plate	45	N
Clutch Pedal	46	N
Clutch Pedal Circlip	49	N
Clutch Pedal Felt Seal	49	N
Clutch Pedal Ferrule	49	N
Clutch Pedal Grommet	49	N
Clutch Shaft	47	N
Clutch Shaft Lever	47	N
Draught Excluder	49	N
Gaiter	48	N

Description.	Page No.	Plate.
CLUTCH CONTROLS (continued)		
Operating Fork	46	N
Operating Lever	46	N
Operating Shaft	46	N
Pedal Pad... ..	49	N
Pedal Stem and Plate	48	N
Pedal Stop	45—46	N
Return Spring	49	N
Sealing Ring	47	N
Spherical Bearings	47—48	N
Support Bracket	45	N

GEARBOX ("JL" SERIES)	Page No.	Plate.
Breather Plug	51	P
Casing	50	P
Change-Speed Forks	52	P
Change-Speed Lever	52	P
Change-Speed Lever Bearing	52	P
Change-Speed Lever Knob	52	P
Constant Pinion	53	Q
Constant Pinion Oil Thrower	53	Q
Constant Pinion Bearing (Cage)	53	Q
Constant Pinion Shaft	53	Q
Constant Pinion Shaft Bearing	50	P
Constant Pinion Shims	53	Q
Constant Wheel	54	Q
Countershaft	54	Q
Countershaft Gears	54	Q
Countershaft Needle Rollers	54	Q
Countershaft Thrust Washers	54	Q
Dipstick	51	P
Drain Plug	50	P
Front End Cover	50	P
Front End Cover Oil Seal	50	P
Interlock Balls	52	P
Interlock Roller	52	P
Mainshaft... ..	53	Q
Mainshaft Bearings	50	P
Mainshaft Flange	53	Q
Mainshaft Gears	53	Q
Mainshaft Needle Rollers	53	Q
Mainshaft Operating Sleeve	53	Q
Mainshaft Synchro Shims	53	Q
Mainshaft Synchro Sleeve	53	Q
Mainshaft Synchro Springs	53	Q
Rear End Cover	50	P
Rear End Cover Oil Seal	50	P
Remote Control	51	P
Reverse Gear	54	Q
Reverse Slipper	54	Q
Reverse Spindle	54	Q
Selectors	52	P
Speedometer Driven Gear	51	P
Speedometer Driving Gear	53	Q
Striking Rods	52	P
Top Cover	51	P

GEARBOX ("SL" SERIES)	Page No.	Plate.
Breather Plug	56	PP
Casing	55	PP
Change-Speed Forks	57	PP
Change-Speed Lever	57	PP
Change-Speed Lever Bearing	57	PP
Change-Speed Lever Knob	57	PP
Constant Pinion	58	QQ
Constant Pinion Oil Thrower	58	QQ
Constant Pinion Bearing (Cage)	58	QQ
Constant Pinion Shaft	58	QQ
Constant Pinion Shaft Bearing	55	PP
Countershaft	59	QQ
Countershaft Gear Unit	59	QQ
Countershaft Needle Rollers	59	QQ

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
GEARBOX ("SL" SERIES) (continued)			REAR AXLE 65-68 U		
Countershaft Thrust Washers	59	QQ	Brake Drums	67-68	U
Dipstick	56	PP	Crown Wheel and Pinion	65	U
Drain Plug	55	PP	Crown Wheel Lock Strap	65	U
Front End Cover	55	PP	Differential Adjusting Shims	65	U
Front End Cover Oil Seal	55	PP	Differential Bearing (Diff. Case)	65	U
Interlock Balls	57	PP	Differential Bearing (Inner end of Pinion)	65	U
Interlock Roller	57	PP	Differential Bearing (Outer end of Pinion)	65	U
Mainshaft... ..	58	QQ	Differential Bolts	65	U
Mainshaft Bearings	55	PP	Differential Bolt Lock Straps	65	U
Mainshaft Flange	58	QQ	Differential Case	66	U
Mainshaft Gears	58	QQ	Differential Unit Pinion Mate Gears	66	U
Mainshaft Needle Rollers	58	QQ	Differential Unit Side Gears	66	U
Mainshaft Operating Sleeve	58	QQ	Hub	67	U
Mainshaft Synchro Shims	58	QQ	Hub Bearings	66	U
Mainshaft Synchro Sleeve	58	QQ	Hub Bearing Oil Seal	67	U
Mainshaft Synchro Springs	58	QQ	Hub Bearing Shims	67	U
Rear End Cover	55	PP	Oil Drain Plug	65	U
Rear End Cover Oil Seal	55	PP	Oil Filler Plug	65	U
Remote Control	56		Pinion Companion Flange	66	U
Reverse Gear	59	QQ	Pinion Oil Seal	66	U
Reverse Slipper	59	QQ	Rear Axle Casing	65	U
Reverse Spindle	59	QQ	Rear Axle Shafts	66	U
Selectors	57	PP	Rear Axle Shaft Oil Seal	66	U
Speedometer Driven Gear	56	PP	Rear Axle Shaft Spacer... ..	66	U
Speedometer Driving Gear	58	QQ			
Striking Rods	57	PP			
Top Cover	56	PP			
GEARBOX ("JLE" SERIES) 60-63 R-S			FRONT SUSPENSION 69-73 V-W-X		
Breather Plug	61	R	Anti-Roll Bar	71	X
Casing	60	R	Anti-Roll Bar Anchor Bracket	71	X
Change-Speed Forks	60	R	Anti-Roll Bar Bearing	71	X
Change-Speed Lever	61-62	R	Anti-Roll Bar Buffer	72	X
Change-Speed Lever Bearing	62	R	Ball Joint (Upper)	69	V
Change-Speed Lever Knob	62	R	Ball Pin (Lower)	69	W
Constant Pinion	63	S	Brake-Drum	71	
Constant Pinion Bearing (Cage)	63	S	Front Brake Assembly	71	
Constant Pinion Oil Thrower	63	S	Hub	69	W
Constant Pinion Shaft	63	S	Hub Bearings	69	W
Constant Pinion Shaft Bearing	60	R	Lower Wishbone Levers	70	W
Constant Wheel	63	S	Lower Wishbone Shaft... ..	70	W
Countershaft	63	S	Seal (Lower Wishbone Levers)	70	W
Countershaft Gears	63	S	Seal (Stub Axle Carrier)	69	V
Countershaft Needle Rollers	63	S	Shims (Wheel Camber)	70	W
Countershaft Thrust Washers	63	S	Shims (Wheel Castor)	69	V
Dipstick	61	R	Stub Axle Carrier	69	V
Drain Plug	60	R	Stub Axle Shaft	69	W
Front End Cover	60	R	Stub Axle Shaft Grease Retainer	69	W
Front End Cover Oil Seal	60	R	Steering Arms	69	V
Interlock Balls	61	R	Torsion Bar	72	X
Interlock Roller	61	R	Torsion Bar Adjusting Lever	72-73	X
Mainshaft... ..	62	S	Torsion Bar Flange	72	X
Mainshaft Bearings	60	R	Torsion Bar Trunnion	73	X
Mainshaft Gears	62	S	Upper Wishbone Levers	69	V
Mainshaft Needle Rollers	62	S	Upper Wishbone Shaft... ..	69	V
Mainshaft Operating Sleeve	62	S			
Mainshaft Synchro Shims	62	S	ROAD WHEELS 74-75		
Mainshaft Synchro Sleeve	62	S	Badge for Nave Plate	74	
Mainshaft Synchro Springs	62	S	Balance Weights	75	
Remote Control	61		Inner Tube	74-75	
Reverse Gear	63	S	Nave Plate	74	
Reverse Slipper	63	S	Outer Cover (Tyre)	74-75	
Reverse Spindle	63	S	Rim-Bellishers	75	
Selectors	60	R			
Striking Rods	60	R	FRONT BRAKES 76-77 Y		
Top Cover	61	R	Front Brake Assembly	76	
			Front Brake Backplate	76	Y
			Front Brake Shoes	77	Y
PROPELLER SHAFT 64 T			Front Brake Shoe Springs	76	Y
Journal	64	T	Front Wheel-Cylinder	76	Y
Needle Bearings	64	T	Front Wheel-Cylinder Filler	76	Y
Unit Package	64	T	Front Wheel-Cylinder Gaskets	77	

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
FRONT BRAKES (continued)			STEERING COLUMN... 96-97 AD		
Front Wheel-Cylinder Pipe	76	Y	Horn Contacts	97	AD
Front Wheel-Cylinder Piston	76	Y	Horn Slip Ring	96	AD
Front Wheel-Cylinder Repair Kit	76	Y	Inner Column	96	AD
Front Wheel-Cylinder Seal	76	Y	Lower Column	96	AD
REAR BRAKES 78-80 Z			Steering Wheel	97	AD
Rear Brake Adjuster	78-79	Z	Steering Wheel Locknut	97	AD
Rear Brake Assembly	78	Z	Steering Wheel Split Cone	97	AD
Rear Brake Backplate	78	Z	Upper Column	96	AD
Rear Brake Shoes	80	Z	Upper Column Ball Race	96	AD
Rear Brake Shoe Springs	78	Z	CHASSIS 98-105 AE		
Rear Wheel-Cylinders	79	Z	Bump Stops	102-103	AE
Rear Wheel-Cylinder Gaskets	80	Z	Chassis Frame	98	AE
Rear Wheel-Cylinder Pistons	79	Z	Jack Socket Plug	103	AE
Rear Wheel-Cylinder Repair Kit	79	Z	Radiator Block	99	AE
Rear Wheel-Cylinder Seal	79	Z	Radiator Cowl	101	AE
BRAKE CONTROLS 81-87 AA			Radiator Drain Tap	102	AE
Brake Pedal	81	AA	Radiator Filler Cap	99	AE
Brake Pedal Bearing	81	AA	Radiator Shield	102	AE
Brake Pedal Draught Excluder	82	AA	Radiator Tie Rods	100	AE
Brake Pedal Pad	82	AA	Radiator Water Hoses	101-102	AE
Brake Pedal Return Spring	81	AA	Radiator Water Pipe	101	AE
Brake Pedal Stem and Plate	81-82	AA	Rear Road Spring	104	AE
Compensator	87	AA	Rear Road Spring Bush... ..	104	AE
Compensator Rod	86	AA	Rear Road Spring Gaiters	105	AE
Compensator Rod Spring	86	AA	Rear Road Spring Plate	104	AE
Handbrake Cable	87	AA	Rear Road Spring Shackle	103	AE
Handbrake Cable Bracket	87	AA	Rear Road Spring Taper Wedge	104	AE
Handbrake Lever	85	AA	Rear Road Spring "U" Bolt	104	AE
Handbrake Lever Shaft... ..	85	AA	Shock Absorbers	102-103	AE
Handbrake Lever Link	86	AA	FUEL SYSTEM 106-107 AF		
Hydraulic Supply Pipes... ..	84-85	AA	Fuel Pipes	106-107	AF
Master Cylinder... ..	82-83	AA	Fuel Pump	107	AF
Master Cylinder Banjos	83	AA	Fuel Tank	106	AF
Master Cylinder Boot	83	AA	Fuel Tank Filter	106	AF
Master Cylinder Filler Plug	83	AA	Fuel Tank Mountings	106	AF
Master Cylinder Gaskets	83	AA	EXHAUST SYSTEM (STANDARD		
Master Cylinder Piston	83	AA	MODELS)... .. 108-109 AF		
Master Cylinder Repair Kit	83	AA	Down Pipe	108	AF
Master Cylinder Seals	82-83	AA	Mountings	108-109	AF
Master Cylinder Spring	82	AA	Silencer	108	AF
Master Cylinder Valve	82	AA	Tail Pipe	108	AF
Operating Levers	86	AA	EXHAUST SYSTEM (SPECIAL		
Supply Tank	83	AA	EQUIPMENT MODELS) 110-111 AF		
Supply Tank Mounting Bracket	84	AA	Down Pipes	110	AF
HYDRAULIC BRAKE PIPES 88-91 AB			Mountings	110-111	AF
STEERING UNIT 92-95 AC			Silencers	110	AF
Bellows	92-93	AC	Tail Pipes	111	AF
Inner Ball Joint	94	AC	BODY-OPEN CARS... .. 112-162		
Inner Ball Joint Shims	94	AC	Air Cleaner Cover Plate	120	
Mounting... ..	95	AC	Air Deflector Panel	126	
Mounting Platform	95	AC	Backlight	152	
Mounting Shims... ..	95	AC	Battery Box	122	
Pinion	92-93	AC	Battery Box Doors	122	
Pinion Bearing	92-93	AC	Battery Box Supports	123	
Pinion Housing	93-94	AC	Battery Clamps	123	
Pinion Oil Seal	92-93	AC	Body Mounting	157	
Pinion Oil Seal Retainers	92-93	AC	Body Shell	112	
Rack	92-93	AC			
Rack Friction Plunger	92-93	AC			
Rack Tube	94	AC			
Tie Rods	94	AC			
Tie Rod Ball Joints	94	AC			
Tie Rod Gaiters	94	AC			

INDEX

Description.	Page No.	Plate.	Description.	Page No.	Plate.
BODY—OPEN CARS (continued)			BODY—OPEN CARS (continued)		
Bonnet	126		Side Curtains	153	
Bonnet Badge	129		Side Curtain Fixing Knobs	154	
Bonnet Buffers	128		Side Curtain Satchel	154	
Bonnet Catch	128		Spare Wheel Clamp	143	
Bonnet Catch Hook and Striker	128		Spare Wheel Lid	142—143	
Bonnet Control Cable	128		Spare Wheel Mounting Bracket	143	
Bonnet Hinges	127		Spare Wheel Recess Panel	142	
Bonnet Moulding	127		Special Equipment	157—162	
Bonnet Prop	127		Toggle Clamps	151	
Car Heater	115		Tonneau Casings	141—142	
Car Heater Hoses	115—116		Tonneau Cover	152—153	
Carpets	132		Tonneau Moulding	146	
Carpet Retainers	132		Tonneau Panel	140—141	
Dash	113—114		Tool Clips	156	
Dash Panels	114—115		Wheel Arch	141	
Demister	117		Windscreen Assembly	129	
Demister Hoses	117		Windscreen Centre Pillar	129	
Dipstick Inspection Cover	132		Windscreen Side Pillars	129—130	
Doors	136—137				
Door Casings	139				
Door Hinges	139				
Door Locks	137				
Door Lock Safety Catch	138				
Door Lock Strap	139				
Door Sills	140				
Door Striker	138				
Face Panel—Shut Pillar	113				
Facia Panels	130				
Felts	132				
Floorboards	131				
Front Bumper	124—125				
Front Bumper Over Riders	125				
Front Bumper Supports	124—125				
Front End Assembly	115				
Front Number Plate	155				
Front Wings	118				
Front Wing Diaphragms	120				
Front Wing Supports	118				
Front Wing Tie Bar	119				
Front Wing Valances	119—120				
Front Wing Ventilator	121				
Gearbox Cover	131				
Grab Rail	131				
Hinged Panel	147				
Hood Cloth	152				
Hood Sticks	150—151				
Instrument Board	130				
Interior Trimming	134				
Licence Holder	156				
Luggage Compartment Carpet	133				
Luggage Compartment Lid	143—145				
Luggage Compartment Lid Casing	144—145				
Luggage Compartment Lid Handle	145				
Luggage Compartment Lid Hinges	146				
Luggage Compartment Lid Lock	144				
Luggage Compartment Lid Prop	144—145				
Mats	133				
Petrol Filler Box	147				
Petrol Filler Cap	148				
Petrol Filler Door	147				
Petrol Filler Door Lock	148				
Pin Bead	152				
Plinth Panels	124				
Propeller Shaft Tunnel Cover	136				
Radiator Grille	129				
Rear Bumper	125—126				
Rear Bumper Grommets	126				
Rear Bumper Over Riders	125—126				
Rear Bumper Supports	125				
Rear End Assembly	140				
Rear Number Plate	156				
Rear Wings	148—149				
Rear Wing Cover	150				
Rear Wing Cover Escutcheons	150				
Rear Wing Cover Locks	150				
Rear Wing Steady Bars	149—150				
Seats	135				
Seat Cushions	136				
Scuttle Casings	154—155				
			BODY—DROP HEAD COUPE	163—221	
			Air Cleaner Cover Plate	170	
			Air Deflector Panel	179	
			Ash Tray	184	
			Backlight	214	
			Battery Box	174—175	
			Battery Box Doors	174—175	
			Battery Box Supports	175—176	
			Battery Clamps	176	
			Body Mounting	220—221	
			Body Shell	163	
			Bonnet	179	
			Bonnet Badge	181	
			Bonnet Buffer	180	
			Bonnet Catch	180	
			Bonnet Catch Hook and Striker	181	
			Bonnet Catch Control Cable	181	
			Bonnet Hinge	180	
			Bonnet Moulding	180	
			Bonnet Prop	179	
			Cappings	217	
			Capping Finishers	217—218	
			Car Heater Assembly	172	
			Car Heater Air Ducts	174	
			Car Heater Air Duct Hoses	174	
			Car Heater Demister	173—174	
			Car Heater Demister Escutcheon	174	
			Car Heater Hoses	172—173	
			Car Heater Return Pipes	173	
			Car Heater Rheostat Switch	173	
			Car Heater Sealing Rubbers	172	
			Car Heater Valve	172	
			Car Heater Valve Knob	172	
			Carpets	187	
			Carpet Retainers	187	
			Chrome Beadings	215—216	
			Cubby Box	184	
			Distributor Shield	176	
			Dash	165—166	
			Dash Panels	166—167	
			Dipstick Inspection Cover	187	
			Door	193—194	
			Door Cappings	200	
			Door Casings	196	
			Door Facia	200	
			Door Finger Pull	200	
			Door Glass	197	
			Door Glass Guide	197	
			Door Hinges	194	
			Door Hinge Pivot Pin	194	
			Door Locks	194	
			Door Lock Cover Plate	194	
			Door Lock Escutcheons	195	
			Door Lock Remote Control	195	
			Door Lock Remote Control Knob	195	
			Door Lock Striker	195	
			Door Seals	201—202	

INDEX

Description.	Page No.	Plate.
BODY—DROP HEAD COUPE (continued)		
Door Sills	203	
Door Ventilator... ..	197	
Door Ventilator Frame... ..	198	
Door Ventilator Glass	198	
Door Ventilator Handle	199—200	
Door Ventilator Pivots... ..	199	
Door Ventilator Seal	198	
Drawer	185	
Face Panel—Shut Pillar... ..	164	
Facia Boards	182—183	
Floorboards	185—186	
Front Bumper	177	
Front Bumper Over Riders	177	
Front Bumper Supports	177	
Front End Assembly	167	
Front Number Plate	219	
Front Seats	191—192	
Front Seat Cushions	192	
Front Seat Runners	192	
Front Wing	167	
Front Wing Diaphragms	170	
Front Wing Supports	168	
Front Wing Tie Bar	168	
Front Wing Valance	169	
Front Wing Ventilators	171	
Front Wing Ventilator Adjusting Plates	171	
Front Wing Ventilator Doors	170	
Front Wing Ventilator Gauze... ..	171	
Front Wing Ventilator Hinges	171	
Front Wing Ventilator Seals	171	
Garnish Rail	200	
Gearbox Cover	186—187	
Head Lining	214	
Hinged Panel	209	
Hood Beadings	215—216	
Hood Clamps	216	
Hood Clamp Hooks	216	
Hood Cloth	213	
Hood Sticks	213	
Hood Envelope	216	
Hood Toggle Clamps	214	
Hood Toggle Clamp Hooks	215	
Instrument Board	182—183	
Interior Lamp	214	
Interior Trimming	189	
Licence Holder	220	
Luggage Compartment Lid	205—207	
Luggage Compartment Lid Casing	206—207	
Luggage Compartment Lid Handle	207	
Luggage Compartment Lid Hinges	208	
Luggage Compartment Lid Lock	206	
Luggage Compartment Lid Prop	207	
Mats	188	
Petrol Filler Box	209	
Petrol Filler Cap	210	
Petrol Filler Door	210	
Petrol Filler Hinge	209	
Petrol Filler Lock	210	
Petrol Filler Striker	210	
Plinth Panels	177	
Propellor Shaft Tunnel Cover... ..	193	
Radiator Grille	181	
Rear Bumper	178	
Rear Bumper Grommets	178	
Rear Bumper Over Riders	178	
Rear Bumper Supports... ..	178	
Rear End Assembly	203	
Rear Number Plate	219	
Rear Quarter Casings	191	
Rear Seat Cushions	193	
Rear Seat Squabs	193	
Rear Wings	210—211	
Rear Wing Cover	212	
Rear Wing Cover Escutcheons	213	
Rear Wing Cover Lock	212	
Rear Wing Steady	212	
Screen Rail Facia	184	
Scuttle Casings	189—190	
Spare Wheel Clamp	205	

Description.	Page No.	Plate.
BODY—DROP HEAD COUPE (continued)		
Spare Wheel Lid	205	
Spare Wheel Mounting Bracket	205	
Spare Wheel Recess Panel	204	
Tonneau Moulding	209	
Tonneau Panel	204	
Tool Clips	220	
Wheel Arch	204	
Window Regulator	196	
Window Regulator Handle	196	
Windscreen Aperture Panel	166	
Windscreen Embellishers	181	
Windscreen Glasses	181	
Windscreen Pillar Drip Beads... ..	166	
Windscreen Seal	181	
BODY—FIXED HEAD COUPE222—266		
Air Cleaner Cover Plate	228	
Air Deflector Panel	234	
Ash Tray	239	
Backlight	263	
Backlight Seal	263	
Battery Box	231	
Battery Box Doors	231	
Battery Box Supports	231	
Battery Clamps	232	
Body Mountings... ..	266	
Body Shell	222	
Bonnet	234	
Bonnet Badge	236	
Bonnet Buffer	235	
Bonnet Catch	236	
Bonnet Catch Hook and Striker	236	
Bonnet Catch Control Cable	236	
Bonnet Hinge	235	
Bonnet Moulding	235	
Bonnet Prop	235	
Cappings	253—254	
Car Heater Assembly	229	
Car Heater Air Ducts	230	
Car Heater Duct Hoses	230	
Car Heater Demister	230	
Car Heater Demister Escutcheon	231	
Car Heater Hoses	229—230	
Car Heater Rheostat Switch	230	
Car Heater Sealing Rubbers	229	
Car Heater Valve	229	
Car Heater Valve Knob	229	
Carpets	241	
Cubby Box	238	
Cubby Box Lid	237	
Cubby Box Lock	237	
Dash	224—225	
Dash Panels	225—226	
Dipstick Inspection Cover	240	
Distributor Shield	232	
Door	245—246	
Door Cappings	250	
Door Casings	250	
Door Facia	250	
Door Finger Pull	251	
Door Glass	250	
Door Handles	247	
Door Hinge	246	
Door Hinge Pivot Pin	246	
Door Light	248—249	
Door Lock	246	
Door Lock Operating Lever	246	
Door Lock Remote Control Escutcheons	247	
Door Lock Remote Control Knob	247	
Door Regulator	248	
Door Regulator Handle	248	
Door Seals	252	
Door Sills	255	
Door Ventilator... ..	249	
Door Ventilator Frame	249	
Door Ventilator Glass	249	

INDEX

Description.	Page No.	Plate.
ELECTRICAL EQUIPMENT (continued)		
Luggage Compartment Lamp	273	
Luggage Compartment Lamp Switch	273	
Number Plate Lamp	276	
Number Plate Lamp Bulb	276	
Oil/Temperature Gauge	271	
Panel Harness	280	
Panel Rheostat Switch	270	
Petrol Gauge	271	
Petrol Pump	269	
Petrol Tank Element Unit	272	
Relay for Flasher Lamps	276	
Reverse Lamp	276	
Reverse Lamp Bulb	276	
Reverse Lamp Switch	276	
Rev. Counter and Clock	272	
Rev. Counter Cable	272	
Rubber Boots	282	
Rubber Plugs	282	
Side Lamps	275	
Side Lamp Bulbs	275	
Side Lamp Indicators	275	
Speedometer	271	
Speedometer Cable	271	
Starter	267	
Starter Armature	267	
Starter Brushes	267	
Starter Bushes	267	
Starter Drive	267	
Starter Field-Coil	267	
Starter Pinion and Sleeve	267	
Starter Solenoid Switch	267	
Starter Springs	267	
Starter Switch	270	
Steering Column Control	277	
Suppressors	280	
Tail/Stop Lamps275—276	
Tail/Stop Lamp Bulbs	275	

Description.	Page No.	Plate.
ELECTRICAL EQUIPMENT (continued)		
Tail/Stop Lamp Switch	276	
Thermometer Gauge	271	
Warning Light Bulbs	270	
Windscreen Wiper	278	
Windscreen Wiper Arm	279	
Windscreen Wiper Blade	279	
Windscreen Wiper Casings	278	
Windscreen Wiper Drive	278	
Windscreen Wiper Motor	278	
Windscreen Wiper Rack	278	
Windscreen Wiper Switch	270	
Windscreen Wiper Wheel Box	278	
TOOL KIT	283	
OPTIONAL EXTRAS284—288	
Fog Lamp	287	
Fog Lamp Mountings	288	
Fog Lamp Switch	288	
Hub Disc Removal Tool	287	
Rimbellishers	287	
Road Wheels (Chromium Spokes)	286	
Tyres (Special)	287	
Windscreen Washer	284	
Windscreen Washer Check Valve	286	
Windscreen Washer Control Button	285	
Windscreen Washer Jar	284	
Windscreen Washer Jets	285	
Windscreen Washer Manifold Connection	286	
Windscreen Washer Mounting Bracket	286	
Windscreen Washer Tubes284—285	
Windscreen Washer Tube Connection	285	